GENERALIZED HELICOPTER ROTOR PERFORMANCE PREDICTIONS

James William Loiselle

DUDLEY KNOX LIBRARY
NAVAL POSTGRADUATE

NAVAL POSTGRADUATE SCHOOL
Monterey, California

THESIS

GENERALIZED HELICOPTER ROTOR
PERFORMANCE PREDICTIONS

by

James William Loiselle

September 1977

Thesis Advisor: L.V. Schmidt

Approved for public release; distribution unlimited.

T180052

DUDLI
NAVAI

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE

READ INSTRUCTIONS BEFORE COMPLETING FORM

1. REPORT NUMBER	2. GOVT ACCESSION NO. / 3. RECIPIENT'S CATALOG NUMBER
4. TITLE (and Subtitle): Generalized Helicopter Rotor Performance Predictions	5. TYPE OF REPORT & PERIOD COVERED: Master's Thesis; September 1977
	6. PERFORMING ORG. REPORT NUMBER
7. AUTHOR(s): James William Loiselle	8. CONTRACT OR GRANT NUMBER(s)
9. PERFORMING ORGANIZATION NAME AND ADDRESS: Naval Postgraduate School, Monterey, California 93940	10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS
11. CONTROLLING OFFICE NAME AND ADDRESS: Naval Postgraduate School, Monterey, California 93940	12. REPORT DATE: September 1977
	13. NUMBER OF PAGES: 138
14. MONITORING AGENCY NAME & ADDRESS (if different from Controlling Office)	15. SECURITY CLASS. (of this report): Unclassified
	15a. DECLASSIFICATION/DOWNGRADING SCHEDULE

16. DISTRIBUTION STATEMENT (of this Report)

Approved for public release; distribution unlimited.

17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)

18. SUPPLEMENTARY NOTES

19. KEY WORDS (Continue on reverse side if necessary and identify by block number)

Helicopter
Helicopter Performance
Helicopter Computer Program

20. ABSTRACT (Continue on reverse side if necessary and identify by block number)

The Generalized Rotor Performance (GRP) program is a computer program designed for calculating forward flight performance of a helicopter rotor system at a specific flight condition. It can be used to evaluate either an articulated or a hingeless single rotor system in forward flight or in a wind-tunnel test. The program was

DD FORM 1 JAN 73 1473 EDITION OF 1 NOV 65 IS OBSOLETE
S/N 0102-014-6601 |
(Page 1)

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

(20. ABSTRACT Continued)
originally designed by the Sikorsky Aircraft Company and purchased by the United States Navy.

The goals of this thesis were (1) to reinvestigate the theory and logic used in the program, (2) to add selected desirable features to the program, (3) to produce a much needed Users' Manual, and (4) to run an analysis comparing the program's calculated results against manufacturer's data. These goals were accomplished and the results of the analysis indicated that the program produces highly accurate results within the normal cruise range of a modern helicopter.

Approved for public release; distribution unlimited.

Generalized Helicopter Rotor Performance Predictions

by

James William Loiselle
Lieutenant, United States Navy
B.S., United States Naval Academy, 1971

Submitted in partial fulfillment of the
requirements for the degree of

MASTER OF SCIENCE IN AERONAUTICAL ENGINEERING

from the

NAVAL POSTGRADUATE SCHOOL
September, 1977

Thesis
L79145
c.1

NAVAL POSTGRADUATE SCHOOL

ABSTRACT

The Generalized Rotor Performance (GRP) program is a computer program designed for calculating forward flight performance of a helicopter rotor system at a specific flight condition. It can be used to evaluate either an articulated or a hingeless single rotor system in forward flight or in a wind-tunnel test. The program was originally designed by the Sikorsky Aircraft Company and purchased by the United States Navy.

The goals of this thesis were (1) to reinvestigate the theory and logic used in the program, (2) to add selected desirable features to the program, (3) to produce a much needed Users' Manual, and (4) to run an analysis comparing the program's calculated results against manufacturer's data. These goals were accomplished and the results of the analysis indicated that the program produces highly accurate results within the normal cruise range of a modern helicopter.

TABLE OF CONTENTS

I. INTRODUCTION ---------- 9
II. METHOD OF ANALYSIS ---------- 15
A. GENERAL COMMENTS ---------- 15
B. ANGLE OF ATTACK CALCULATIONS ---------- 18
C. METHOD OF SOLUTION FOR THE FLAPPING EQUATION - 24
D. FORCES, MOMENTS AND RADIAL INTEGRATION ------ 27
E. AZIMUTHAL INTEGRATION METHOD ---------- 27
F. MAJOR ITERATION ---------- 28
G. FLOW CHART ---------- 31
III. GRP USERS' MANUAL ---------- 33
A. MAIN ITERATION OPTIONS ---------- 33
B. GRP DATA DECK ORDER ---------- 36
C. AIRFOIL DATA DECK ORDER ---------- 36
D. SPAR DATA DECK REQUIREMENTS ---------- 41
E. SAMPLE DATA INPUT FORM ---------- 42
F. CASE INPUT LISTINGS ---------- 48
G. CASE INPUT DEFAULT VALUES ---------- 51
H. CASE INPUT DATA ---------- 52
I. CASE INPUT FORMAT ---------- 74
J. CASE OPTIONAL OUTPUT INDICATORS ---------- 75
K. IBM 360 EXECUTION CONTROL CARDS ---------- 77
L. SAMPLE PROGRAM OUTPUT ---------- 79
IV. GRP SAMPLE ANALYSIS ---------- 108
V. CONCLUSIONS ---------- 113
GRP COMPUTER PROGRAM ---------- 114
LIST OF REFERENCES ---------- 137
INITIAL DISTRIBUTION LIST ---------- 138

LIST OF TABLES

TABLE I ROTOR HORSEPOWER WEIGHT = 16359 LBS ---------- 109

TABLE II ROTOR HORSEPOWER WEIGHT = 17321 LBS ---------- 110

TABLE III ROTOR HORSEPOWER WEIGHT = 19246 LBS ---------- 110

TABLE IV ROTOR HORSEPOWER WEIGHT = 19658 LBS ---------- 111

TABLE V ROTOR HORSEPOWER WEIGHT = 20829 LBS ---------- 111

TABLE VI ROTOR HORSEPOWER RATIO COMPARISION ---------- 112

LIST OF FIGURES

FIGURE 1 BLADE ELEMENT DIAGRAM ---------- 16
FIGURE 2 ROTOR BLADE MOMENT DIAGRAM ---------- 16
FIGURE 3 SPANWISE FLOW DIAGRAM ---------- 19
FIGURE 4 UT DIAGRAM ---------- 21
FIGURE 5 UP AND UR DIAGRAM ---------- 22
FIGURE 6 RESULTANT GRP FORCE CALCULATION DIAGRAM ------ 30
FIGURE 7 REQUIRED GRP FORCE DIAGRAM ---------- 30
FIGURE 8 GRP FLOW CHART ---------- 32
FIGURE 9 RESOLUTION OF GRAVITATIONAL FORCE ---------- 60
FIGURE 10 SHAFT AND CONTROL AXIS DIAGRAM ---------- 60
FIGURE 11 TIP SWEEP CALCULATION DIAGRAM ---------- 73

TABLE OF SYMBOLS

CD	Sectional Coefficient of Drag
CL	Sectional Coefficient of Lift
CM	Sectional Coefficient of Moment
U	Resultant of UP, UT and UR velocities
UP	Velocity perpendicular to the plane of rotation
UR	Velocity in radial direction in plane of rotation
UT	Velocity tangential to the plane of rotation
UTUR	Resultant of UT and UR velocities
C.75	Chord at 75 percent blade radius
V	Forward flight velocity, feet per seconds
a	Lift Curve Slope, rad^{-1}
α_s	Shaft axis angle, degrees
β	Blade flapping angle
λ	LAMBDA, Inflow Ratio in shaft axis system
Ω	Blade rotational velocity, radians per second
$\theta_{.75}$	Pitch Angle at the 75 percent radius point at the PSI equal zero azimuthal position
Ψ	PSI, blade azimuthal position
μ	Advance Ratio in the shaft axis reference system $\mu = V\cos\alpha_s / \Omega R$
ρ	Air Density

I. INTRODUCTION

The Generalized Rotor Performance (GRP) program is a computer program designed for calculating forward flight performance of a helicopter rotor system at a specific flight condition. It can be used to evaluate either an articulated or a hingeless single rotor system in forward flight or in a wind-tunnel test. The GRP series of programs were originally designed by the Sikorsky Aircraft Corporation with the cooperation of the United Aircraft Research Laboratories. Work began on this series of programs in 1955 and has continued to date. The United States Navy purchased this program in 1964 and has used it in the Naval Air Systems Command as a helicopter performance computer program.

The goals of this thesis were (1) to reinvestigate the theory and logic used in the program, (2) to ensure that the Navy's version of this program performed the calculations according to the design theory, (3) to produce a much needed Users' Manual, (4) to add certain desirable features to and correct errors found in the program, (5) to run an analysis comparing the program's calculated results against manufacturer's data and (6) to document areas that may need further attention. The work was done with the help and cooperation of both faculty at the Naval Postgraduate School and personnel in the Naval Air System Command.

The output available from the program includes rotor shaft horsepower, rotor profile horsepower, main rotor torque, lift, drag, thrust, H force, rolling and pitching moments and other forces and moments calculated in the shaft, control and relative wind reference axis systems. Also available are the azimuthal histories of the blade's flapping angles, rates and accelerations, plus azimuthal and

radial histories of angles of attack, CL, CD, Mach number, sweep angles and air load distribution. In addition, the program will calculate a Fourier coefficient series for flapping angle, radial station air loads and azimuthal Z force distribution.

The program can be divided figuratively into three main routines. The first routine determines a steady state flapping solution. The second routine determines the forces and moments generated by this flapping solution. The third routine compares the calculated results of lift, drag and other options to those desired by the user. If the calculated values are not within a predetermined tolerance, the program will, by use of a first order Taylor series, generate new values to reenter into the blade flapping routine.

The program uses a combined blade element/momentum strip theory. The blade's radius is divided into a maximum of 15 segments. The blade is advanced around the azimuth in a prescribed number of degrees. At each particular azimuthal position, velocities are computed in the perpendicular (UP), tangential (UT) and radial (UR) directions. From these velocities and a known pitch angle distribution, the local angles of attack are calculated. From these angles of attack, the forces at each radial blade segment are determined. Once the forces are known, the local moments can be found. From the summation of these moments at a particular azimuthal position, the blade flapping acceleration is calculated. This acceleration, combined with the calculated flapping angle and rate, is used to advance the blade to the next azimuthal position. A steady state flapping condition is assumed to exist when the blade flapping angle and rate at the PSI equal zero and 360 degree azimuthal position are within a prescribed tolerance of each other.

This method of calculation accounts for retreating blade stall, the reverse flow region and compressibility effects. The program can accommodate a full range of geometric and design variables including flapping hinge offset, elastic flapping hinge restraint, first and second harmonic cyclic inputs and spanwise variations in blade twist, local mass densities, chord and tip sweep. The program uses no small angle assumptions and has no restrictions on tip speed, forward velocity or advance ratio. The rotor system can be oriented in any direction in space and can be given any rotor shaft or aircraft roll, pitch or yaw angular velocities. The program will perform calculations in straight and level flight or a uniform induced velocity may be added to simulate climbs and descents. The GRP will accept up to five different airfoil data decks plus one blade spar characteristics data deck. Lift and drag information is entered into the program in the form of CL and CD versus Angle of Attack Tables for up to 15 different Mach numbers. The user has a choice of six methods of solution depending upon the desired restrictions. The user has available nine printout options, two of which are program debugging options. There are also error printout messages that will assist the user having difficulty with the program.

In the method described above, the flapping motion determined is about a flapping hinge offset, and with the elimination of all assumptions that the flapping angles are small, the rotor control axis (axis of no feathering) and the tip path plane axis (axis of no first harmonic flapping) are no longer considered convenient for reference in the analysis of rotor blade motion. Therefore, the axis selected for use in the analysis is the rotor shaft axis system. All forces, moments and angles are referred to the shaft axis system with the exception of some of the final output forces which are referred to the relative wind and control axis systems.

With the use of the computer, the GRP program eliminated many of the simpliflying assumpticns of the earlier classical theory originated by Wheatley and Bailey in Ref. 1 and 2. The assumptions of the classical theory did not impose serious limitations in low speed flight, but as helicopter speeds increase, the inaccuracies inherent in the theory seriously limit the usefulness of this method. The assumptions of the Wheatley-Bailey theory which are not present in the GRP program include the following.

1. The flapping and inflow angles are assumed small.
2. The lift and drag coefficients are approximated by a linear and a quadratic variation, respectively, with angle of attack.
3. The effects of Mach number on CL and CD are not considered.
4. Sectional characteristics in the reverse flow region are the same as those in the conventional flow.
5. The sectional characteristics of blade twist, tip sweep, flapping hinge offset and root cut out are ignored.

While the GRP program represents a refined approach to the classical theory, there are still some basic assumptions which make the GRP subject to error. These are:

1. Steady state two-dimensional airfoil data are used.
2. Quasi-static blade analysis is used.
3. The rotational speed about the shaft axis is constant. There is no lead or lag motion in the program.
4. The rotor blade is assumed rigid in bending and torsion.

5. The rotor inflow is assumed uniform unless varied by the user.
6. Spanwise flow is incorporated into the calculation of blade angle of attack; however, it is assumed that the flow at one segment does not affect the flow at any other segment.

It is felt that the errors induced by the above assumptions are relatively small in the normal cruise speed region of a modern helicopter. This is the region from just below the minimum power airspeed to the maximum allowable cruise speed. The program can not calculate rotor hover power. This is because one of the factors in the denominator in the main routine which estimates new flapping routine reentry parameters is the advance ratio. Since the advance ratio is zero in a hover, the computer would attempt to divide here by the number zero. Highly accurate results are not available in the airspeed region from hover to just below the minimum power airspeed while using the normal uniform inflow assumption. This is a region of highly non-uniform flow. Variable inflow may be inputed by the user. However, at this time, no information is available on how successful this technique is in accurately estimating the required rotor system horsepower. While the program's required technique for inducing harmonic variable flow is cumbersome, Bramwell in Chapter Four of Ref. 6 describes several methods which could be incorporated into the program.

The quasi-static blade analysis assumption is valid except in the very high speed region where a large percentage of the retreating blade is in a stalled condition. This is an area of aerodynamic hysteresis that is influenced by unsteady aerodynamics. While encountering lift hysteresis, the amount of lift change above the steady state CL is about the same as below. However, the lift distribution on the rotor disc will change. Stall is delayed and occurs at a slightly later azimuthal station

then predicted by quasi-static analysis. While difficult, complicated and computer-time-consuming procedures can be taken to reduce these assumptions there is no guarantee that the accuracy of the solution will improve. It is felt that the present program produces highly accurate results in the flight range of interest in a modern helicopter.

II. METHOD OF ANALYSIS

A. GENERAL COMMENTS

The GRP uses a combined blade element/momentum strip theory in its calcultions. The blade radius is divided into a maximum of 15 segments or strips. Figure 1 illustrates a typical blade element. In crder to obtain a steady state flapping solution the program must calculate the time history of the flapping motion. This necessitates a complete knowledge of the flapping angles, rates and accelerations. The time history of this motion must be found by solving the highly non-linear equation for the summation of moments about the flapping hinge. Figure 2 illustrates the forces which produce moments on the rotor system. The blade has aercdynamic forces acting upwards, blade weight acting downwards, centrifugal force acting outwards, an optional elastic hinge restraint acting to return the blade to a zero flapping angle and an inertia force resisting any change in blade flapping. The moment summation equation about the flapping hinge may be written as

$$(1) \quad M_{AERO} + M_W + M_I + M_{CF} + M_{EHR} = 0.$$

The moment due to inertia force can be expressed as $I_b\ddot{\beta}$, where I_b is the blade moment of inertia about the flapping hinge. Substituting this into equation 1 and solving for $\ddot{\beta}$, the following governing equation is obtained.

$$(2) \quad \ddot{\beta} = \frac{M_{AERO} + M_W + M_{CF} + M_{EHR}}{I_b}$$

If the angle of attack and local Mach number at each blade segment were known, the CL and CD could be obtained

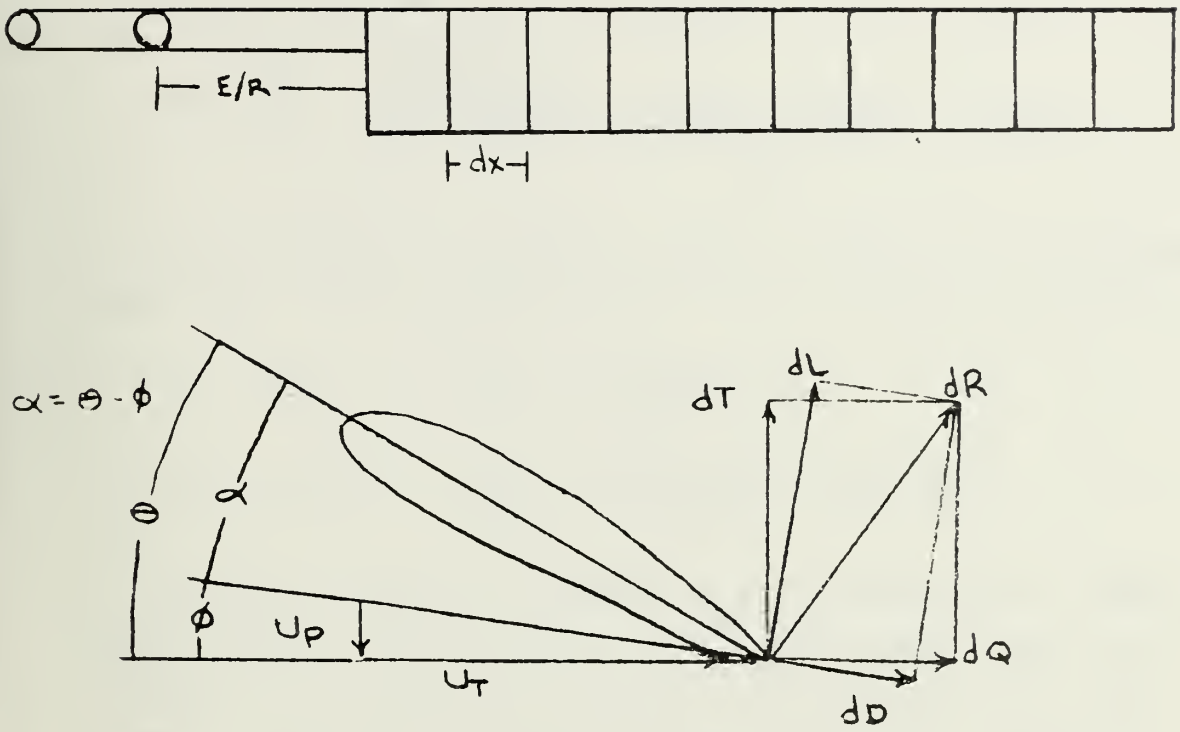

Figure 1 Blade Element Diagram

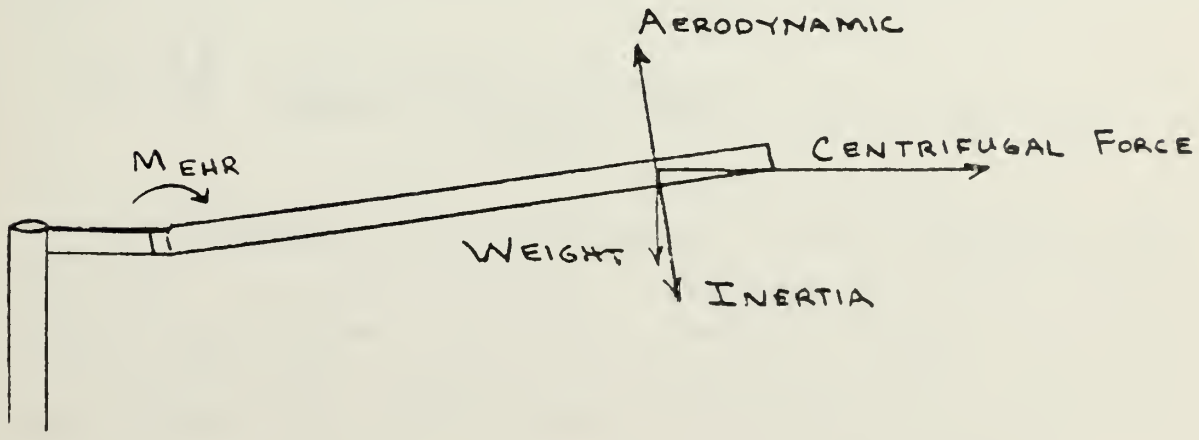

Figure 2 Rotor Blade Moment Diagram

from the inputed airfoil infcrmation. The local aerodynamic forces and moments can be calculated and the flapping acceleration determined. Equation 2 can be rewritten as

$$(3)\quad \ddot{\beta}_n = \sum_{i=1}^{K\ segments} \frac{(dM_{AERO_i} + dM_{W_i} + dM_{CF_i} + dM_{EHR_i})}{I_b}$$

The flapping angle and rate at the (N + 1) azimuthal position could be obtained from the following expressions.

$$(4)\quad \dot{\beta}_{n+1} = \dot{\beta}_n + \ddot{\beta}_n \Delta t$$

$$(5)\quad \beta_{n+1} = \beta_n + \dot{\beta}_n \Delta t + \ddot{\beta}_n \frac{\Delta t^2}{2}$$

However, since the flapping is periodic in nature and has a direct relationship to the azimuthal angle, PSI, the values for flapping are solved with respects tc PSI, vice time. The values of Ω, ψ and time are related by the equation $\Delta\psi = \Omega\Delta t$. Therefore

$$(6)\quad \dot{\beta} = \frac{d\beta}{dt} = \Omega \frac{d\beta}{d\psi} = \Omega \beta^*$$

$$(7)\quad \ddot{\beta} = \frac{d^2\beta}{dt^2} = \Omega^2 \frac{d^2\beta}{d\psi^2} = \Omega^2 \beta^{**}$$

The governing equation for the flapping motion now becomes

$$(8)\quad \beta^{**} = \frac{M_{AERO} + M_W + M_{CF} + M_{EHR}}{I_b \Omega^2}$$

The flapping solution is based on the assumptien that the angle of attack is known. However, it is not and the program must proceed through an iterative process in crder to determine the inflow ratio, collective pitch and cyclic input angles required to generate the desired forces.

B. ANGLE OF ATTACK CALCULATIONS

A very important and basic part of this program is the procedure by which the local angles of attack are calculated. While the program will calculate angle of attack with any angular velocity applied either to the rotor system or the helicopter, the development here will describe level flight only. The classical approach ignores radial flow, UR, and the angle of attack would be obtained as shown in Figure 1. However, as the blade rotates about the shaft, it will encounter a large variation in radial flow. The program attempts to compensate for this radial flow in the following manner. Instead of the inflow angle PHI equalling the arctangent of UP/UT, it is set equal to UP/UTUR where UTUR is the resultant velocity in the tangential and radial direction. This is illustrated in Figure 3. The pitch angle is also reduced by the cosine of the sweep angle. The angle of attack is now calculated in the sweep plane. This three-dimensional angle of attack is lower than the classical two-dimensional angle.

The program enters the CL, CD tables with this sweep plane angle of attack and the sweep plane resultant Mach number. The program computes the forces using the velocites in the sweep plane, UP and UTUR, and the blade chord geometry in the normal plane. Once the forces are computed in the sweep plane they are resolved into their respective directional forces.

This three-dimensional angle of attack, due to sweep, will delay stall on the rotor by reducing the angle of attack. This describes what actually occurs on the blade. However, it is felt by previous personnel using the program that there is a point where the sweep becomes so large that it tends to wash out the lift being produced. The program has been modified to reduce CL by one half for sweep angles between 60 to 72.5 degrees and reduce CL to zero for sweep angles between 72.5 and 90 degrees. These high sweep angles occur normally only on the inboard blade segments of the

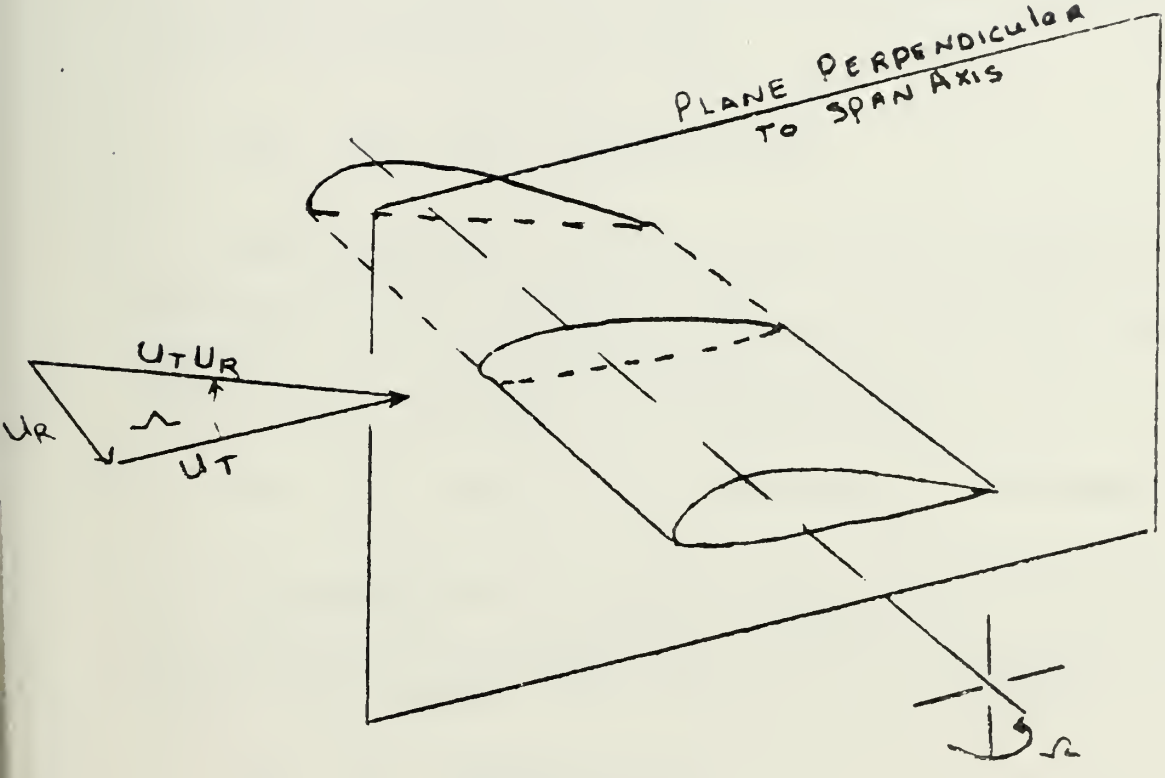

Figure 3 Spanwise Flow Diagram

retreating blade in and near the reverse flow region.

UP, UT, UR and pitch angle for level flight are shown in Figures 4 and 5. They are calculated in the following manner. The radial velocity, UR, is calculated as

$$(9) \quad UR = (V\cos\alpha_s)\cos\Psi\cos\beta$$

The tangential velocity, UT, has two components. The first is the local rotational velocity, Ωr, the second is a sinusodial component of the forward flight velocity. The general expression for UT is

$$(10) \quad UT = \Omega r + (V\cos\alpha_s)\sin\Psi$$

This expression contains a small angle assumption in the term Ωr for blade flapping angle. The program acccunts for the fact that the flapping angle does reduce the true radius slightly by using the following formula

$$(11) \quad UT = (E/R + (r - E/R)\cos\beta)\Omega + (V\cos\alpha_s)\sin\Psi$$

The perpendicular velocity, UP, consists of three terms, the inflow ratio, a flapping velocity and a small component of forward velocity. The inflow ratio is defined as

$$(12) \quad \lambda = \frac{V\sin\alpha_s - v}{R}$$

The second component is a verical flapping velocity which is a function of flapping rate and radius. This is computed as

$$(13) \quad UP(2) = (r - E/R)\dot{\beta}$$

The third component is due to the fact that there is a small component of the radial flow which acts in the UP direction due to blade flap angle. This is equal to

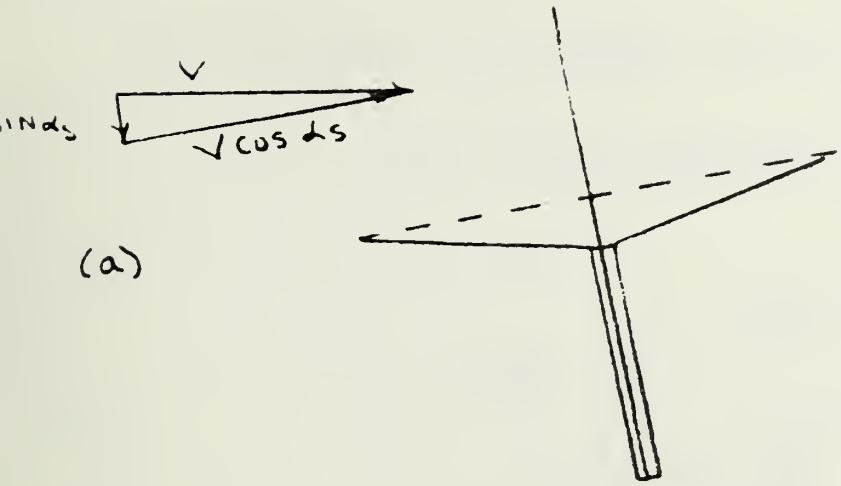

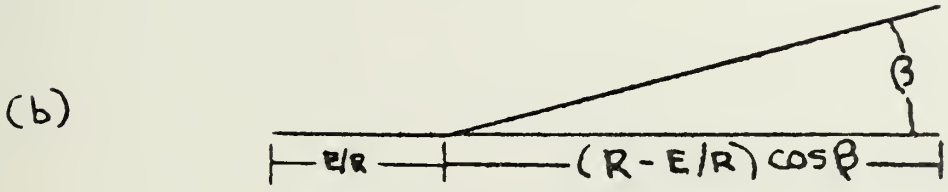

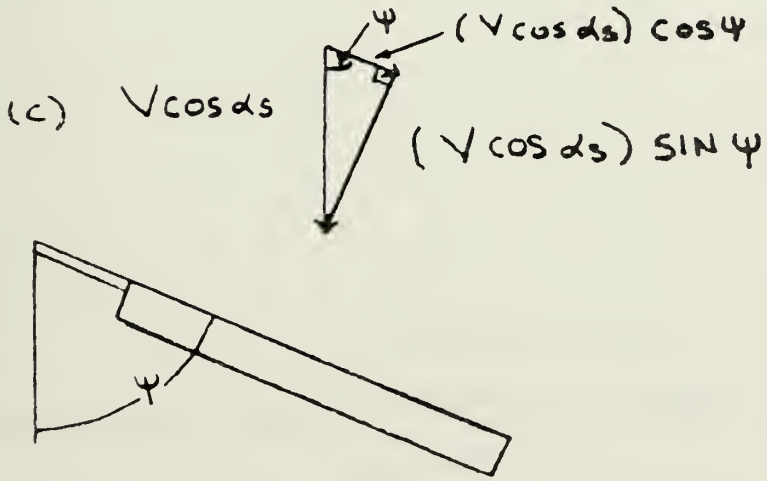

$$UT = (E/R + (r - E/R)\cos\beta)\Omega + (V\cos\alpha_s)\sin\Psi$$

Figure 4 UT Diagram

$$UP = \lambda\Omega R\cos\beta + (r - E/R)\dot{\beta} + (V\cos\alpha_s)\cos\psi\sin\beta$$

$$UR = (V\cos\alpha_s)\cos\psi\cos\beta$$

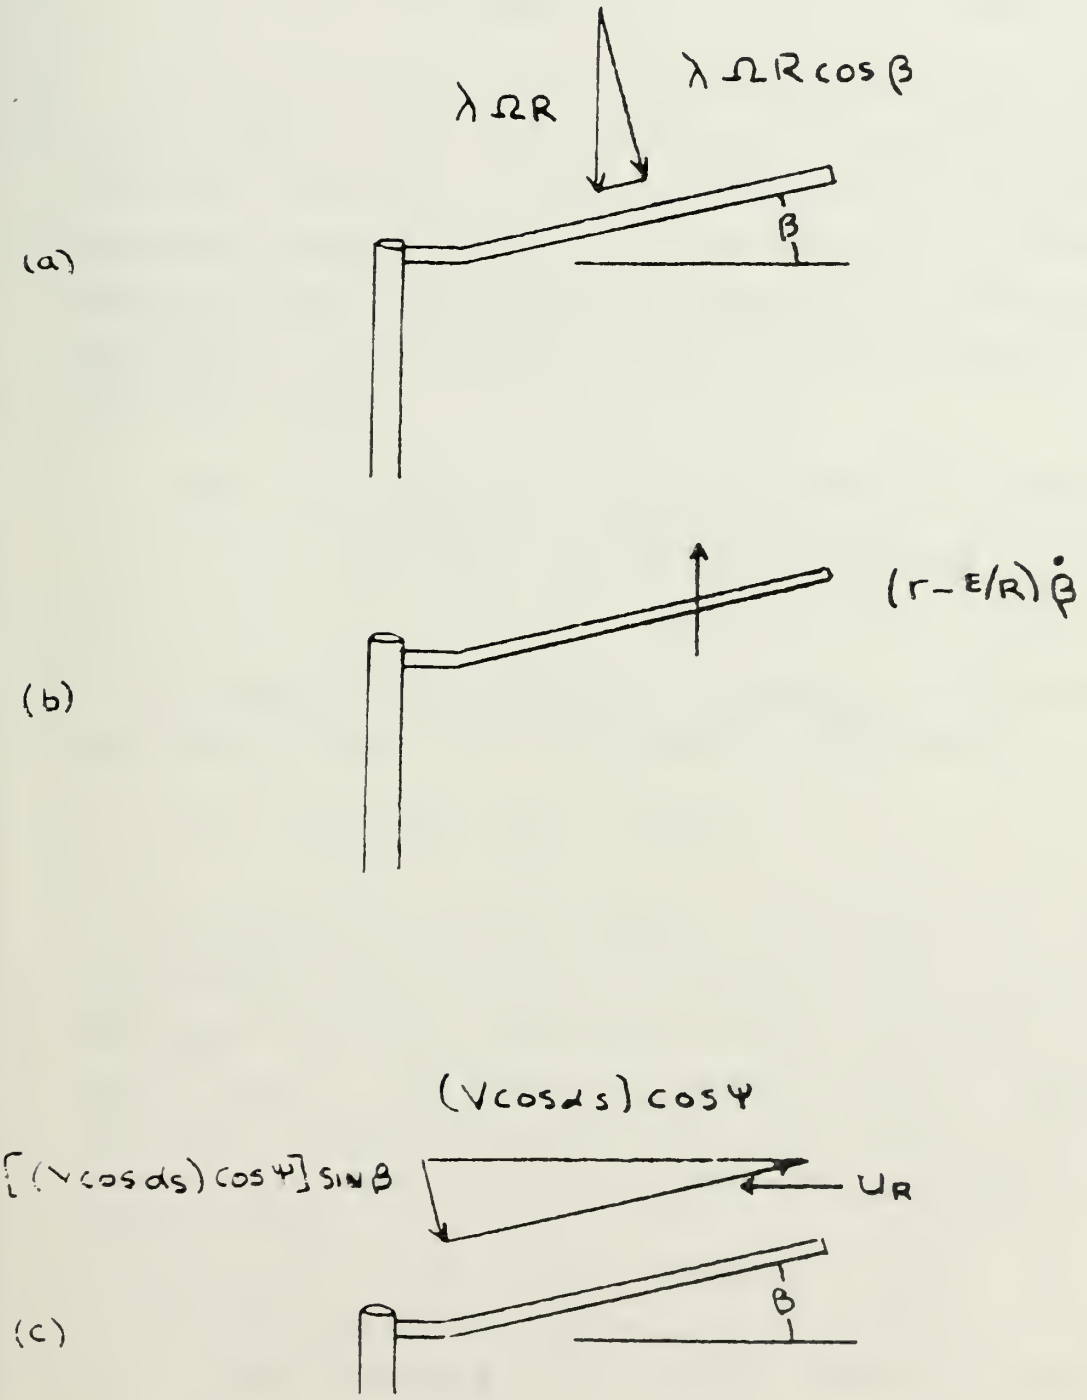

Figure 5 UP and UR Diagram

(14) $UP(3) = (V\cos\alpha_s)\cos\Psi \sin\beta$

The total formula for UP is

(15) $UP = \lambda\Omega R\cos\beta + (r - E/R)\dot{\beta} + (V\cos\alpha_s)\cos\Psi\sin\beta$

The pitch angle (θ) is expressed in equation 16. $\theta.75$ is the pitch angle at the 75 percent radius position, θ' is the twist depending on the relationship of the location of the blade segment to the r = .75R location. The next four terms are the first and second harmonics of cyclic pitch and $(\tan\delta_3)\beta$ is the coupled effect of the flapping angle on the pitch angle.

(16) $\theta = (\theta_{.75} + \theta' - A1S\cos\Psi - B1S\sin\Psi - A2S\cos2\Psi$
$- B2S\sin2\Psi - \tan(\delta_3)\beta)\cos\Lambda_{sweep}$

The local Mach number is calculated as U/a where a is the speed of sound and U is given in equation 17.

(17) $U = (UP^2 + UT^2 + UR^2)^{1/2}$

The angle of attack can now be calculated. Figure 1 illustrates that $\alpha = \Theta - \phi$. Initially, the program requires estimated values for the inflow ratio, collective pitch at the PSI equal zero position, harmonic cyclic inputs, blade twist and initial flapping angle and rate. The user can either input these values or accept the program's automatic default values of -.02, 5, -1.2, 7.53, 0, 0 and 0 respectively. Using these assummed values, the initial angle of attack can be determined as fcllows.

$UP = \lambda\Omega R\cos\beta + (r - E/R)\dot{\beta} + (V\cos\alpha_s)\cos\Psi\sin\beta$

reduces to

$UP = \lambda\Omega R$

$$UT = (E/R + (r - E/R)\cos\beta)\Omega + (V\cos\alpha_s)\sin\Psi$$

reduces to

$$UT = (E/R + (r - E/R))\Omega$$

$$UR = (V\cos\alpha_s)\cos\Psi\cos\beta$$

reduces to

$$UR = V\cos\alpha_s$$

In the program $V\cos\alpha_s$ is replaced by the term $\mu\Omega R$ where μ is the advance ratio in the shaft axis system. Since the local pitch distribution and inflow ratio are estimated, the local angles of attack can be determined. The next section describes the method used for calculating flapping angle and rates at the N + 1 azimuthal position.

C. METHOD OF SOLUTION FOR THE FLAPPING EQUATION

In the preceding section, equation 8 was developed in order to calculate the time history of the flapping motion.

$$(8) \qquad \ddot{\beta} = \frac{M_{AERO} + M_W + M_{CF} + M_{EHR}}{I_b \Omega^2}$$

The relation involves a complicated second order differential equation for establishing the flapping angle as a function of PSI. The numberical solution is accomplished by use of a finite difference equation and a step-by-step procedure. An important characteristic of the solution is that it is periodic in nature. The function which represents a steady state flapping solution has the property $\beta(\Psi) = \beta(\Psi + 2\pi)$. Using this fact, a Fourier harmonic series can be written to describe the blade flapping motion.

$$(18) \qquad \beta = A0 - A1\cos\Psi - B1\sin\Psi - A2\cos 2\Psi - B2\sin 2\Psi - A3\cos 3\Psi - B3\sin 3\Psi \ldots.$$

By assuming that the first harmonic flapping is much larger

than the other higher harmonics, the series can be reduced to

(19) $\beta = A0 - A1\cos\Psi - B1\sin\Psi$

This equation can be differentiated with respect to PSI to obtain

(20) $\dot{\beta} = A1\sin\Psi - B1\cos\Psi$

(21) $\ddot{\beta} = A1\cos\Psi - B1\sin\Psi$

Assuming that the values of β, $\dot{\beta}$ and $\ddot{\beta}$ are known at some azimuthal position, the following equations must hold

(22) $\beta_n = A0 - A1\cos\Psi - B1\sin\Psi$

(23) $\dot{\beta}_n = A1\sin\Psi - B1\cos\Psi$

(24) $\ddot{\beta}_n = A1\cos\Psi + B1\sin\Psi$

These equations can be solved for the N + 1 azimuthal position by substituting $\Psi_{n+1} = \Psi_n + \Delta\Psi$ into the above formulas. The flapping angle equation becomes

(25) $\beta_{n+1} = A0 - A1\cos(\Psi_n + \Delta\Psi) - B1\sin(\Psi_n + \Delta\Psi)$

By using the following two identities equation (25) can be rewritten as equation (28).

(26) $\cos(\Psi_n + \Delta\Psi) = \cos\Psi_n\cos\Delta\Psi - \sin\Psi_n\sin\Delta\Psi$

(27) $\sin(\Psi_n + \Delta\Psi) = \sin\Psi_n\cos\Delta\Psi + \cos\Psi_n\sin\Delta\Psi$

(28) $\beta_{n+1} = A0 - A1(\cos\Psi_n\cos\Delta\Psi - \sin\Psi_n\sin\Delta\Psi)$
$- B1(\sin\Psi_n\cos\Delta\Psi - \cos\Psi_n\sin\Delta\Psi)$

The terms can be rearranged into equation 29. The same procedure can be used to develop equation 30 for $\dot{\beta}$.

(29) $\beta_{n+1} = A0 - \cos\Delta\Psi(A1\cos\Psi_n + B1\sin\Psi_n)$
$+ \sin\Delta\Psi(A1\sin\Psi_n - B1\cos\Psi_n)$

(30) $\dot{\beta}_{n+1} = \cos\Delta\Psi(A1\sin\Psi_n - B1\cos\Psi_n)$
$+ \sin\Delta\Psi(A1\cos\Psi_n + B1\sin\Psi_n)$

Substitution into equations 22, 23 and 24 reduces these two

expressions to the flapping equations used in the program. The user can either enter the value for $\Delta\Psi$ or accept the programs automatic default value of 15 degrees.

$$(31)\quad \overset{*}{\beta}_{n+1} = \overset{*}{\beta}_n \cos\Delta\Psi + \overset{**}{\beta}_n \sin\Delta\Psi$$

$$(32)\quad \beta_{n+1} = \beta_n + \overset{*}{\beta}_n \sin\Delta\Psi + (1-\cos\Delta\Psi)\overset{**}{\beta}_n$$

While this integration scheme is not one of the standard methods used, it is very useful in obtaining periodic solutions for differential equations similar to the one used here. Notice that for small values of $\Delta\Psi$ the trignometric expression can be reduced to an ordinary Taylor series. By assuming $\sin\Delta\Psi$ equals $\Delta\Psi$ and $\cos\Delta\Psi$ equals one equation 29 reduces to

$$(33)\quad \overset{*}{\beta}_{n+1} = \overset{*}{\beta}_n + \Delta\Psi\overset{**}{\beta}_n$$

By assuming $\sin\Delta\Psi$ equals $\Delta\Psi$ and $\cos\Delta\Psi$ equals the first two terms of the cosine series $1 - \frac{\Delta\Psi^2}{2}$ equation 32 can be reduced to

$$(34)\quad \beta_{n+1} = \beta_n + \Delta\Psi\overset{*}{\beta}_n + \tfrac{1}{2}(\Delta\Psi)^2\overset{**}{\beta}_n$$

D. FORCES, MOMENTS AND RADIAL INTEGRATION

The forces acting on a rotor blade may be found by the summation of the elementry forces along the span at any azimuthal position. The forces considered by the program are the resulting aerodynamic forces only, and are initially summed in the shaft reference axis system. The program computes forces in three axis systems. They are the (1) shaft, (2) control and (3) relative wind axis systems.

The program radially integrates differently for lift and drag calculations. The drag is calculated from the hinge offset, E/R, to the rotor tip. The lift is calculated from

the hinge offset to the next to last rotor blade segment. The last segment is considered a blade "Tip Loss Factor" segment. It is assumed that the tip trailing edge vortices cause no lift to be produced in this segment. The normal procedure is to define this segment as the last three percent of the rotor blade radius.

The first of the maximum 15 blade segments is considered the spar or cut out segment. This is defined as the area between the hinge offset and the point where the airfoil actually begins. If no spar data are entered, it is asssumed that this first segment produces no lift and drag is obtained by using the CD verse Alpha Tables for the first blade airfoil data deck entered. If spar data are entered, the first segment and all other segments designated spar segments will have the lift and drag characteristics of the entered spar data.

E. AZIMUTHAL INTEGRATION METHOD

Once the integration of the rotor forces and moments along the blade is complete, an integration around the azimuth must be performed in order to obtain the average forces and moments. Since the solution of the flapping equation is obtained by a step-by-step method, the integrands of the integrals over Ψ are known only at a certain number of equally spaced points around the azimuth. For equilibrium flapping the integral is a periodic function of Ψ, and for this case integration can be shown to be equivalent to an averaging process. This result makes the azimuthal integration simple. The following method is used where N is the number of azimuthal positions used in the calculations and b is the number of blades.

$$(35)\quad \frac{b}{2\pi}\int_0^{2\pi}\int_0^{R} F(x,\Psi)\,dx\,d\Psi = \frac{b}{N}\sum_{i=1}^{N}\sum_{j=1}^{K} dF(\Psi_{ij})$$

F. MAJOR ITERATION

Once the program has calculated a steady state flapping solution and has determined the resulting forces and moments, a question remains to be answered. Is this the desired solution and, if not, what must be done to obtain this sclution? In order to solve the flapping equations certain known or assumed values were used, including inflow ratio (λ), collective pitch ($\theta.75$) and the cyclic pitch (A1S, B1S, A2S and B2S). One method, first described in Ref. 3, is to iterate on the required lift and drag thrcugh modification of λ and $\theta.75$, where $\theta.75$ is the pitch angle at the 75 percent radius station at the PSI equal zero azimuthal position. The modified values are then reentered into the flapping routine and the calculation is repeated until it converges to within a specified tolerance on the required lift and drag. Drag is used here in the sense of negative rotor propulsive force. The program procedure is outlined below.

The required rotor lift and propulsive force are expressed in terms of the magnitude and direction of the resultant force in the longitudinal plane. These are shown in Figure 6 where it can be seen that

$$a'' = \alpha_s + a' \tag{36}$$

$$R_\ell = \left((F_{z_s})^2 + (F_{x_s})^2 \right)^{1/2} \tag{37}$$

$$L = R_\ell \cos(a'') \qquad D = R_\ell \sin(a'') \tag{38}$$

The required lift and propulsive force and their resultant are shown in Figure 7. In a similar way,

$$R = \left(L_R^2 + D_R^2 \right)^{1/2} \tag{39}$$

$$a'' = \arctan (D_R / L_R) \tag{40}$$

The differences between the required and the computed R_ℓ and a" values are defined as

$$(41)\quad \Delta R_\ell = R_{\ell_R} - R_\ell$$

$$(42)\quad \Delta a'' = a''_R - a''$$

In order to correct λ and $\theta.75$ to compensate for the difference between (R_{ℓ_R}, a''_R) and (R_ℓ, a''), the required values are expanded in a Taylor series with λ and $\theta.75$ as variables. The first order equations are:

$$(43)\quad R_{\ell_R} = R_\ell + \frac{\partial R_\ell}{\partial \lambda}\Delta\lambda + \frac{\partial R_\ell}{\partial \theta_{.75}}\Delta\theta_{.75}$$

$$(44)\quad a''_R = a'' + \frac{\partial a''}{\partial \lambda}\Delta\lambda + \frac{\partial a''}{\partial \theta_{.75}}\Delta\theta_{.75}$$

Solving the equations for the iteration on λ and $\theta.75$ yields

$$(45)\quad \Delta\lambda = \frac{\frac{\partial a''}{\partial \theta_{.75}}\Delta R_\ell - \frac{\partial R_\ell}{\partial \theta_{.75}}\Delta a''}{\frac{\partial R_\ell}{\partial \lambda}\frac{\partial a''}{\partial \theta_{.75}} - \frac{\partial R_\ell}{\partial \theta_{.75}}\frac{\partial a''}{\partial \lambda}}$$

$$(46)\quad \Delta\theta_{.75} = \frac{\frac{\partial R_\ell}{\partial \lambda}\Delta a'' - \frac{\partial a''}{\partial \lambda}\Delta R}{\frac{\partial R_\ell}{\partial \lambda}\frac{\partial a''}{\partial \theta_{.75}} - \frac{\partial R_\ell}{\partial \theta_{.75}}\frac{\partial a''}{\partial \lambda}}$$

Now that R_{ℓ_R}, R_ℓ and a''_R and a" are known, the corrected values of λ and $\theta.75$ can be approximated by:

$$(47)\quad \lambda_N = \lambda + \Delta\lambda \qquad \theta_{.75_N} = \theta_{.75} + \Delta\theta_{.75}$$

In order to solve equations 45 and 46, the values of the partial derivatives in these equations must be found. The

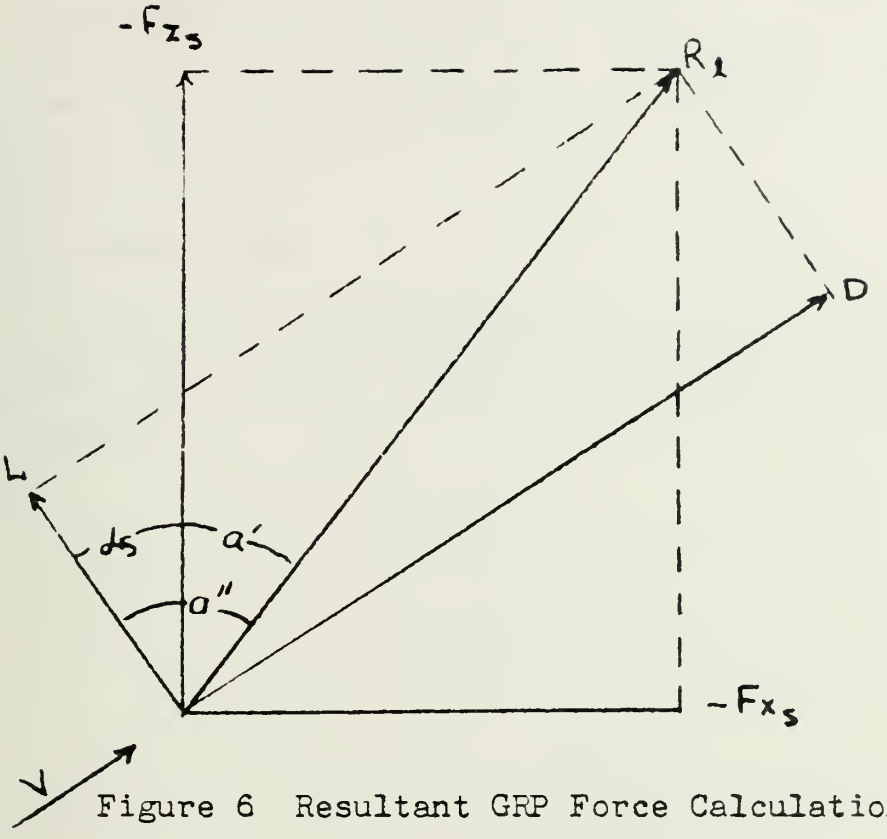

Figure 6 Resultant GRP Force Calculation Diagram

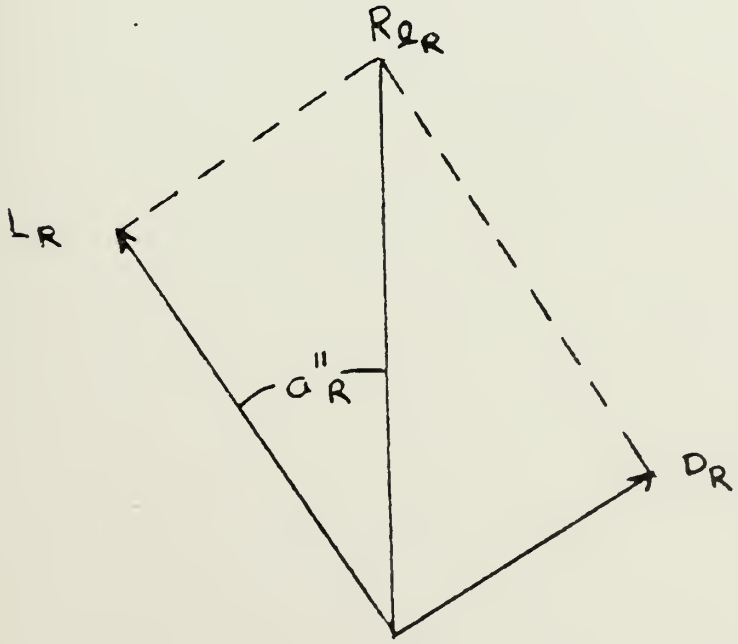

Figure 7 Required GRP Force Diagram

procedure used in based on the Wheatley-Bailey method and the formulas can be found on pages 186 and 207 of Ref. 4. Reference 5 outlines the derivation and a complete derivation was performed and verified in conjunction with this thesis.

G. FLOW CHART

The flow chart in Figure 8 is a block diagram showing the relationship between the various parts of the GRP program.

GRP FLOW CHART

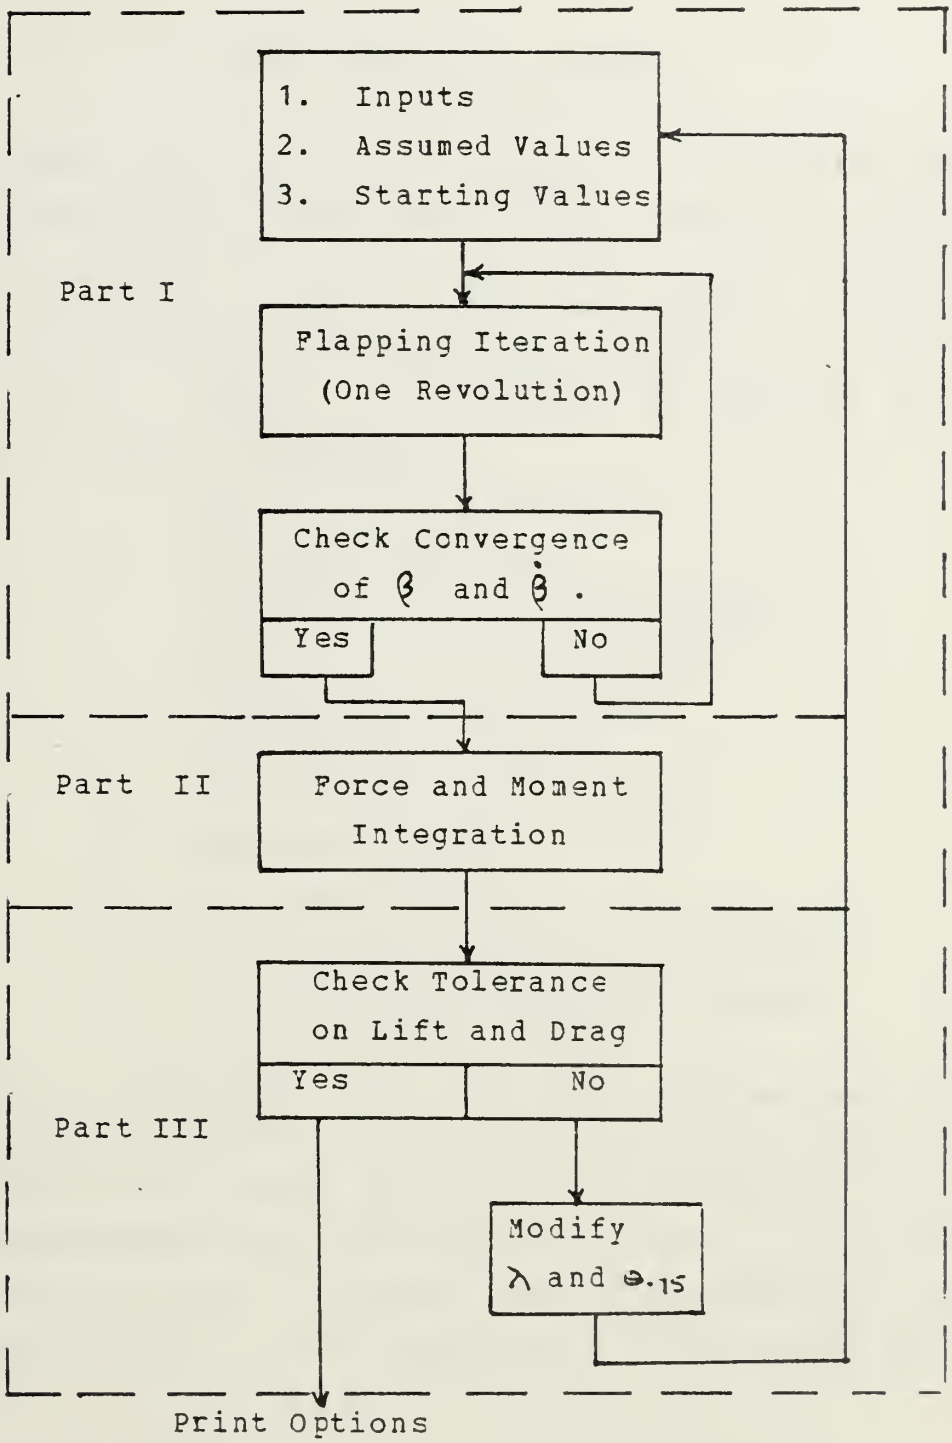

Figure 8

III. GRP USERS' MANUAL

The GRP currently has the capability to enter over 200 individual case variables and option selectors. Presently, 170 are available to the users. This manual explains the input and output format of this GRP program. Examples of both input and output are given in order to make the use of this program easier. This manual is divided into the following areas of discussion.

A. Main Iteration Options
B. GRP Data Deck Order
C. Airfoil Data Deck Requirements
D. Spar Data Deck Requirements
E. Sample Data Input Format
F. Case Input Listings
G. Case Input Default Values
H. Case Input Data
I. Case Input Format
J. Case Optional Output Indicators
K. IBM 360 Execution Control Cards
L. Sample Program Output

It is recommended that the user examine the GRP Case Input listing carefully, since a few options require certain variables to be inputed which are not necessarily located in the same general area of the input listings. An attempt has been made to list all input variables concerned with the different options in the discussion of each option and input variable.

A. MAIN ITERATION OPTIONS

The GRP offers the user six different options for determining a solution. They are as follows.

1. Normal Routine

In the normal solution to the problem the computer will vary the inflow ratio, LAMBDA, and the pitch angle, θ.75, in order to produce the required lift and drag. The cyclic inputs, A1S and B1S, are considered constants. Uniform inflow is assumed unless the user induces a non-uniform inflow by the use of variables 117 and 118, LAML and UVL. The program will calculate the required shaft axis angle and position of the control axis from the fixed value of B1S. In all of the options, the user has a choice of using either a program calculated first estimate of flapping angle, velocity and acceleration or an initial value of zero for all of the above. Either method usually requires the same approximate amount of computer time. The variable PCNV, item 97, determines the method to be used.

2. Desired Flapping Angles

This option allows the user to specify the desired longitundinal and lateral flapping angles with respect to the rotor shaft axis. The program at each intermedient force iteration will vary A1S, B1S, inflow ratio and pitch angle. Variables 100 and 112, 113 and 114 control the use of this option.

3. Short Iteration Scheme

This option follows the normal routine with one major exception. The program will make only one pass through the flapping routine on each major iteration. The program may or may not arrive at a steady state solution for flapping in the first few iterations. It is assumed that the first few iterations in the normal routine are only rough estimates of the way the variables should be changed and that an exact flapping solution is not actually required if the user is only interested in transient flapping

behavior. In order to use this routine, the user must input a negative number for the variable XITLIM, item 73. The absolute value of XITLIM will still determine the maximum allowable number of times the program will enter the major iteration routine.

4. Trimmed Moments

This option will follow the Normal method described in paragraph one. The Normal method will only converge on lift and drag and will not consider the moments produced. If the variable TRIM, item 160, were assigned a non-zero value, the program would attempt to trim out the pitching and rolling moments about the rotor shaft. It is suggested that this be done in a two case run. The first case should be a normal run, with the desired printout. Then, for the second case, input the variable TRIM. This will do two things. First, it will provide a converged solution without consideration of moments. Secondly, it will allow the full number of iterations to be used to reduce the moments. The program does this by a short routine varying A1S and B1S. During this process, the whole flapping and force iterations must be repeated, but it will at least start by using a converged solution. The variable PCNV, item 97, should be non-zero to allow the flapping solution from the previous case to be used as a first estimate in this case. Setting the variable SKIPIN, item 91, equal to zero will allow a force and moment summation to be outputed for each major iteration. This will allow the user to see exactly how the program is proceeding.

5. TOP Option

In this option, the program iterates upon the required lift but ignores any values inputed for required drag. This option can be used to simulate a wind-tunnel test. The user must input the shaft angle, item 111, and

the pitch angle, item 87. These two inputs will be held constant. The program will iterate on the inflow ratio, LAMBDA, in order to obtain a solution. The variable TOP, item 96, controls the use of this option.

6. ALOPT Option

This option, like TOP, is a wind tunnel option. It also iterates on required lift only. However, here the shaft angle, item 111, and the inflow ratio, item 88, are required inputs and are held as constants. The program will iterate on the pitch angle, item 87, in order to determine a solution. The variable ALOPT, item 110, controls the use of this option.

B. GRP DATA DECK ORDER

Data is entered into this program in the following order.

1. Airfoil Lift Coefficient Table
2. Airfoil Drag Coefficient Table
   (Repeat steps one and two as necessary.)
3. Case Input Data
4. Harmonics of the Inflow Ratio **
5. Spar Lift Coefficient Table **
6. Spar Drag Coefficient Table **

** Optional Data

C. AIRFOIL BLADE DECK REQUIREMENTS

The GRP program requires that all CL and CD information be entered into the program in tabular form. Tables for up to 15 different Mach numbers and five different airfoils can be entered. The program currently does not use or require values for the Coefficient of Moment, CM. Since certain segments of the retreating blade are in the reverse flow region, angle of attack tables are required to include

valued from -180 degrees to +180 degrees. If they are not included, an error message will be printed when the program can not locate a value for CL and CD at these large positive and negative angles of attack. If complete angle of attack information is not available for a particular airfoil, the user can use the values provided in Section E. It is realized that available data on airfoil behavior at large angles of attack are very limited, but so is the region on the rotor disc where the blade operates at these high angles. Since this occurs only immediately around and within the reverse flow region where dynamic pressure is low, little precision is lost in performance calculation by using one common representation for most airfoil behavior.

As a minimum, two values for CL and CD at two different angles of attack and Mach numbers must be supplied. As a maximum, 15 different values of Mach number may be entered. Each Mach number may contain up to 48 different values of CL and 48 different values of CD and their associated angles of attack.

The first Mach number must be equal to zero. This table can be an exact duplicate of the lowest Mach number table the user has available. The highest Mach number table should be high enough in order to prevent the program from stopping because of a local Mach number higher than that in the table. A quick check can be obtained by adding together the rotor tip velocity and the forward flight speed. This combined velocity, divided by the local speed of sound, must be less than the maximum Mach number entered into the program. The program linearly interpolates between Mach numbers and angles of attack in order to determine the value of CL and CD. The subroutine BLIN4 does the interpolation.

Several options are available to help reduce the number of data points that must be entered. If the airfoil is symmetrical, the user only needs to enter values for positive angles of attack. The program will assign the

appropiate sign to the value of CL and CD according to the sign of the angle of attack. This is accomplished by case input variable 107, SYM. This option can also be used for a cambered airfoil where values of CL and CD at negative angles of attack are unknown.

Values for large angles of attack need not be entered for each Mach number by making use of the program's input variables 156 and 157, or their automatic default values. Values for large positive and negative angles of attack need only be entered for the two lowest Mach number tables. The lowest Mach number table must be at a Mach number equal to zero. If an angle of attack is greater than variable 156 (HIALFA) or lower than variable 157 (LOALFA), or the programs default values of plus and minus 30 degrees, the Mach number is set equal to zero. This ensures that only the first two Mach numbers have to carry the whole range of angles of attack from -180 to +180 degrees for a cambered airfoil or from zero to +180 degrees for a symmetrical airfoil.

The format of the table input will now be described. The first data card contains the variable WBLADE. This controls whether or not the user receives an echo printout of the Blade Airfoil Data being entered. If the value of WBLADE is equal to zero, the user will not receive an echo printout of the Blade Data. If WBLADE is a non-zero number, the user will receive the echo printout. The read format for WBLADE is F10.0. WBLADE is the only item on the first data card.

The next card also contains only one piece of data, NBLADE. NBLADE is the number of different airfoil data sets to be used and appears on this card in an I2 format. This program will accept up to five different blade airfoil data sets. It will also accept one blade spar data set. If the rotor blade being analyzed were composed of three different types of airfoils, NBLADE would equal three. However, if

the blade consisted of three sections, of which the first and third section were the same, NBLADE would equal two. It is explained later how the blade segments are assigned their respective airfoil type. This arrangement provides the user with the ability to vary the make-up of the blade while only having to enter into the program once a particular set of airfoil data.

The above two variables, WBLADE and NBLADE, are only entered once for each complete computer run which uses the same set of airfoil data. The following information will be entered twice for each type of airfoil used. It will be entered first for CL and secondly for CD for each type airfoil. The overall format is summarized below.

Card 1	WBLADE
Card 2	NBLADE
Card 3-	CL's for airfoil number one
	CD's for airfoil number one
	CL's for airfoil number two
	CD's for airfoil number two
	Repeat as necessary.

Card number three contains the variable NZ, which is the number of Mach numbers for which CL's will be entered for the first airfoil. This number must be right justified in I2 format. The maximum number of Mach numbers for each CL and CD for one airfoil is 15. This is the only number entered on this card.

Card number four begins the actual Mach number, CL versus angle of attack tables. The format in this paragraph must be repeated for each Mach number. This first card is divided into 11 fields (I2, 10F7.0). The first field is a two-digit, right-justified integer in I2 format. It is equal to twice the number of data pairs for this Mach number plus two. This tells the computer how many numbers are required to be entered for this particular Mach number. A data pair consist of one angle of attack and its associated

CL or CD. The remaining ten fields are each seven columns long in floating point or F7.0 format. These fields begin in columns 3, 10, 17, 24, 31, 38, 45, 52, 59, and 66. On this first card, the field that starts in column three contains the number of data pairs at this Mach number. The field that begins in columns 10 is the actual Mach number. The remaining eight fields on this card are for the first four data pairs starting with the lowest angle of attack and increasing towards the highest angle of attack. If a symmetrical airfoil option is used, the lowest angle of attack is zero. If a non-symmetrical airfoil is used, the lowest value for the first two Mach numbers should be -180 degrees and for all the remaining Mach numbers the value of LOMACH entered or -30 degrees.

All the remaining cards for this particular Mach number will contain the data pairs. These cards contain ten fields each, the first field consisiting of nine columns and the remaining nine fields consist of seven columns beginning in column ten and following the same format as the first card. The format is (F9.0, 9F7.0). This card is repeated as often as needed. Columns 73-80 are not read and may be used for comments.

This procedure is repeated until all the CL's are entered. Once completed the program is ready to enter the values for CD. The whole procedure is repeated again, starting with the value for NZ representing the number of Mach numbers for which CD's will be entered. If more than one airfoil data deck is to be used, the above procedure will start over again by reading in the value of NZ for the number of Mach numbers to be entered for values of CL for the second airfoil. The number of data pairs for each Mach number must be between 2 and 48. The number of "twice the data pairs plus two" must be between 6 and 98.

Prior to entering the airfoil data, the user should review the following input variables.

1. SYM (107) - Symmetrical and nonsymmetrical airfoil data input control.
2. HIALFA (156) - The highest angle of attack for which values of CL and CD will be found at all Mach numbers.
3. LOAFLA (157) - The lowest angle of attack for which values of CL and CD will be found at all Mach numbers.
4. SPAR (103) - Number of segments using spar airfoil data.
5. TIPSWP (158) - Amount of tip sweep in degrees.
6. TPSWST (159) - Blade segment number at which the tip sweep begins.
7. BSPL (120) - Input control variable for spar data.
8. RB(I) (161-175) - Controls the blade segment airfoil data assignment.

D. SPAR DATA DECK REQUIREMENTS

The format for spar data are similar to that of the airfoil data with the exception that only one set of spar data can be entered into the program. Before the program will read spar data, input variable number 120, BSPL, must have a non-zero value. In addition, variable 103, SPAR, must indicate the number of blade segments which are using the spar data. The program automatically assumes that the first segment is a spar segment. This is further explained in the Case Input section. The spar data are the last to be entered into the program. This is an optional input and is not required. If spar data are not inputed, the program will assume that the one automatic spar section creates no lift and has the drag characteristics of the first airfoil section entered.

The format for inputing spar data are as follows. The first card contains the variable WRSPAR in F10.0 format. A non-zero value of WRSPAR causes an echo printout of spar data to occur. The remaining spar data are handled the exact same way as the airfoil section data, starting with the variable NZ. There is no input similar to that of the airfoil section stating how many different spar data decks are being entered since only one is allowed. As before, a minimum of two Mach numbers are required to be entered. The blade segment printout indicates spar segments by the use of a "0" for that segment.

Input variables associated with SPAR data are as follows.

1. SPAR (103) - The number of blade segments using spar data.
2. BSPL (120) - Input variable which controls the input and use of spar data.

E. SAMPLE BLADE INPUT

The next several pages illustrates the sample format for a blade which has the following characteristics: (1) an echo printout is not required, (2) there are two airfoil decks to be read in and (3) the first airfoil deck has nine values of Mach numbers for which CL's are to be entered.

```
0.
 2
 9
98  48.     0.      -180.    0.      -172.    .8      -166.    .8      -160.    .66
 -158.     .68      -148.    1.0     -142.    1.08    -130.    1.0     -60.     -1.0
 -50.      -1.09    -40.     -1.09   -30.     -1.01   -22.     -.98    -20.     -.975
 -18.      -.969    -16.     -.963   -14.     -1.07   -12.     -.718   -10.     -.366
 -8.       -.245    -6.      -.390   -4.      -.4     -2.      -.185   0.       .029
 2.        .244     4.       .459    6.       .673    8.       .883    10.      1.103
 12.       1.25     14.      1.1     16.      .99     18.      .982    20.      .984
 22.       .987     30.      1.01    40.      1.09    50.      1.09    60.      1.0
 132.      -1.      140.     -1.06   142.     -1.06   148.      -1.     158.     -.68
 160.      -.66     166.     -.8     172.     -.8     180.     0.
98  48.     0.3     -180.    0.      -172.    .8      -166.    .8      -160.    .66
 -158.     .68      -148.    1.0     -142.    1.08    -130.    1.0     -60.     -1.0
 -50.      -1.09    -40.     -1.09   -30.     -1.01   -22.     -.98    -20.     -.975
 -18.      -.969    -16.     -.963   -14.     -1.07   -12.     -.718   -10.     -.366
 -8.       -.245    -6.      -.390   -4.      -.4     -2.      -.185   0.       .029
 2.        .244     4.       .459    6.       .673    8.       .883    10.      1.103
 12.       1.25     14.      1.1     16.      .99     18.      .982    20.      .984
 22.       .987     30.      1.01    40.      1.09    50.      1.09    60.      1.0
 132.      -1.      140.     -1.06   142.     -1.06   148.      -1.     158.     -.68
 160.      -.66     166.     -.8     172.     -.8     180.     0.
48  23.     0.4     -22.     -.96    -20.     -.96    -18.     -.962   -16.     -.966
 -14.      -.824    -12.     -.532   -10.     -.24    -8.      -.3     -6.      -.44
 -4.       -.42     -2.      -.185   0.       .048    2.       .282    4.       .515
 6.        .749     8.       .983    10.      1.17    12.      1.13    14.      1.03
 16.       .98      18.      .986    20.      .972    22.      .979
48  23.     0.5     -22.     -.914   -20.     -.91    -18.     -.906   -16.     -.902
 -14.      -.803    -12.     -.528   -10.     -.4     -8.      -.33    -6.      -.32
 -4.       -.44     -2.      -.196   0.       .048    2.       .292    4.       .536
 6.        .78      8.       .96     10.      1.01    12.      .96     14.      1.07
 16.       1.06     18.      1.07    20.      1.065   22.      1.06
48  23.     0.6     -22.     -.934   -20.     -.93    -18.     -.926   -16.     -.922
 -14.      -.805    -12.     -.66    -10.     -.61    -8.      -.55    -6.      -.52
  -4.      -.47     -2.      -.199   0.       .072    2.       .343    4.       .614
 6.        .84      8.       .91     10.      .946    12.      1.0     14.      1.053
 16.       1.075    18.      1.064   20.      1.053   22.      1.042
48  23.     0.7     -22.     -.926   -20.     -.92    -18.     -.914   -16.     -.908
 -14.      -.880    -12.     -.83    -10.     -.78    -8.      -.74    -6.      -.68
 -4.       -.58     -2.      -.255   0.0      .07     2.       .395    4.       .72
 o.        .83      8.       .882    10.      .92     12.      .924    14.      .928
 16.       .92      18.      .9      20.      .9      22.      .92
48  23.     0.8     -22.     -.875   -20.     -.856   -18.     -.838   -16.     -.819
 -14.      -.8      -12.     -.79    -10.     -.81    -8.      -.75    -6.      -.69
 -4.       -.47     -2.      -.25    0.0      .07     2.       .35     4.       .56
 6.        .705     8.       .805    10.      .842    12.      .845    14.      .848
 16.       .860     18.      .88     20.      .9      22.      .92
```

```
48 23.    0.9     -22.    -.838   -20.    -.81    -18.    -.782   -16.    -.754
 -14.    -.726    -12.    -.698   -10.    -.67     -8.    -.666    -6.    -.663
  -4.    -.486     -2.    -.31     0.0    -.15      2.     .138     4.     .39
   6.     .64       8.     .785    10.     .81      12.     .829    14.     .848
  16.     .887     18.     .886    20.     .905     22.     .924
48 23.    1.0     -22.    -.822   -20.    -.79    -18.    -.758   -16.    -.726
 -14.    -.694    -12.    -.662   -10.    -.63     -8.    -.622    -6.    -.615
  -4.    -.428     -2.    -.24     0.0    -.05      2.     .2       4.     .449
   6.     .7        8.     .806    10.     .85      12.     .865    14.     .88
  16.     .895     18.     .91     20.     .925     22.     .94
09
96 47.    0.0     -180.    .02    -165.    .2      -155.    .4      -140.    1.0
-120.     1.6     -115.    1.8    -100.    1.95     -90.    2.0      -80.    1.95
 -67.     1.8      -43.    1.2     -30.    .6       -22.    .3438    -20.    .2723
 -18.     .2007    -16.    .1293   -14.    .0576    -12.    .0174    -10.    .008
  -8.     .0082     -6.    .0079    -4.    .0075     -2.    .0075     0.0    .0075
   2.     .008      4.     .0085    6.     .009      8.     .011     10.     .017
  12.     .026     14.     .145     16.    .2147     18.    .274     20.     .3333
  22.     .2927    30.     .6       43.    1.2       67.    1.8      80.     1.95
  90.     2.0     100.     1.95     115.    1.8     120.    1.6     140.     1.0
 155.     .4      165.     .2       180.    .02
96 47.    0.3     -180.    .02    -165.    .2      -155.    .4      -140.    1.0
-120.     1.6     -115.    1.8    -100.    1.95     -90.    2.0      -80.    1.95
 -67.     1.8      -43.    1.2     -30.    .6       -22.    .3438    -20.    .2723
 -18.     .2007    -16.    .1293   -14.    .0576    -12.    .0174    -10.    .008
  -8.     .0082     -6.    .0079    -4.    .0075     -2.    .0075     0.0    .0075
   2.     .008      4.     .0085    6.     .009      8.     .011     10.     .017
  12.     .026     14.     .145     16.    .2147     18.    .274     20.     .3333
  22.     .2927    30.     .6       43.    1.2       67.    1.8      80.     1.95
  90.     2.0     100.     1.95     115.    1.8     120.    1.6     140.     1.0
 155.     .4      165.     .2       180.    .02
48 23.    .4      -22.    .3885   -20.    .3281    -18.    .2678   -16.    .2073
 -14.    .147     -12.    .0225   -10.    .0132     -8.    .0095    -6.    .0085
  -4.    .008      -2.    .008     0.     .008      2.     .0082     4.    .0085
   6.     .0105     8.    .014     10.    .021      12.    .0935    14.    .1635
  16.     .225     18.    .2836    20.    .3414     22.    .3991
48 23.    0.5     -22.    .4065   -20.    .3506    -18.    .2948   -16.    .2388
 -14.    .183     -12.    .12      -10.    .068     -8.    .0206    -6.    .0097
  -4.    .008      -2.    .0075    0.0    .0075     2.     .0075     4.    .008
   6.     .011      8.    .026     10.    .08       12.    .153     14.    .2121
  16.     .2643    18.    .3166    20.    .3688     22.    .421
48 23.    0.6     -22.    .414    -20.    .36      -18.    .3267   -16.    .2887
 -14.    .246     -12.    .191    -10.    .127      -8.    .07      -6.    .026
  -4.    .0125     -2.    .0085    0.     .008      2.     .0075     4.    .011
   6.     .029      8.    .0743    10.    .1247     12.    .18      14.    .246
  16.     .2887    18.    .3267    20.    .36       22.    .414
48 23.    0.7     -22.    .458    -20.    .415     -18.    .372    -16.    .329
 -14.    .286     -12.    .243    -10.    .177      -8.    .113     -6.    .06
  -4.    .03       -2.    .012     0.     .008      2.     .0105     4.    .036
```

```
 6.       .061    8.      .126    10.     .162    12.     .238    14.     .284
 16.      .329    18.     .372    20.     .415    22.     .458
48  23.   0.8     -22.    .479    -20.    .441    -18.    .403    -16.    .3655
 -14.     .3278   -12.    .29     -10.    .225    -8.     .16     -6.     .1
 -4.      .065    -2.     .028    0.      .017    2.      .04     4.      .09
 6.       .128    8.      .17     10.     .225    12.     .285    14.     .328
 16.      .3655   18.     .403    20.     .441    22.     .479
48 23.    0.9     -22.    .497    -20.    .463    -18.    .43     -16.    .397
 -14.     .363    -12.    .33     -10.    .262    -8.     .203    -6.     .149
 -4.      .115    -2.     .066    0.      .05     2.      .08     4.      .12
 6.       .167    8.      .21     10.     .262    12.     .3225   14.     .357
 16.      .391    18.     .43     20.     .463    22.     .497
48 23.    1.0     -22.    .514    -20.    .486    -18.    .457    -16.    .428
 -14.     .399    -12.    .37     -10.    .297    -8.     .248    -6.     .202
 -4.      .152    -2.     .117    0.      .09     2.      .1175   4.      .1525
 6.       .203    8.      .249    10.     .298    12.     .363    14.     .393
 16.      .423    18.     .457    20.     .486    22.     .514
9
98 48.    0.      -180.   0.      -172.   .8      -166.   .8      -160.   .66
 -158.    .68     -148.   1.0     -142.   1.08    -130.   1.0     -60.    -1.0
 -50.     -1.09   -40.    -1.09   -30.    -1.01   -22.    -.98    -20.    -.975
 -18.     -.689   -16.    -.403   -14.    -.278   -12.    -.242   -10.    -.72
 -8.      -.63    -6.     -.49    -4.     -.29    -2.     -.07    0.      .15
 2.       .37     4.      .59     6.      .81     8.      1.03    10.     1.25
 12.      1.38    14.     1.5     16.     1.55    18.     1.072   20.     1.04
 22.      1.032   30.     1.01    40.     1.09    50.     1.09    60.     1.0
 132.     -1.     140.    -1.06   142.    -1.06   148.    -1.     158.    -.68
 160.     -.66    166.    -.8     172.    -.8     180.    0.
98 48.    0.3     -180.   0.      -172.   .8      -166.   .8      -160.   .66
 -158.    .68     -148.   1.0     -142.   1.08    -130.   1.0     -60.    -1.0
 -50.     -1.09   -40.    -1.09   -30.    -1.01   -22.    -.98    -20.    -.975
 -18.     -.689   -16.    -.403   -14.    -.278   -12.    -.242   -10.    -.72
 -8.      -.63    -6.     -.49    -4.     -.29    -2.     -.07    0.      .15
 2.       .37     4.      .59     6.      .81     8.      1.03    10.     1.25
 12.      1.38    14.     1.5     16.     1.55    18.     1.072   20.     1.04
 22.      1.032   30.     1.01    40.     1.09    50.     1.09    60.     1.0
 132.     -1.     140.    -1.06   142.    -1.06   148.    -1.     158.    -.68
 160.     -.66    166.    -.8     172.    -.8     180.    0.
48 23.    0.4     -22.    -.775   -20.    -.65    -18.    -.527   -16.    -.47
 -14.     -.28    -12.    -.343   -10.    -.48    -8.     -.52    -6.     -.47
 -4.      -.27    -2.     -.047   0.      .176    2.      .399    4.      .622
 6.       .845    8.      1.068   10.     1.27    12.     1.32    14.     1.078
 16.      1.074   18.     1.07    20.     1.058   22.     1.046
48 23.    0.5     -22.    -.827   -20.    -.765   -18.    -.704   -16.    -.642
 -14.     -.58    -12.    -.57    -10.    -.56    -8.     -.53    -6.     -.49
 -4.      -.295   -2.     -.085   0.      .141    2.      .384    4.      .627
 6.       .87     8.      1.03    10.     1.07    12.     1.1     14.     1.117
 16.      1.13    18.     1.07    20.     1.064   22.     1.058
48 23.    0.6     -22.    -.84    -20.    -.773   -18.    -.707   -16.    -.64
```

```
 -14.     -.573   -12.     -.522   -10.     -.488   -8.      -.453   -6.      -.418
  -4.     -.315    -2.     -.11     0.      .145     2.      .425     4.      .72
   6.      .89      8.      .939    10.      .976    12.     1.013    14.     1.05
  16.     1.044    18.     1.038    20.     1.031    22.     1.025
48 23.    0.7     -22.     -.926   -20.     -.92    -18.     -.914   -16.     -.908
 -14.     -.839   -12.     -.708   -10.     -.576    -8.     -.49     -6.     -.45
  -4.     -.36     -2.     -.105     0.     .205     2.      .535     4.      .8
   6.      .86      8.      .9      10.     .925    12.      .93     14.      .93
  16.      .92     18.      .9      20.     .9      22.      .92
48 23.    0.8     -22.     -.875   -20.     -.856   -18.     -.838   -16.     -.819
 -14.     -.8     -12.     -.79    -10.     -.810    -8.     -.75     -6.     -.69
  -4.     -.47     -2.     -.25      0.     .07      2.      .35      4.      .56
   6.      .705     8.      .805    10.     .841    12.      .844    14.      .848
  16.      .86     18.      .88     20.     .9      22.      .92
48 23.    0.9     -22.     -.838   -20.     -.810   -18.     -.782   -16.     -.754
 -14.     -.716   -12.     -.698   -10.     -.67     -8.     -.666    -6.     -.663
  -4.     -.487    -2.     -.31      0.     -.15     2.      .138     4.      .39
   6.      .64      8.      .765    10.     .81     12.      .83     14.      .85
  16.      .87     18.      .89     20.     .91     22.      .93
48 23.    1.      -22.     -.822   -20.     -.79    -18.     -.758   -16.     -.726
 -14.     -.694   -12.     -.662   -10.     -.63     -8.     -.622    -6.     -.615
  -4.     -.428    -2.     -.24      0.     -.05     2.      .2       4.      .449
   6.      .7       8.      .806    10.     .85     12.      .865    14.      .88
  16.      .895    18.      .91     20.     .925    22.      .94
9
96 47.    0.0     -180.    .02     -165.    .2      -155.    .4      -140.    1.0
-120.     1.6     -115.    1.8     -100.    1.95    -90.     2.0     -80.     1.95
 -67.     1.8      -43.    1.2      -30.    .6      -22.     .433    -20.     .384
 -18.     .334     -16.    .28      -14.    .2358   -12.     .1865   -10.     .1373
  -8.     .088      -6.    .042     -4.     .013    -2.      .008     0.      .0085
   2.     .009       4.    .01       6.    .0105     8.     .012     10.     .014
  12.     .016      14.    .0225    16.     .085    18.     .2054    20.     .276
  22.     .347      30.    .6       43.     1.2     67.     1.8      80.     1.95
  90.     2.0      100.    1.95     115.    1.8     120.    1.6      140.    1.0
 155.     .4       165.    .2       180.    .02
96 47.    0.3     -180.    .02     -165.    .2      -155.    .4      -140.    1.0
-120.     1.6     -115.    1.8     -100.    1.95    -90.     2.0     -80.     1.95
 -67.     1.8      -43.    1.2      -30.    .6      -22.     .433    -20.     .384
 -18.     .334     -16.    .28      -14.    .2358   -12.     .1865   -10.     .1373
  -8.     .088      -6.    .042     -4.     .013    -2.      .008     0.      .0085
   2.     .009       4.    .01       6.    .0105     8.     .012     10.     .014
  12.     .016      14.    .0225    16.     .085    18.     .2054    20.     .276
  22.     .347      30.    .6       43.     1.2     67.     1.8      80.     1.95
  90.     2.0      100.    1.95     115.    1.8     120.    1.6      140.    1.0
 155.     .4       165.    .2       180.    .02
48 23.    0.4     -22.     .436    -20.     .3875   -18.     .339    -16.     .2905
 -14.     .242    -12.     .1935   -10.     .145    -8.      .091    -6.      .044
  -4.     .013     -2.     .008      0.     .008     2.      .008     4.      .009
   6.     .0105     8.     .0125    10.     .0185    12.     .05      14.     .184
```

16.	.2218	18.	.24	20.	.268	22.	.295		
48 23.	0.5	-22.	.43	-20.	.38	-18.	.33	-16.	.28
-14.	.23	-12.	.193	-10.	.15	-8.	.097	-6.	.051
-4.	.0215	-2.	.01	0.	.008	2.	.008	4.	.009
6.	.013	8.	.035	10.	.071	12.	.128	14.	.2033
16.	.257	18.	.31	20.	.363	22.	.4167		
48 23.	0.6	-22.	.414	-20.	.36	-18.	.322	-16.	.284
-14.	.246	-12.	.1973	-10.	.153	-8.	.102	-6.	.057
-4.	.028	-2.	.01	0.	.008	2.	.008	4.	.015
6.	.042	8.	.083	10.	.132	12.	.189	14.	.238
16.	.287	18.	.336	20.	.385	22.	.434		
48 23.	0.7	-22.	.458	-20.	.415	-18.	.372	-16.	.329
-14.	.286	-12.	.243	-10.	.162	-8.	.117	-6.	.076
-4.	.04	-2.	.011	0.	.009	2.	.014	4.	.053
6.	.092	8.	.136	10.	.1813	12.	.238	14.	.2816
16.	.325	18.	.368	20.	.412	22.	.456		
48 23.	0.8	-22.	.479	-20.	.441	-18.	.403	-16.	.3655
-14.	.3278	-12.	.29	-10.	.225	-8.	.17	-6.	.122
-4.	.075	-2.	.028	0.	.025	2.	.07	4.	.108
6.	.148	8.	.182	10.	.225	12.	.285	14.	.323
16.	.362	18.	.4	20.	.439	22.	.477		
48 23.	0.9	-22.	.5	-20.	.467	-18.	.433	-16.	.4
-14.	.367	-12.	.33	-10.	.262	-8.	.21	-6.	.163
-4.	.115	-2.	.066	0.	.06	2.	.1	4.	.138
6.	.182	8.	.221	10.	.262	12.	.3225	14.	.357
16.	.397	18.	.425	20.	.459	22.	.493		
48 23.	1.0	-22.	.5145	-20.	.4855	-18.	.457	-16.	.428
-14.	.399	-12.	.37	-10.	.297	-8.	.248	-6.	.202
-4.	.152	-2.	.117	0.0	.1	2.	.136	4.	.17
6.	.215	8.	.255	10.	.298	12.	.363	14.	.3925
16.	.422	18.	.452	20.	.4815	22.	.511		
16.	.422	18.	.452	20.	.4815	22.	.511		

F. INPUT CASE LISTING

GRP CASE INPUTS

ITEM NO.	DESCRIPTION	PROGRAM VARIABLE	DIMENSION	REQUIRED
1	Tip Speed	OMEGAR	FPS	YES
2	Radius	R	FT	YES
3	Speed of Sound	SPSD	FPS	YES
4	Air Density	RHO	SLG/CUFT	YES
5	No. of Blades	XNB	-	YES
6	Forward Speed	VEL	KTS	89, 90
7	Offset Ratio of Flap Hinge (e/R)	ER	-	YES
8-22	Delta X	DX(15)	-	YES
23-37	Local Twist	TW(15)	DEG	92
38-52	Local Mass Density	XMASS(15)	SLG/FT	78,79
53-67	Local Chord	C	FT	YES
68	Delta PSI	DPSI	DEG	**
69	Flap Iteration Limit	FTRL	-	**
70	Initial Beta	BIN	RAD	**
71	Initial Beta *	BPIN	RAD/SEC	**
72	Initial Beta **	BPPIN	RAD/SEC**2	**
73	Lift and Drag Iteration Limit	XITLIM	-	**
74	Required Lift	RL	LB	YES
75	Required Drag	RD	LB	95
76	Lift Tolerance	XLTOL	LB	**
77	Drag Tolerance	XDTOL	LB	**
78	First Moment about Flap Hinge (M)B	FMOM	SLG-FT	38-52
79	Second Moment about	SMOM	SLG-SQFT	38-52
80-82	Shaft Orientation	AG,BGL,CG	DEG	**
83	Pitch-Flap Coupling Angle (Delta 3)	TD3L	DEG	-
84	Drag Increment	DELD	-	-
85	Lat. Cyclic Pitch	A1S	DEG	**

86	Long. Cyclic Pitch	B1S	DEG	**
87	Collective Pitch	T75	DEG	**
88	Inflow Ratio	LAMBDA	-	**
89	Advance Ratio	MUL	-	6, 90
90	VEL Control	UIN	-	6, 89
91	Iteration Output	SKIPIN	-	**
92	Linear Twist	TWIST	DEG	23-37
93	No. of Blade Segments	XNSEG	-	**
94	Climb Rate	RCFPM	FPM	-
95	Flat Plate Area	FPAREA	FT**2	75
96	Thrust Option	TOP	-	-
97	Flapping Re-Use Indicator	PCNV	-	**
100	MU Iteration Tolerance	ABIT	-	-
101	Beta Tolerance	BTOL	-	**
102	Beta* Tolerance	BPTOL	-	**
103	Spar Segments	SPAR	-	-
104-105	Second Harmonic Control Inputs	A2S,B2S	DEG	-
106	Solidity	RSL	-	-
107	Symmetric Airfoil	SYM	-	-
108	Spring Constant	SFH	FT-LB/RAD	-
109	Damping Constant	FDMP	FT-LB/RAD/SEC	-
110	Lift Only Option	ALOPT	-	-
111	Shaft Angle	ALL	DEG	-
112-113	Desired A1 and B1 Flapping	RA1S RB1S	DEG	-
114	A1, B1 Tolerance	TOLAB	DEG	**
115	Tangent Delta 3	TD3B	-	-
116	Phase Angle for Delta 3	PHD3B	DEG	-
117	Induced Velocities	LAML	-	-
118	Induced Velocities	UVL	-	-
119	Not Used			
120	Input Spar Data	BSPL	-	-

121	Azimuthal Printout Indicator	PPSI	DEG	**
122	Minimum Lift Curve Slope	ATEST	-	-
123	Iteration Gain Factor	IGC	-	**
124-125	Not Used			
126	Pre-Coning Angle	PCR	RAD	-
127-137	Not Used			
138	Hub Moment Inplane Aero Forces	INPL	-	-
139-141	Aircraft Yaw, Roll and Pitch Angular Velocities	PSIS, PHIS THFS	RAD/SEC	-
142	CG Station	FSCG	INCHES	-
143	Rotor Center Station	FSMR	INCHES	-
144	CG Waterline	WLCG	INCHES	-
145	Rotor Waterline	WLMR	INCHES	-
146	Aircraft Lateral Velocity	VELY	KTS	-
147	Spar Symmetry	SYMSPR	-	-
156	Airfoil Tables	HIALFA	DEG	**
157	Airfoil Tables	LOALFA	DEG	**
158	Tip Sweep	TIPSWP	DEG	**
159	Sweep Station	TPSWST	-	**
160	Rotor Moments	TRIM	-	-
161-175	Rotor Blade Airfoil Data Assignments	RD	-	**

** Program has automatic default value.

G. GRP INPUT DEFAULT VALUES

ITEM NO	PROGRAM VARIABLE	DEFAULT VALUE
68	DPSI	15.0
69	FTRL	15.0
73	XITLIM	15.0
76	XLTOL	100.
77	XDTOL	50.0
81	BGL	90.0
85	A1S	-1.2 *
86	B1S	7.53 *
87	T75	5.0
88	LAMBDA	-.02
91	SKIPIN	1.0
93	XNSEG	15.0
97	PCNV	1.0
101	BTOL	.001
102	BPTOL	.001
114	TOLAB	0.25
121	PPSI	DPSI
122	ATEST	5.0 **
123	IGC	1.0
156	HIALFA	30.
157	LOALFA	-30.
159	TPSWST	16.
161-175	RB	1.0

* 0. if ABIT, item 100, is non-zero

** -50 is TOP, item 96, is non-zero

H. CASE INPUT DATA

Many of the case inputs are self-explanatory by their name listing alone, however, many are not. This section will explain the input variables and case options available to the user.

The program enters all the variables into a 200 element array called V(I). Prior to entering case data, the program will automatically do two things. It will initialize the array V(I) to a value of zero. It will assign the default values listed in the previous section to those particular variables.

The V(I) array is associated with the variable names by equivalent statements. The user needs only to enter values for the variables that are different from the default or initialized values. In a multiple case computer run, the user need only enter variables that are different from the preceeding case. If no new value is enter for a variable, the value from the previous case is carried over.

1. Item 6 - Velocity - VEL

The computer program will accept forward velocity in one of two ways. The user will input either VEL, item 6, in knots or advance ratio MUY, item 89. The value of UIN, item 90, determines which variable will be used. If UIN is zero, VEL will be used. If UIN is non-zero, MUL will be used. If VEL is used, the program calculates the advance ratio by the following expression.

$$\mu = \left[(V/\Omega R^2) - \lambda^2 \right]^{1/2}$$

If MUL is used, the program will calculate the flight velocity by the following expression.

$$V = \left[(\mu^2 + \lambda^2) \Omega R^2 \right]^{1/2}$$

2. Item 7 - Hinge Offset - ER

The offset ratio of the flap hinge, E/R, is the distance from the center of the rotor shaft tc the vertical flapping hinge, normalized by the rotor radius, item 2.

3. Items 8-22 - Delta X - DX

Delta X is the non-dimensionalized width of each individual blade segment starting with segment number one. There may be up to 15 segments entered. The number of widths entered here must equal the value of Item 93, XNSEG. XNSEG is the number of segments intc which the blade is divided. This can range from two to fifteen. It is recommended that a value of ten or more be used for XNSEG. If XNSEG were equal to 12, values of Delta X would be entered for items 8 to 19 and no values would be entered for items 20 to 22. The sum of ER plus the summation of the Delta X's must equal one. ER is the non-dimensional width between the rotor shaft and the flapping hinge offset. Item number 8, which is the first segment width, represents the width between the flapping hinge offset and the point where the actual rotor blade airfoil begins. This area is known as the spar or cut out segment if no spar data were entered. If item 103, SPAR, is zero, the program will assume that this first section creates no lift and has the drag characteristics of the first inputed airfoil data section. Since this area experiences relatively low dynamic pressure, the calculations in this segment do nct have an appreciable effect on the outcome of the program. The area between the shaft and the hinge offset, ER, produces neither lift nor drag in the program's calculations. The last segment is

considered a tip loss factor segment. The lift is assumed to be zero, but drag is calculated in the normal manner. In previous runs, the width of this section has been set equal to three percent of the rotor radius, or Delta X equal to .03.

4. Items 23-37 - Twist - TW

The program has two options for entering geometric twist into the calculations. If the blade has linear twist, item 92, TWIST, can be used. If the twist is non-linear, the twist can be entered in items 23-37, TW. If a number is entered for item 92, the program will assume linear twist and ignore all values entered for TW. The local twist at the center of each segment can be entered starting with item 23. If the blade contains ten segments, items 23-32 would be entered and no values for items 33-37 would be entered.

A word of caution is necessary regarding the linear twist option, item 92. The twist is considered to be zero at the 75 percent chord point. The twist is calculated assuming that the twist starts at the rotor shaft and varies linearly out to the rotor tip. If the actual rotor blade airfoil started at the 25 percent radius point with a twist value of -9 degrees, a value of linear twist equal to -12 degrees would have to be entered in order for the correct twist distribution to be calculated by the program.

5. Items 38-52 - XMASS

The program provides two methods for entering the local mass density or the moment of inertia information. The individual mass density for each section can be entered in items 38-52, or the First and Second Moment, FMOM and SMOM, about the Flapping Hinge, can be entered in items 78 and 79. If data are entered for item 79, the Second Moment about the Flapping Hinge, the program will use the information provided by items 78 and 79. If variable 79 is

equal to zero, the program will calculate the First and Second Moments for items 38-52 and ignore any value entered for items 78 and 79.

6. Items 53-57 - Chord

The program has two methods for entering local chord data. The local chord at each segment can be entered starting with segment number one. If the chord is a constant chord, the amount of data to be entered can be reduced to only items 53 and 54. If items 53 and 54 are equal, the program assumes that the chord is constant throughout the radius and will ignore any information entered in items 55-67. Therefore, for constant chord, only enter values for items 53 and 54. If the rotor solidity is not inputed in item 106, the program will compute solidity as follows.

$$\sigma = \frac{b\, c_{.75}}{\pi R}$$

7. Item 68 - DPSI

DPSI, or Delta PSI, is the incremental azimuthal value by which the program advances in its blade flapping and force summation routine. This number must divide evenly into 360 degrees. A minimum value of five degrees is permitted. It has been found that for most cases decresing the value of DPSI below 15 degrees does not improve the accuracy but does increase the computational time. As an example, the rotor horsepower required for one particular run was 1096 RHP for DPSI equal to 15 degrees, 1095 RHP for DPSI equal to 10 degrees and 1097 RHP for DPSI equal to 5 degrees. DPSI has a default value of 15 degrees.

8. Item 69 - FTRL

FTRL is the maximum limit on the number of times that the program will enter the flapping iteration routine in search of a steady state flapping solution. The program has an automatic default value of 15 iterations. The program usually arrives at a steady state flapping solution within three to four iterations. The only method by which the user can actually determine the number of flapping iterations required would be to use one of the debug output options. However, these options will create a huge amount of output and the user is cautioned about their use.

9. Items 70-72 BIN-BPPIN

The program has three options on how to assign the values for the inital flapping angle, velocity, and acceleration at the PSI equal zero position. The user may (1) input the values, (2) have the program itself calculate initial values, or (3) accept the default values of zero. Option three is the most used option. It has been discovered that there is little or no difference in solution time between option two and three. Variable number 97, PCNV, controls which option is to be used. If PCNV is non-zero, the program will use either option one or three. The program initially assigns values of zero to BIN, BPIN, and BPPIN before the initial case data are entered. PCNV is assigned the default value of one. Therefore, with no values entered by the user for items 70-72 and 97, the program will start with an initial value for flapping angle, velocity and acceleration at the PSI equal zero position of zero.

If the user sets PCNV equal to zero, the following formulas are used for determining the inital values. These formulas are derived from page 194 of Ref. 4.

$$\beta = \frac{\gamma}{2}\left[\frac{\theta}{4}(1+\mu^2) + \frac{\lambda}{3}\right] - \frac{\mu\left[\frac{8}{3}\theta - 2\lambda\right]}{1 - \frac{\mu^2}{2}}$$

$$\dot{\beta} = \frac{-\frac{4}{3}\mu\frac{\gamma}{2}\left[\frac{\theta}{4}(1+\mu^2) + \frac{\lambda}{3}\right]}{1 + \frac{\mu^2}{2}}$$

$$\ddot{\beta} = \frac{\mu\left[8/3\ \theta - 2\lambda\right]}{1 - \frac{\mu^2}{2}}$$

The term γ is referred to as the Lock number where

$$\gamma = \frac{C_{.75}\ \rho\ a\ R^4}{I_b}$$

In a run where more than one case is executed at a time, a non-zero value for PCNV allows the previous case values for flapping angle, velocity and acceleration to be used as the initial estimate for these variables in the next case. If PCNV is equal to zero, the inital values will be calculated by the above formulas. Most cases are run by accepting the default value of one for PCNV.

10. Item 73 - XITLIM

After the program calculates a steady state flapping solution for its estimated values of inflow ratio, pitch angle and shaft tilt angle, the program determines the forces and moments generated by this solution. If the forces and, optionally, moments do not meet the required amounts entered by the user, the program will calculate new values to re-enter the flapping routine. XITLIM determines the maximum number of times the program will compare the calculated values to the desired values. The program has a default value of 15 for XITLIM. A majority of the solutions require approximately five iterations to converge. Once the XITLIM limit is exceeded, the program will stop and printout an "Exceeded Limit" statement. The program automatically prints as output the number of Major Iterations it uses in calculating the solution.

The sign of XITLIM controls the Short Iteration Option. If XITLIM is a negative number, the program uses this option. A complete describtion can be found in the section entitled Main Iteration Opticns.

11. Item 74 - Required Lift

The required lift, RL, should equal the actual weight of the helicopter that the rotor system is supporting.

12. Item 75 - Required Drag

The required drag can be entered in one of two ways. It can be entered directly in item 75 or it can be calculated by the program by entering the aircraft's flat plate area in item 95, FPAREA. The drag is equal to the flight path force that the rotor system must overcome to sustain level flight at a certain velocity. Items 75 and 92 can be entered either as positive or negative numbers and the program will provide the correct fcrward flight solution by assigning the proper sign value internally. If a value is entered for FPAREA, the program will ignore any value assigned to RD. The drag for FPAREA is calculated as follows.

$$D = \frac{1}{2} \rho V^2 (FPAREA)$$

If item 92 is not entered, the user must supply the value for the required drag by using the above fcrmula. There are certain options for which the program ignores or does not iterate on drag. An example of this would be when the program is used to estimate wind-tunnel test results. If these options are desired, see variables 96, TOP, and 110, ALOPT.

13. Items 76-77 - Tolerances

XLTOL and XDTOL are the lift and drag tolerances. The program will iterate until both the lift and drag are within the tolerances given by variables 76 and 77. The program has automatic default values of plus and minus 100 pounds for lift and 50 pounds for drag.

14. Items 78-79 - Moments

Information regarding the use of FMOM and SMOM can be located in paragraph five on XMASS.

15. Items 80-82 - Shaft Axis

The gravitational or weight vector must be oriented to the shaft axis of the rotor system. Figure 9 shows the positions of these angles. The shaft can be oriented in any desired direction. The program will automatically assign the proper values for normal helicopter flight. The default values for AG, BGL, and CG are 0, 90, and 0 degrees, respectively. This orients the shaft in the vertical direction for normal flight. If any other orientation is desired, the user must enter the appropiate values for items 80 to 82.

16. Item 83 - Delta 3

Delta three inputs are controlled by variables 83, 115, and 116. These are TD3L, TD3B, and PHD3D, respectively. If the flapping hinge is connected in such a manner as to cause the blade to change pitch due to flapping, this is referred to as a Delta Three hinge. Item 83 is the pitch-flap coupling angle; 115 is the tangent of the Delta Three Bar; and 116 is the phase angle for the Delta Three Bar. The program reduces the pitch angle at a particular azimuth and segment by the quantity TD3 where

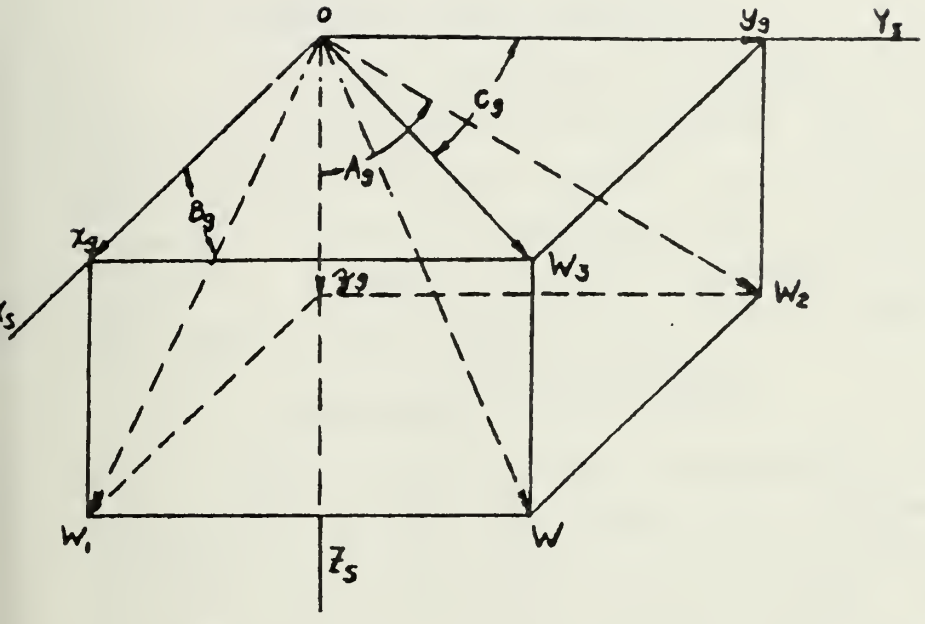

Figure 9 Resolution of Gravitational Force

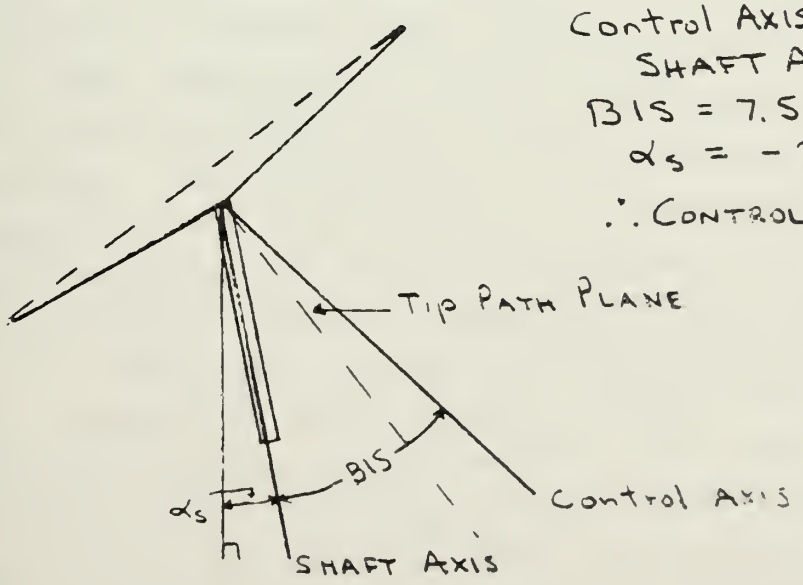

Control Axis =
Shaft Axis − BIS
BIS = 7.53°
α_s = −2°
∴ Control Axis = −9.53°

Figure 10 Shaft and Control Axis Diagram

TD3 = TD3L + TD3B*sin(PSI + PHD3D)

Normally, variables 83, 115, and 116 are zero.

17. Item 84 - Drag Increment

The drag increment is a value of delta CD that is added to the value of CD obtained from the airfoil input data decks. This is added as a roughness factor that naturally occurs on blades that are used on production aircraft. A value of .002 is normally used. The value is not added to the drag calculations for spar data.

18. Items 85-86 - Cyclic Pitch

The lateral and longitudinal cyclic pitch is controlled by four variables. The program allows the user to enter both first and second harmonics of cyclic input. The variables A1S and B1S, 85 and 86, control the first harmonic inputs. The variables A2S and B2S, 104 and 105, control the second harmonic inputs. The A's correspond to the lateral inputs and the B's correspond to the longitudinal inputs. The program has automatic default vales for A1S, B1S, A2S and B2S of -1.2, 7.53, 0 and 0 degrees, respectively. The user may enter different values if desired. Unless other options are indicated, the program will keep these cyclic values constant throughout the run and will vary inflow ratio and pitch angle to obtain a final solution. The program will automatically calculate the postion of the shaft axis by the momentum theory and will use the value of B1S to determine the position of the control axis. Figure 10 demostrates this fact.

There is a different option available which allows the program to seek specific values of longitudinal and lateral flapping. This requires the use of variables 100 and 112 - 114. If this option is taken, the values of A1S and B1S are set equal to zero initially and will be changed by the computer in its iteration of the required flapping

angles. The program also has an option to remove hub rolling and pitching moments. Once a solution is obtained that meets the lift and drag tolerances, the values of A1S and B1S are varied to reduce the moments. This option is controlled by variable 160. Normally, runs are made with the user not inputing values for items 85, 86, 104, 105, 100, 112, 113, 114 and 160.

19. Item 87 - Pitch Angle

Variable 87 is the initial value of the collective pitch at the 75 percent radius station at PSI equal zero azimuthal station. The program has a default value of five degrees. This value is used only to initiate the program. The program, under the normal run option, will vary this value in the process of iterating for a convergent solution. There is an option where the pitch angle remains fixed as in a wind-tunnel test. This is the TOP option, variable 96.

20. Item 88 - Inflow Ratio

The variable LAMBDA controls the inital estimate of an uniform inflow. Since the equations of the program are done in a gyrocopter mode, inflow is negative when air flows down through the rotor. This is the normal forward flight mode. The program has a default value of -.02 for LAMBDA. The program will iterate on LAMBDA in its normal iteration rountine. The ALOPT, variable 110, option will hold LAMBDA constant.

21. Items 89-90 - MUL

Information regarding the use of MUL and UIN can be found in paragraph one on Flight Velocity.

22. Item 91 - SKIPIN

Information regarding the use of SKIPIN can be found in the section of Case Optional Output Indicators.

23. Item 92 - Linear Twist

Information regarding twist can be found in paragraph four on local twist.

24. Item 93 - XNSEG

Information regarding XNSEG can be found in paragraph three on Delta X.

25. Item 94 - Rate of Climb

The program can be made to calculate a complete solution for any given rate of climb or descent. Climb or descent rate must be entered in units of feet per minute, with positive values for climbs and negative values for descents. The program assumes a uniform down or up flow across the entire rotor surface equal to the rate of climb or descent. This value is added as an incremental correction into the calculations of UP and will effect PHI and angle of attack.

26. Item 95 - FPAREA

Information regarding the use of FPAREA, flat plate area, can be found in paragraph twelve on Required Drag.

27. Item 96 - TOP

The TOP option is one of the wind-tunnel options. If TOP is a non-zero number, the program iterates to obtain the required lift of variable 74, but will ignore the required drag of variable 75. Item 87, the collective pitch at the 75 percent radius at PSI equal zero, will be held constant. Item 88, the inflow ratio, will be varied in the major iteration routine. A non-zero value of TOP will result in a value of -50 for item 122, ATEST. ATEST is the minimum accepable value for the lift curve slope when option

96 or 110 is executed. If non-zero values for both TOP and ALOPT are entered, the program will do the TOP option. Shaft angle, item 111, must be inputed by the user.

28. Item 97 - PCNV

Information concerning the use of PCNV, the Flapping Solution Re-Use Indicator, can be found in paragraph nine on Initial Flapping Conditions.

29. Item 98 - PRINT

Information concerning the use of PRINT, the program's main output indicator, can be found in the section entitled Case Optional Output Indicators.

30. Item 99 - XEND

Item 99 is the End of Case signal card. It is the last data variable that will be entered for each case. If XEND is a negative number, the program will stop after it determines a solution for that particular case. However, since an infinite number of cases can be entered for each computer run, XEND also tells the program if there are more cases to go. If XEND is equal to 2.0, the program will assume that the next case will begin by reading in new airfoil data. If XEND is any other positive real number, the program assumes that the next case will use the present airfoil data and will enter only case input data and any of the options which normally follow the case input data. Each time that the variable XEND is entered, be especially careful to follow the format for NNUM for this card. NNUM is the number of inputs per data card. NNUM must be a negative number for this XEND card. It is this negative sign on NNUM which actually keys the computer to stop reading data cards for a particular case.

31. Item 100 - ABIT

Information regarding the use of ABIT can be found in paragraph 40.

32. Items 101-102 - BTOL

In the blade flapping routine, the program searches for a steady state flapping solution for the given conditions of inflow ratio, pitch angle, and cyclic input. The program compares values of flapping angle and velocity at the PSI equal zero azimuthal positicn on each revolution. If at this position, the difference between the n-th and the (n - 1)th revolution values for flapping angle and velocity is less than BTOL and BPTOL, respectively, the program assumes that it has determined a steady state solution. BTOL and BPTOL have default values of 0.000001 radians and radians per second, respectively. If other values are desired, the user may enter those values for items 101 and 102.

33. Item 103 - SPAR

The number of blade segments using spar data can be inputed in item 103. If nc spar data are available, no value for SPAR should be entered. For this case, the program assumes that the first segment is the area between the flapping hinge and the point where the actual airfoil begins on the rotor blade. This area is also referred to as the "cut out" segment. In this case, the program assumes that this cut out area produces zero lift and uses CD information from the first airfoil section for drag calculations. If a non-zero number is entered for SPAR, spar airfoil data must be available. Case input variable 120, BSPL, controls the spar input option. If spar data are to be inputed, BSPL should be assigned a non-zero value. In a multiple case run, where spar data are initially entered,

the variable BSPL is set equal to zero as soon as the spar data are entered. If the program did not do this, the user would have to enter a zero for BSPL for the next case if no new spar data are to be entered. If in a multiple case run, the user decides to enter new spar data, the variable BSPL must be assigned a non-zero value for that particular case.

34. Items 104-105 - A2S B2S

Information regarding the use of the second harmonic control inputs can be found in paragraph 18 on Lateral and Longitudinal Cyclic Inputs.

35. Item 106 - Solidity

Information regarding the use of RSL, rotor solidity, can be found in paragraph six on local chord.

36. Item 107 - SYM

SYM is the non-symmetrical airfoil input control. If the user assigns a non-zero value for SYM, the program will assume that all blade airfoil data are non-symmetrical. The user must enter values for CL and CD for the complete range of angles of attack from -180 to +180 degrees. If the value of SYM is zero, only tabular values from zero to +180 degrees need to be entered. The above holds true also for variable 147, SYMSPR. SYMSPR applies to the spar data exactly in the same manner as SYM applies to the airfoil data.

37. Items 108-109 - SFH FDMP

Values for the spring constant, SFH, and damping constant, FDMP, about the flapping hinge can be entered if known. These variables can be entered to simulate a hingeless rotor system or a system with flapping springs.

38. Item 110 - ALOPT

This is one of the wind-tunnel options. If ALOPT is a non-zero input, the program will iterate to obtain the lift required of variable 74 but will ignore the required drag, variable 75. In this option, variable 87, collective pitch, will be varied, but not variable 88, inflow ratio, in the program calculations. This is the opposite of the TOP, varialbe 96, option.

If a lift curve slope less than ATEST, item 122, is calculated while using this option, the program will stop and produce the following message. "Stall Criterion has been violated -- will go to next case, if any." Item 111, the shaft angle, must be inputed. If non-zero values are entered for both TOP and ALOPT, the program will do the TOP Option.

39. Item 111 - Shaft Angle

Item 111, the shaft angle, must be inputed whenever the TOP or ALOPT options are used.

40. Items 112-114 - RA1S

If variable 100, ABIT, is non-zero, the program will iterate the blade flapping solution in an attempt to obtain the desired lateral and longitudinal flapping angles indicated by variables RA1S and RB1S, respectively. The program will iterate to the accuracy indicated by TOLAB, item 114. Item 112 is RA1S and item 113 is RB1S.

41. Items 115-116 - Delta 3

Items 115 and 116 are the tangent and phase angle of a Delta 3 Bar. Information regarding the use of TD3B and PHD3B can be found in paragraph 16 on the Pitch-Flap Coupling Angle.

42. Items 117-118 - LAML

The program allows the user to induce a velocity of any form onto the rotor system. This is done in a harmonic series of the form (A0 + A1*cos(PSI) + B1*sin(PSI) + A2*cos(2*PSI) + B2*sin(2*PSI) + ...) for each segment that the blade is divided into. If variable 117, LAML, is a non-zero number, the program will enter the harmonics of the induced velocities. During the Read routine, LAML, will be assigned a value of zero. Therefore, for each case where different values for the harmonics are desired, LAML will have to be set to a non-zero number. Variable 118, UVL, controls the use of the induced velocities. If UVL, is zero, the induced velocities will all be set equal to zero.

A short example will now be given on the use of the control variables in a multiple case run. Assume that no harmonic induced velocites are desired for the first case. The user would make no inputs for LAML and UVL. For the second case, assume that harmonic induced velocities are desired. LAML and UVL would be set equal to a non-zero number. The harmonic variables would follow the case input data for this particular case. For the third case, it is desired that the same induced velocites be used. The user would not enter any values for LAML and UVL since (1) LAML has been automatically set to zero and hence no new harmonic data will be entered and (2) UVL is still equal to a non-zero number. It is desired for case four to use no induced velocities. The user now would enter the value of zero for UVL and program will zero out all the induced velocity variables.

This paragraph will describe how to use the variable induced velocity option. The inputs A1, B1, A2, B2, ... are numbers in units of feet per second. If the direction of the velocity is down, a negative sign is associated with the A's and B's. A negative sign will decrease the angle of

attack for an element originally at a positive angle of attack. It will increase the amount of negative angle of attack for a blade element originally at a negative angle of attack. The values of A's and B's do not effect the uniform inflow ratio, LAMBDA, that the program iterates upon. The format for using the variable inflow velocity is as follows.

1. A value for NHARM is entered in I3 format. NHARM is the maximum degree of the harmonics that is to be used. If the maximum degree used is A3*cos(3*PSI), then NHARM is three.
   The next three paragraphs are repeated for each blade segment.
2. The value for A0 is entered in E15.6 format. The IBM 360-67 at the NPS will accept F15.0 format.
3. The values for A1, A2, A3, ..., up to NHARM are entered on the next data cards in format 5E14.6.
4. The values for B1, B2, B3, ..., up to NHARM are entered on the next data cards in format 5E14.6.
5. Three cards are required for each blade segment whether or not the values are equal to zero. If the user has 15 blade segments, a minimum of 45 data cards are required.

43. Item 120 - BSPL

Information concerning the use of BSPL can be found in paragraph 33 entitled Number of Spar Airfoil Data Segments.

44. Item 121 - PPSI

PPSI represents a delta PSI for printout purposes. PPSI has a default value equal to DPSI, variable 68. PPSI shall never be a smaller increment than the incremental DPSI used to calculate the solution.

45. Item 122 - ATEST

ATEST is the minimum acceptable value of the lift curve slope when option TOP or ALOPT is used. If no value is assigned, ATEST has a default value of 5 (1/rad). When the TOP option is used it has a automatic value of -50 (1/rad). The lift curve refers to the increase in rotor lift with the tilting back of the tip path plane. A check on it for a minimum is for convergence purpose only.

46. Item 123 - IGC

IGC is the Iteration Gain Control factor. If the major iteration fails to converge, choosing a fractional value for IGC can greatly speed convergence. This may be especially helpful when parts of the rotor are in stall. The amounts by which the convergence algorithm changes the independent variables is multiplied by IGC. Setting item 91, SKIPIN, equal to zero may help the user decide if this IGC option might be useful.

47. Item 126 - PCR

The pre-coning angle in radians may be entered here.

48. Item 138 - INPL

Input 1.0 for INPL in order to remove hub moment inplane aerodynamic forces from the calculation of aerodynamic pitch and roll moments about the shaft axis.

49. Items 139-141 - PSIS

Variables PSIS, PHIS and THFS represent aircraft angular velocites. The aircraft can be given any angular velocity in yaw (PSIS), pitch (PHIS), and roll (THFS) in radians per second by the use of these variables. They effect the calculations of UP, UT and UR. Paragraph 50 contains additional information.

50. Items 142-145 - CG

If the angular velocities, items 139 - 141 are entered, they are used in the calculations of UP, UT and UR. If no values for items 142 - 145 are entered, the program assumes that the rotor system rotates due to the angular velocities about the center of the shaft. If values are entered for items 142 - 145, the calculations will assume that the entire rotor shaft is rotating about the center of gravity. Variables 142 - 145 are FSCG, FSMR, WLCG and WLMR. FSCG is the longitudinal CG position while FSMR is the longitudinal position of the main rotor. WLCG is the CG waterline station while WLMR is the main rotor's waterline, or vertical position. All of these values must be entered in units of inches.

51. Item 146 - VELY

The aircraft's lateral speed in knots can be entered here.

52. Item 147 - SYMSPR

If the spar data are symmetrical, do not enter a value for SYMSPR. The program will only use values for CL and CD between zero to +180 degrees. If the spar data are non-symmetrical, enter any non-zero value for SYMSPR. The program will require values from -180 to +180 degrees.

53. Items 156-157 - HIALFA

In order for the program to properly calculate the region in and around the reverse flow region, the values of CL and CD are required to be known at high and low angles of attacks approaching 180 degrees. However, in order to save the user from having to enter a whole range of angles of attack for all Mach numbers, the program has an option where for angles above HIALFA, 156, and below LOALFA, 157, the Mach number is set equal to zero for table lookup purposes. The user is only required to enter large angles for the first two Mach number tables. HIALFA and LOALFA have default values of +30 and -30 degress, respectively.

54. Items 158-159 - Tip Sweep

The GRP program will properly calculate the airflow sweep angle, UT, UR, and pitch angle of a swept tip airfoil. TIPSWP is the amount of sweep of the tip measured in degrees. TPSWST is the blade segment number at which the sweep begins. The program assumes that the remaining outboard segments starting with TPSWST are swept the number of degrees indicated by TIPSWP. UT and UR are modified for these segments as shown is Figure 11.

55. Item 160 - TRIM

If TRIM is a non-zero value, the program will attempt to adjust A1S and B1S in order to reduce the rolling and pitching moments to less than plus or minus 100 pounds. It will first obtain a solution which will satisfy the required lift and drag, then it will adjust A1S and B1S to reduce the moments.

56. Items 161-175 - RB

Variables 161 - 175 assign the proper airfoil data to blade segments one through fifteen. The program will

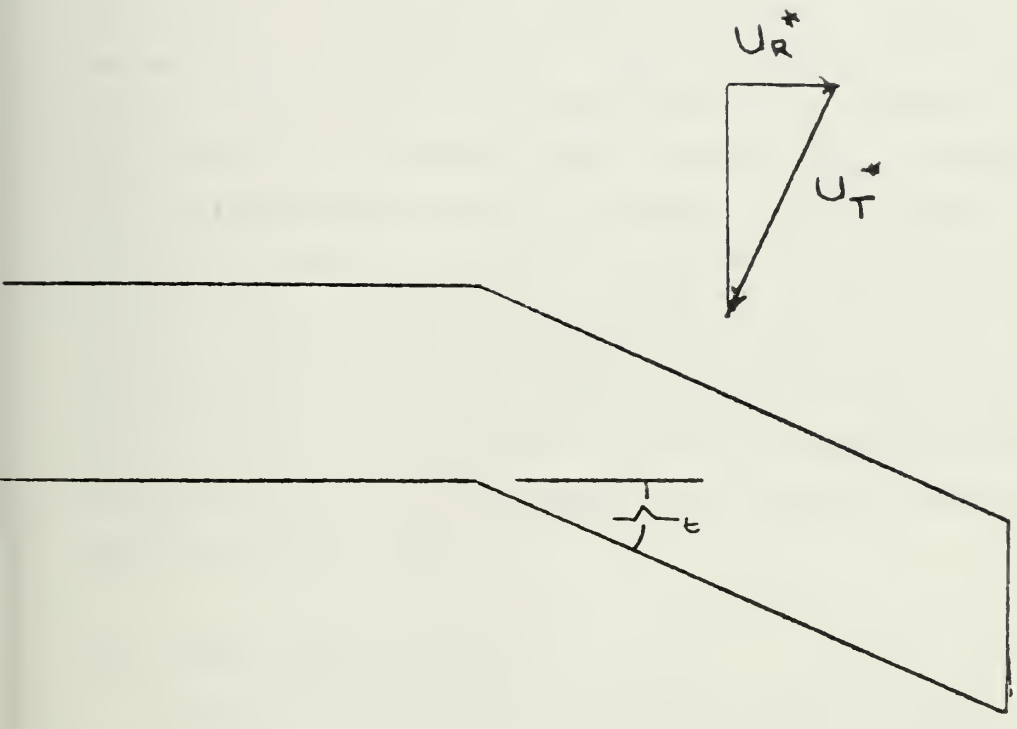

$$UR = URcos\Lambda_t + UTsin\Lambda_t$$

$$UT = UTcos\Lambda_t - URsin\Lambda_t$$

Figure 11 Tip Sweep Calculation Diagram

accept up to five airfoil data decks. The RB array is initialized with the value of one for all 15 segments. If only one blade airfoil deck is used, there is no need to enter any values for RB. Only enter values for the segments which will use airfoil data sets two through five. If no spar data are entered, SPAR equals zero, segment number one is considered the cut out segment and is assigned the value of RB(1) equals one for calculation purposes and the value of RB(1) equals zero for printout indentification. In this case, segment one produces only drag but no lift. If SPAR is greater than zero, RB(I), I = 1, SPAR, will be assigned the value of zero for printout indentification. These segments will use the spar data entered and will calculate both lift and drag.

I. CASE INPUT FORMAT

Below is located the format that is used to input case data to the program. All input data cards are of the format (I2, I4, 5F12.0). The input cards contain seven fields which are called NNUM, NLOC, C(1), C(2), C(3), C(4) and C(5). An example of a data input card is as follow.

```
5   1   700.    26.8    1148.6    .002246    4.0
```

1. NNUM is the number of inputs on this card, where C(N) are the inputs. NNUM must appear in either column one or two. NNUM has a minimum of one and a maximum of five. In the above example NNUM is five.
2. NLOC is the item or variable number of input C(1). This refers to the item numbers that are found in the section on Case Input Listings. NLOC is in I4 format and must be right justified in columns four through six. In the example NLOC refers to item number one, the Rotor Tip Speed.

3. C(1) through C(5) are the values corresponding to the input items NLOC through NLOC + NNUM. Each value must contain a decimal point and be in columns 7 - 18 for C(1), 19 - 30 for C(2), 31 - 42 for C(3), 43 - 54 for C(4) and 55 - 66 for C(5). In this example, values are entered for variables one through five, the Tip Speed, Radius, Speed of Sound, Air Density and Number of Blades.
4. Omision of NNUM will cause program termination with an error explanation statement. NNUM greater than five will cause unknown problems. Omission of NLOC will cause the present card's values of C(N) to be entered into the items indicated by the previous card's NLOC. Failure to right justify NLOC, or NLOC greater than 200, will cause unknown problems. Failure to properly locate correctly any input value within its own field on the card will cause errors in both that input and the number whose field it encroaches on.

J. CASE OPTIONAL OUTPUT INDICATORS

The program has two variables that control the output printout, variable 91, SKIPIN, and 98, PRINT. The program will automatically produce a printout of the case input data for each case and a one-page summary of the inital conditions and iteration limitations the user placed upon the program. It will also produce a one-page summary of the resulting forces, moments and calculated rotor horsepower for the final converged solution. The user can also receive an echo printout of the airfoil and spar data decks. If this echo printout is desired, the user will find the correct printout indicators described in sections C and D

entitled Blade and Spar Data Deck Requirements.

The main optional printout variable is variable 98, PRINT. PRINT can be a number from 1 to 1,111,111 depending upon the option desired. If no value is enter for PRINT, the user will receive the printout described above. Below, is listed the PRINT Options. If, for example, PRINT is assigned a value of 111, the user will receive printout options 1, 10 and 100.

OPTIONAL OUTPUT INDICATORS

Option 1	Angle of attack, Mach number, section lift and drag coefficients, inflow angle, lift, and sweep angle at each azimuthal position for each radial blade segment. Only for converged flapping solution.
Option 10	Converged flapping angle, rate, and acceleration at each azimuthal position.
Option 100	Converged integrated forces on blade at each azimuthal station.
Option 1000	Harmonic analysis of blade forces for converged case.
Option 10000	Harmonic analysis of air loads for converged case.

DEBUGGING OR TRANSIENT OPTIONS

Option 100000	Transient flapping angle, rate, and acceleration at each azimuthal station.
Option 1000000	Option 100000 plus blade velocities, angles, Mach number, section coefficients, and lift for each blade segment at each azimuthal station.

The user is cautioned that the debugging options can give a huge amount of output data.

The second printout option is the variable SKIPIN, number 91. This variable controls the summary force, moment and horsepower output discussed in the first paragraph. If SKIPIN is greater than zero, this summary will be printed only for the final converged solution. If SKIPIN is equal to zero or a negative number, this summary will be printed for each loop through the major iteration (force summation) routine. SKIPIN has a default value of one. If the program is not converging to a solution, the user can see immediately, with very little extra printout, exactly what intermediate solutions the program is producing by setting SKIPIN equal to zero. This may help the user in deciding whether or not to use the Iteration Gain Factor, IGC, variable 123.

K. IBM 360 EXECUTION CONTROL CARDS

This section illustrates the control cards required to execute the GRP program using the IBM 360 at the Naval Postgraduate School. The program may be run under OS or CP/CMS. There are two ways of running the program under OS. The first is to run the entire program and data through the computer at the same time. The second way is to store the main program on a disk as a library program and enter only the data through the card reader for each desired case. The second method has the two advantages of (1) not requiring the user to enter the entire 1100 card main program through the card reader for each run and (2) the amount of CPU time required can be reduced since the main program does not have to be recompiled for each run. The program requires approximately one minute and forty seconds of CPU time to compile. The normal run time for each case is approximately

20 CPU seconds. This can vary with the amount of printout data requested. If the program is compiled on the CP/CMS, the user will have to request 344K bytes core size on the login message. The standard 256K bytes core size is not large enough for compiling. However, once the program has been compiled, it can be executed within the 256K normally available.

The following cards are required to execute the entire program through the card reader at one time.

```
Standard Job Card
// EXEC FORTCLG,REGION.FORT=150K
// REGION.GO=180K
//FORT.SYSIN DD *
Main GRP Program
/*
//GO.SYSIN DD *
Case Input Data
/*
```

The following two programs are used to reserve space and load the program onto a disk.

```
Standard Job Card
// EXEC PGM=IEFBR14
//LOAD DD DSN=S1395.HELO,UNIT=3330,VOL=SER=DISK01
// DISP=(NEW,KEEP),LABEL=RETPD=150,SPACE=(CYL,(1,1,1))
/*
Standard Job Card
// EXEC FORTCL,REGION.FORT=180K
//FORT.SYSIN DD *
Main GRP Program
/*
// LINK.SYSLMOD DD UNIT=3330,VOL=SER=DISK01,
// DSN=S1395.HELO(GRP),DISP=SHR
```

The S1395 used above and below must be change to S for student or F for faculty with the appropiate user number instead of 1395. The following cards must be used to

execute the program once stored on a disk.

```
Standard Job Card
//GO EXEC PGM=GRP,REGION=180K
//STEPLIB DD UNIT=3330,VOL=SER=DISK01,DISP=SHR,
// DSN=S1395.HELO
//FT06F001 DD SYSOUT=A,DCB=(RECFM=FBA,LRECL=133,BLKSIZE=3325
//FT05F001 DD *
Case Input Data
/*
```

J. Sample Program Output

This section describes in detail the output available from the GRP program. In addition, a sample computer output is included with each describtion. The program will print up to ten different tables. Seven of these tables are optional and are not automatically printed. The ten tables are as follows.

1. Echo Printout of Rotor Blade and Spar Data
2. Case Input Data Card Listings
3. Summary of Input Data
4. Debugging or Transient Information (Options 100,000 and 1,000,000)
5. Summary of Forces, Moments and Horsepower
6. Converged Flapping Sclution (Option 10)
7. Converged Integrated Forces (Option 100)
8. Harmonic Analysis of Z Force (Option 1000)
9. Converged Blade Analysis (option 1)
10. Harmonic Analysis of Air Loads (Option 10,000)

The input variable PRINT, item 98, controls the output of items four and six through ten. Items two, three and five are always outputed. Item one is controlled by the first data card on the rotor blade and spar section input decks.

1. Echo Rotor Blade Printout

The next page contains a partial sample Echo Printout of Rotor Blade Input Data. This printout illustrates that (1) the printout was requested (WBLADE = 10.), (2) there are two airfoil decks to be entered, (3) there are nine Mach numbers for which CL's are to be read in and (4) the remaining portion of the printout is the values of Mach numbers, angles of attack and lift coefficients for the first airfoil deck.

2. Input Data Card Listing

The next page contains a sample Case Input Data Card Listing. This is one of the automatic printouts. It is an echo printout of the input data cards

INPUT CARD LISTING

5	1	724.5598535156	26.8259865723	1148.6298828125	0.0022459999	4.0000000000
1	6	60.0000000000				
5	7	0.0465999991	0.0973999950	0.0573999994	0.0995999703	0.0999999642
5	12	0.0999999642	0.0610999987	0.0599999987	0.0599999987	0.0599999987
5	17	0.0599999987	0.0599999987	0.0625000000	0.0346999988	0.0116999999
1	22	0.0259999975				
5	23	9.7799997330	9.7799997330	9.0000000000	7.2199993134	5.3299999237
5	28	3.8899999856	2.6699991226	1.8259999237	0.2199999690	-0.3299999619
5	33	-0.6699999571	-3.3299999237	-3.5599994659	-3.3299999237	-2.7799997330
5	43	1.0000000000	1.2409992218	1.7129993439	1.7129993439	1.7129993439
5	58	1.7409992218	1.7409992218	1.7409992218	1.7409992218	1.6699998856
5	63	1.6699998856	1.7229995728	1.7229995728	1.7229995728	1.7229995728
1	74	20829.0000000000				
2	76	25.0000000000	10.0000000000			
2	78	99.0000000000	1450.0000000000			
1	84	0.0019999999				
1	93	15.0000000000				
1	95	35.7599877930				
1	98	111.0000000000				
1	107	1.0000000000				
2	156	22.0000000000	-22.0000000000			
2	158	20.0000000000	10.0000000000			
2	166	2.0000000000	2.0000000000			
4	168	2.0000000000	2.0000000000	2.0000000000	2.0000000000	
-1	99	-1.0000000000				

3. Summary of Input Data

The next page contains the automatic Summary of Input Data printout. The following information can be seen on this sample output.

a. The blade was divided into 15 segments starting from the hinge offset and proceeding outward.

b. No values were entered for the local mass desnsity, input variables 38 - 52. Instead, values for the First Moment, M(M) = 85, and the Second Moment, MOM - INERTIA = 1450, about the Flapping Hinge, input items 78 and 79, were entered.

c. The X row indicates the calculated centers of each segment expressed in a percentage of the distance out the rotor blade.

d. The BLADE DECK row indicates that the first blade segment was considered a Spar segment. Segments two through five and twelve through fifteen belong to airfoil data deck number one, while segments six through eleven belong to airfoil data deck number two.

e. The rest of the information, with one exception, is a summary of the case input data. The exception is the term THRUST FACTOR. This is the value used to nondimensionalize all the calculated forces in the program. The THRUST FACTOR equals $\rho \pi R^2 (\Omega R)^2$. Moments are nondimensionalized by the THRUST FACTOR times the radius.

f. The program checks to see if all the blade segments, delta X's, plus the distance from the shaft to the hinge offset, E/R, add up to one. If, on the printout, SUM(DX) + E/R does not equal one, the user has made a mistake somewhere with the delta X's or in the E/R number.

NAVAL AIR SYSTEMS COMMAND AIRFRAME DIVISION AERO & HYDRO BRANCH PERFORMANCE SECTION ROTARY WING UNIT
UNITED STATES NAVY DEPARTMENT OF DEFENSE(?)

INPUT QUANTITIES

STATION	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
MASS SLUG/FT	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
DELTA X	0.0574	0.0574	0.0586	0.1000	0.1000	0.0611	0.0600	0.0600	0.0600	0.0600	0.0600	0.0625	0.0347	0.0117	0.0300
X	0.0573	0.1727	0.2507	0.3500	0.4500	0.5305	0.5911	0.6511	0.7111	0.7711	0.8311	0.8923	0.9409	0.9641	0.9850
CHORD FEET	1.0000	1.2410	1.7130	1.7130	1.7130	1.7410	1.7410	1.7410	1.7410	1.7410	1.6700	1.6700	1.7230	1.7230	1.7230
TWIST DEG.	9.7800	9.7800	9.0000	7.2200	5.3300	3.8900	2.6700	1.8300	0.2200	-0.3300	-0.6700	-3.3300	-3.5600	-3.3300	-2.7800
BLADE DESK	0.	1.	1.	1.	1.	2.	2.	2.	2.	2.	2.	1.	1.	1.	1.

CASE NO. 1

OMEGA-R	= 724.60	FT/SEC	AG	= 0.0	DEGREES	
RADIUS	= 26.83	FEET	BG	= 90.00	DEGREES	
SPEED OF SOUND	= 1148.63	FEET/SEC	CG	= 0.0	DEGREES	
RHO	= 0.0022460	SLUGS/CUBIC FT.	TAN DELTA 3	= 0.0		
G	= 32.20	FEET/SEC SQ.	E/R	= 0.0466		
NO. BLADES (B)	= 4		DELTA DRAG	= 0.0020		
TIP MACH NO.	= 0.6308		MOM-INERTIA	= 1450.0000000	SLUG FEET SQ.	
SIGMA	= 0.0887		SLP(DX)*E/R	= 1.0000		
M(M)	= 85.00000000	SLUG FEET	VELOCITY	= 60.00	KNOTS	
THRUST FACTOR	= 2666839.		DELTA PSI	= 15	DEGREES	
FLAP DAMPER	= 0.	FT. LB./RADIAN/SEC.	FINGE SPRING	= 0.	FT. LB./RADIAN	
IT. GAIN CON.	= 1.00		PRE-CONING	= 0.0	DEGREES	
TAN D3 BAR	= 0.0		D3 BAR PHASE	= 0.0	DEGREES	
FS(CG)	= 0.0	INCHES	V(Y)S	= 0.0	KNOTS	
FS(MR)	= 0.0	INCHES	PSI *	= 0.0	RADIANS/SEC	
WL(CG)	= 0.0	INCHES	PHI *	= 0.0	RADIANS/SEC	
WL(MR)	= 0.0	INCHES	THETA(F) *	= 0.0	RADIANS/SEC	

TOLERANCE ON BETA = 0.00100 TOLERANCE ON BETA* = 0.00100 FLAPPING ITERATION LIMIT = 15

REQUIRED LIFT = 20829.00 REQUIRED DRAG = -412.88 MAJOR ITERATION LIMIT = 15

LIFT TOLERANCE= 25.00 DRAG TOLERANCE= 10.00

4. Debugging or Transient Information

The next page illustrates the Debugging or Transient Printout. This is PRINT Option 1,000,000. The information available includes flapping angles, rates and accelerations at each azimuthal position with a radial position display of UP, UT, U, PHI, Angle-of-Attack, Mach Number, CL, CD and Lift Per Inch produced.

This option is generally outputed only when the user is experiencing unknown difficulties with the GRP program. The program will output all of the above information for every revolution and iteration until a converged solution is obtained or the program runs out of allowable computer time. If desired, the variable SKIPIN, item 91, will provide a printout of the Forces, Moments and Horsepower Summary after each major iteration.

PSI = 15 DEGREES REV 1 BETA = 0.00000129 BETA* = 0.00000122 BETA** = 0.07691574

UP	UT	U	PHI	ALPHA	MACH NO.	CL	CD	LOAD(LB/IN)
-0.0200004	0.2497559	0.3749867	-3.0574017	2.8446865	0.2352067	0.0	0.0	0.0
-0.0200006	0.3997558	0.4876553	-2.3494234	3.9032383	0.3060275	0.4142136	0.0085000	8.2283955
-0.0200008	0.5497558	0.6166213	-1.8581762	3.8629398	0.3868950	0.4161850	0.0085000	14.3783274
-0.0200010	0.6747558	0.7304330	-1.5690800	3.4327545	0.4581569	0.3847123	0.0090816	19.3185425
-0.0200011	0.7747557	0.8237011	-1.3913908	2.9472160	0.5166584	0.3413848	0.0095000	22.1963854
-0.0200012	0.8747557	0.9183869	-1.2479219	2.3826094	0.5760491	0.2830660	0.0095000	23.1671753
-0.0200013	0.9497556	0.9900873	-1.1575413	1.9227781	0.6210224	0.2388178	0.0083604	22.3795319
-0.0200014	0.9997556	1.0391460	-1.1039524	1.6029921	0.6511668	0.2087631	0.0079535	22.0744781
-0.0200014	1.0347548	1.0716927	-1.0691948	1.3738913	0.6723341	0.1847415	0.0085567	20.8727417
-0.0200014	1.0597553	1.0960464	-1.0456314	1.2078753	0.6874843	0.0	0.0094483	-0.0211184

PSI = 30 DEGREES REV 1 BETA = 0.00262245 BETA* = 0.01990843 BETA** = -0.01094304

UP	UT	U	PHI	ALPHA	MACH NO.	CL	CD	LOAD(LB/IN)
-0.0221490	0.3194170	0.4063405	-3.1246576	2.2969646	0.2548730	0.0	0.0	0.0
-0.0251353	0.4694165	0.5325208	-2.7053986	2.3056164	0.3340184	0.2459640	0.0085000	6.2571630
-0.0281216	0.6194159	0.6686267	-2.4104948	1.7392778	0.4193855	0.1902028	0.0086939	8.3114864C
-0.0306101	0.7444155	0.7859301	-2.2320976	1.0615234	0.4929668	0.1215528	0.0094297	7.2215648
-0.0326010	0.8444151	0.8813027	-2.1199560	0.4442472	0.5527884	0.0522213	0.0095000	3.7374790
-0.0345918	0.9444147	0.9776045	-2.0277910	-0.2160130	0.6131927	-0.0264918	0.0095427	-2.5266533
-0.0360849	1.0194139	1.0502863	-1.9689112	-0.7313929	0.6587816	-0.0963657	0.0101449	-10.3587292
-0.0370803	1.0694141	1.0989151	-1.9336796	-1.0824280	0.6892836	-0.1492200	0.0102973	-17.0221151
-0.0377771	1.1044140	1.1320271	-1.9106960	-1.3311462	0.7106800	-0.1947136	0.0111277	-24.8904114
-0.0382749	1.1294136	1.1574259	-1.8950567	-1.5101538	0.7259839	0.0	0.0145737	-0.0658250

PSI = 45 DEGREES REV 1 BETA = 0.00740225 BETA* = 0.01039780 BETA** = -0.08475673

UP	UT	U	PHI	ALPHA	MACH NO.	CL	CD	LOAD(LB/IN)
-0.0227411	0.3792349	0.4314013	-3.0217161	1.4916553	0.2705922	0.0	0.0	0.0
-0.0252008	0.5292307	0.5678830	-2.5434294	1.1178379	0.3561590	0.1197473	0.0085000	3.0569128
-0.0276604	0.6792266	0.7098483	-2.2331905	0.3754587	0.4452453	0.0417392	0.0089524	2.0339022
-0.0297101	0.8042231	0.8303182	-2.0505733	-0.3796406	0.5208089	-0.0440540	0.0095000	-3.0232067
-0.0313499	0.9042203	0.9275603	-1.9368658	-1.0355816	0.5818030	-0.1233279	0.0095000	-10.3742922
-0.0329897	1.0042171	1.0253344	-1.8437862	-1.7222605	0.6431308	-0.2215279	0.0078106	-23.2830352
-0.0342195	1.0792150	1.0989285	-1.7844200	-2.2520905	0.6892920	-0.3104696	0.0078566	-37.5716555
-0.0350394	1.1292133	1.1480942	-1.7489185	-2.6108971	0.7201307	-0.3836758	0.0222078	-51.4666595
-0.0356134	1.1642122	1.1825614	-1.7257614	-2.8643351	0.7417436	-0.4490120	0.0362347	-63.1824493
-0.0360233	1.1892119	1.2071829	-1.7100035	-3.0463991	0.7571535	0.0	0.0468242	-0.2076074

5. Forces Summary

The next printout illustrates the Summary of Forces, Moments and Horsepower. This page is automatically outputed for the converged solution. A printout of this summary can be obtained for each loop through the major iteration routine by the use of the input variable SKIPIN, item 91. The following information can be observed from this sample printout.

a. The cyclic lateral and longitudinal inputs, A1S, B1S, A2S and B2S are printed at the top of the page. This example indicates that there were no second harmonic inputs for A2S and B2S, which is normal.

b. THETA .75 is the pitch angle of the blade at the 75 percent radius station at the PSI equals zero azimuthal position. In most options the program will iterate upon the values for THETA .75 in its search for a converged solution.

c. LAMBDA refers to the converged value for the uniform inflow ratio. If a rate of climb or descent was used in the case, that rate divided by the tip speed would have to be subtracted from or added to this value of LAMBDA, respectively.

d. MU(X)S and MU(Y)S are the advance ratios in the longitudinal and lateral directions with respect to the shaft axis.

e. CT, CQ, CH, CL and CD are the calculated overall coefficients of Thrust, Torque, H Force, Lift and Drag. All of these items are nondimensionalized by the value of the Thrust Factor.

f. Lift and Drag forces are calculated with respect to the relative wind axis. Thrust and H forces are calculated with respect to the control axis. Z forces are calcuated with respect to the shaft axis. X and Y forces are calculated perpendicular to the shaft axis.

g. The Equivalent Drag is the total drag force created by the fuselage, flat plate area times dynamic

pressure, plus the profile drag created by the turning rotor system.

h. The Equivalent P. A., or Equivalent Flat Plate area is obtained by dividing the Equivalent Drag by the dynamic pressure.

i. Alpha(S) is the shaft axis orientation while Alpha(C) is the control axis orientation. The program uses momentum theory to calculate Alpha(S). Alpha(C) is determined from the following relationship, Alpha(S) = Alpha(C) + B1S.

j. LAT. DIS. and LONG. DIS. are the lift vector offset as a percentage of the rotor radius from the rotor shaft to create the program's rolling and pitching moments.

K. PM and RM are the calculated aerodynamic pitch and roll moments about the shaft axis. The SHEARS Hub Pitch and Roll Moments are calculated from summing the aerodynamic, inertia and elastic hub restraint moments.

A1S	B1S	A2S	B2S	THETA .75-	LAMBDA(S)	ML(X)S	ML(Y)S
-1.2C	7.5?	0.C	0.C	6.5E	-0.0166	0.1355	0.0

CL = 7.8C?315E-C?	CF = 3.037455E-C4	CL* = 7.8CE775E-C3	CD* = -1.545?43E-04		
CL/SIGMA= 8.752CE4?E-?2	CH/SIGMA= 4.?98933E-03	CL*/SIGMA= 8.7553E8E-C2	CD*/SIGMA= -1.745775E-03		
CC = 3.E123E3E-C4	CC*/SIGMA= 4.C7C614E-03				

LIFT	=	2CE24.746	POUNDS	X FORCE	= 1764.641	POUNDS	RESULTANT	= 2CE3C.715 POUNDS
DRAG	=	-413.15E	POUNDS	Y FORCE	= -279.744	POUNDS	ROLL MOM	= -2E59.6ES FT-POUNDS
HORSEPOWER	=	1265.1E1		Z FORCE	= -20753.5E1	POUNDS	PITCH MOM	= -1CE5C.344 FT-POUNDS
EQUIV DRAG	=	E482.754	POUNDS	EQUIV L/D	= 3.212		EQUIV F.A.	= 5E2.175 SQ. FEET
ALPHA(S)	=	3.723	DEGREES	THRUST	= 20807.523	POUNDS	TORQUE	= 25E46.514 FT-POUNDS
ALPHA(C)	=	-3.8C7	DEGREES	H FORCE	= 97C.CE1	POUNDS	PROFILE HP	= 434.67C
LAT. DIS.	=	-C.512	PERCENT	V(ACTUAL)	= 6C.CCO	KNOTS	LONG. DIS.	= -1.512 PERCENT

SHEARS FOR PITCH MOMENT = -14468.5C FT-LBS

SHEARS FOR ROLL MOMENT = -1524.55 FT-LBS

MAJOR ITERATIONS USED = 4

****

6. Flapping Solution

The next page contains a sample printout of the converged flapping solution. The first item tc appear are the flapping values at the PSI equal zero azimuthal position for each revolution prior to the converged revolution on the final iteration. The values for flapping angle and its first two derivatives are expressed in radians.

The second part of this printout is the actual flapping values for the converged revoltion. The difference between the flapping angles and rates between the PSI equal zero and 360 degree position must be less than the tolerances entered in variables 101 and 102. The numbers here are also in radians. The last item is a Fourier coefficient series for the flapping angle and it is calculated in degrees. All calculations are done in respects to the shaft axis. This is PRINT Option 10.

REV	BETA(0)	BETA*(0)	BETA**(0)
1	0.1612208	-0.0006631	-0.0801615

EQUILIBRIUM SOLUTION REV = 2

PSI	BETA	BETA*	BETA**
0	0.1611688	-0.0006371	-0.0802611
15	0.1582695	-0.0213815	-0.0781103
30	0.1500716	-0.0406762	-0.0723564
45	0.1369525	-0.0584694	-0.0651056
60	0.1196410	-0.0733277	-0.0522801
75	0.0986610	-0.0843651	-0.0339573
90	0.0756699	-0.0902743	-0.0106493
105	0.0521555	-0.0900002	0.0152746
120	0.0293607	-0.0829859	0.0417729
135	0.0099257	-0.0695340	0.0656643
150	-0.0068775	-0.0499514	0.0846316
165	-0.0164170	-0.0263258	0.0961479
180	-0.0199544	-0.0005435	0.0992155

PSI	BETA	BETA*	BETA**
180	-0.0199544	-0.0005439	0.0992155
195	-0.0167111	0.0251754	0.0944366
210	-0.0069763	0.0487640	0.0821527
225	0.0068444	0.0683656	0.0637284
240	0.0283097	0.0825296	0.0409762
255	0.0510662	0.0903225	0.0161110
270	0.0749524	0.0914150	-0.0066743
285	0.0983567	0.0860550	-0.0312451
300	0.1195645	0.0750349	-0.0500851
315	0.1372763	0.0595151	-0.0642651
330	0.1504520	0.0408531	-0.0734946
345	0.1585612	0.0204353	-0.0767464
360	0.1611680	-0.0006382	-0.0802550

FOURIER COEFFICIENTS (WITH RESPECT TO THE SHAFT)

BETA (DEG) = A0-A1*COS(PSI)-B1*SIN(PSI)-A2*COS(2*PSI)-B2*SIN(2*PSI).....

A0	A1	A2	A3	A4	A5	A6
4.1835E-CC	-5.1923E-CC	1.3858E-01	3.7765E-03	-3.8579E-04	-1.5728E-04	-7.5641E-05

B1	B2	B3	B4	B5	B6
-1.8501E-02	1.6657E-02	6.8623E-03	1.8390E-04	3.0041E-05	-7.6532E-05

7. Force Integration

The next table is a sample Force Integration Output. This is PRINT Option 100. The forces are a printout for one blade only at a particular azimuthal position. CQ, CQL and CQD are the Coefficients of Torque, Torque due to Lift and Torque due to Drag. CQ is calculated from CQ = CQD - CQL. CX, CY and CZ are all related to forces in the shaft axis reference system. CMHS is the Coefficient of Pitching Moment due to aerodynamic, inertia and hub elastic restraint moments about the Shaft Axis and CLHS is the Coefficient of Rolling Moment due to these same forces. In the printout the (B) character is the number of blades, which in this example is four. SIG is the solidity of the rotor system. MAX B*CQD/SIGMA is a blade stall indicator. It is calculated by determining the first azimuthal station between the PSI equal 180 degree and 360 degree position that has a value of CQD greater than the value of CQD at the PSI equal 180 degrees azimuthal position.

FORCE INTEGRATION

PSI	CC	CCL	CCD	CZ	CX	CY	CMMS	CLFS
15	8.7047E-05	-5.3848E-05	3.3199E-05	-2.1938E-03	3.0123E-04	-2.2865E-04	-1.7954E-04	-4.8107E-05
30	5.8578E-05	-2.2839E-05	3.5739E-05	-2.1772E-03	2.3518E-04	-2.5107E-04	-1.5615E-04	-9.0152E-05
45	3.3397E-05	3.9450E-06	3.7342E-05	-2.1242E-03	1.6532E-04	-2.4881E-04	-1.1976E-04	-1.1976E-04
60	1.3576E-05	2.4695E-05	3.8271E-05	-2.0638E-03	1.0287E-04	-2.2709E-04	-7.6551E-05	-1.3259E-04
75	-4.2579E-06	3.9579E-05	3.9536E-05	-2.0289E-03	5.3344E-05	-1.9406E-04	-3.4142E-05	-1.2742E-04
90	-8.5750E-06	4.9028E-05	4.0453E-05	-2.0257E-03	1.7920E-05	-1.5403E-04	-1.3537E-10	-1.0675E-04
105	-1.2459E-05	5.2720E-05	4.0260E-05	-2.0482E-03	-3.8206E-06	-1.0967E-04	2.0545E-05	-7.6675E-05
120	-1.0206E-05	4.9239E-05	3.9128E-05	-2.0795E-03	-1.3777E-05	-6.2600E-05	2.5934E-05	-4.4915E-05
135	2.2966E-07	3.7633E-05	3.7863E-05	-2.1026E-03	-1.3753E-05	-1.3581E-05	1.8857E-05	-1.8857E-05
150	1.8757E-05	1.7279E-05	3.6036E-05	-2.0967E-03	-4.0616E-06	3.3779E-05	5.2024E-06	-3.0036E-06
165	4.3346E-05	-5.8276E-06	3.3518E-05	-2.0567E-03	1.4365E-05	7.6855E-05	-8.0343E-06	2.1528E-06
180	7.0767E-05	-4.0405E-05	3.0362E-05	-1.9830E-03	3.9575E-05	1.1188E-04	-1.5161E-05	6.7355E-11
195	9.8732E-05	-7.1089E-05	2.7643E-05	-1.8950E-03	6.9850E-05	1.3832E-04	-1.3524E-05	-3.6235E-06
210	1.2479E-04	-9.9211E-05	2.5581E-05	-1.8005E-03	1.0414E-04	1.5525E-04	-4.4115E-06	-2.5469E-06
225	1.4691E-04	-1.2303E-04	2.3880E-05	-1.7138E-03	1.4078E-04	1.6125E-04	7.6843E-06	7.6842E-06
240	1.6406E-04	-1.4162E-04	2.2447E-05	-1.6461E-03	1.7552E-04	1.5747E-04	1.6271E-05	2.8162E-05
255	1.7650E-04	-1.5492E-04	2.1579E-05	-1.6106E-03	2.1026E-04	1.4397E-04	1.5031E-05	5.6099E-05
270	1.8439E-04	-1.6283E-04	2.1558E-05	-1.6120E-03	2.5528E-04	1.2112E-04	6.4878E-10	8.5166E-05
285	1.8770E-04	-1.6554E-04	2.2158E-05	-1.6545E-03	2.9744E-04	8.9319E-05	-2.8877E-05	1.0777E-04
300	1.8626E-04	-1.6279E-04	2.3413E-05	-1.7362E-03	3.3381E-04	4.8128E-05	-6.7752E-05	1.1735E-04
315	1.7860E-04	-1.5363E-04	2.4968E-05	-1.8445E-03	3.6279E-04	-2.4277E-06	-1.0992E-04	1.0992E-04
330	1.6451E-04	-1.3781E-04	2.6657E-05	-1.9696E-03	3.8123E-04	-6.2955E-05	-1.4790E-04	8.5395E-05
345	1.4333E-04	-1.1448E-04	2.8855E-05	-2.0771E-03	3.7764E-04	-1.2611E-04	-1.7493E-04	4.6874E-05
360	1.1726E-04	-8.5470E-05	3.1813E-05	-2.1531E-03	3.5005E-04	-1.8527E-04	-1.8616E-04	2.0091E-05
AVERAGE	9.0309E-05	-5.9380E-05	3.0929E-05	-1.9456E-03	1.6542E-04	-2.6224E-05	-5.0553E-05	-5.3266E-06
(B) * AVE.	3.6124E-04	-2.3752E-04	1.2372E-04	-7.7822E-03	6.6170E-04	-1.0490E-04	-2.0221E-04	-2.1307E-05
(B)*AV/SIG	4.0706E-03	-2.6765E-03	1.3941E-03	-8.7695E-02	7.4564E-03	-1.1820E-03	-2.2786E-03	-2.4010E-04

MAX B*CQC/SIGMA = 0.0013C1 AT PSI = 345

8. Harmonic Analysis of Z Force

The following is a harmonic analysis of the forces in the Z or shaft axis direction. Z force is positive in the downward direction. This is PRINT Option 1000.

HARMONIC ANALYSIS OF DIMENSIONAL CZ

CZ = A0+A1*COS(PSI)+B1*SIN(PSI)+A2*COS(2*PSI)+B2*SIN(2*PSI).....

A0	A1	A2	A3	A4	A5	A6
-4.7E 02	-2.3E 02	-2.4E 02	-1.7E 01	8.8E 00	-1.1E 00	3.0E 00

B1	B2	B3	B4	B5	B6
-3.8E 02	-5.7E 00	-4.1E 01	-2.7E 00	-3.5E-01	6.5E 00

9. Converged Blade Analysis

The next four pages contain the sample overall summary of events occuring on the blade at each azimuthal and radial position. This is PRINT Option 1. Variable 121, PPSI, controls the azimuthal intervals that are printed out. The output items are as follows.

a. X - Center location of the blade segment
b. ALPHA - Angle-of-Attack
c. MACH - Local Mach number
d. CL - Local Coefficient of Lift
e. CD - Local Coefficient of Drag
f. PHI - Local Inflow Angle
g. L(LB/IN) - Lift produced per inch on segment
h. Sweep - Sweep Angle of airflow

PSI = 15 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0553	-0.323	0.121	0.0	0.009	-11.545	-0.003	46.11
0.1727	4.553	0.158	0.566	0.011	-8.464	2.135	33.27
0.2507	7.387	0.200	0.819	0.012	-6.377	6.872	25.56
0.3500	7.555	0.257	0.803	0.013	-4.662	12.261	19.58
0.4500	7.555	0.316	0.851	0.013	-3.543	17.925	15.76
0.5305	6.902	0.364	0.933	0.013	-2.931	26.562	13.63
0.5911	6.140	0.401	0.861	0.013	-2.518	29.715	12.36
0.6511	5.665	0.438	0.816	0.013	-2.202	32.530	11.31
0.7111	4.312	0.474	0.670	0.012	-1.934	32.349	10.43
0.7711	4.074	0.511	0.646	0.012	-1.704	38.903	9.67
0.8311	3.545	0.548	0.665	0.014	-1.504	46.011	9.01
0.8923	1.503	0.586	0.269	0.010	-1.327	19.618	8.43
0.9405	1.122	0.619	0.228	0.010	-1.201	18.383	28.01
0.9641	1.385	0.639	0.270	0.010	-1.145	22.777	27.83
0.9850	1.924	0.643	0.0	0.011	-1.097	-0.018	27.67

PSI = 30 DEGREES

ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
1.807	0.131	0.0	0.010	-5.535	-0.003	36.61
5.567	0.172	0.670	0.011	-4.601	2.956	26.85
7.651	0.216	0.851	0.013	-4.711	8.333	21.01
7.853	0.274	0.868	0.013	-3.169	13.757	16.36
7.174	0.334	0.827	0.013	-2.156	19.522	13.34
6.410	0.383	0.885	0.013	-1.570	27.912	11.61
5.550	0.420	0.803	0.013	-1.215	30.486	10.57
5.072	0.457	0.750	0.013	-0.927	33.666	9.71
3.742	0.494	0.596	0.011	-0.678	31.227	8.98
3.420	0.531	0.581	0.012	-0.464	37.781	8.35
3.274	0.568	0.585	0.013	-0.277	43.884	7.80
0.807	0.606	0.182	0.010	-0.111	14.246	7.31
0.627	0.636	0.162	0.010	0.007	13.562	26.96
0.885	0.650	0.203	0.010	0.060	18.263	26.81
1.423	0.663	0.0	0.011	0.105	0.002	26.68

PSI = 45 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0553	3.256	0.139	0.0	0.010	-7.587	-0.003	27.39
0.1727	6.679	0.182	0.744	0.012	-4.860	3.777	20.36
0.2507	7.905	0.228	0.873	0.013	-3.156	9.815	16.09
0.3500	7.721	0.288	0.854	0.013	-1.772	15.001	12.67
0.4500	6.850	0.350	0.805	0.013	-0.657	20.751	10.42
0.5305	5.991	0.399	0.644	0.012	-0.324	28.882	9.12
0.5911	5.117	0.436	0.753	0.012	-0.003	30.815	8.33
0.6511	4.561	0.474	0.692	0.012	0.265	33.385	7.67
0.7111	3.198	0.511	0.537	0.011	0.494	30.145	7.11
0.7711	2.852	0.548	0.518	0.012	0.692	35.924	6.63
0.8311	2.688	0.585	0.518	0.012	0.864	40.983	6.20
0.8923	0.198	0.623	0.100	0.010	1.019	8.252	5.82
0.9405	0.177	0.654	0.097	0.010	1.129	8.878	25.55
0.9641	0.433	0.668	0.137	0.010	1.178	13.052	25.43
0.9850	0.972	0.681	0.0	0.011	1.220	0.023	25.33

PSI = 60 DEGREES

ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
4.474	0.144	0.0	0.011	-5.826	-0.003	18.33
7.238	0.190	0.800	0.012	-3.329	4.428	13.72
8.087	0.238	0.893	0.013	-1.794	10.671	10.93
7.640	0.295	0.845	0.013	-0.546	15.984	8.67
6.621	0.361	0.789	0.013	0.282	21.766	7.17
5.686	0.411	0.812	0.013	0.766	29.537	6.29
4.770	0.449	0.714	0.012	1.059	30.947	5.76
4.182	0.486	0.648	0.011	1.305	32.973	5.32
2.790	0.524	0.495	0.011	1.515	29.195	4.94
2.424	0.561	0.468	0.011	1.697	34.033	4.61
2.245	0.599	0.461	0.011	1.856	38.163	4.32
-0.265	0.637	0.033	0.010	2.000	2.849	4.06
-0.185	0.666	0.042	0.010	2.101	4.030	23.87
0.069	0.682	0.081	0.010	2.147	8.078	23.75
0.611	0.695	0.0	0.011	2.186	0.042	23.72

PSI = 75 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0553	5.265	0.147	0.0	0.011	-4.406	-0.002	9.33
0.1727	7.612	0.195	0.842	0.013	-2.114	4.908	7.02
0.2507	8.255	0.244	0.911	0.014	-0.717	11.446	5.61
0.3500	7.635	0.306	0.850	0.013	0.419	16.816	4.47
0.4500	6.812	0.368	0.783	0.013	1.175	22.488	3.71
0.5305	5.221	0.415	0.795	0.013	1.620	30.026	3.26
0.5911	4.573	0.457	0.692	0.012	1.889	31.379	2.99
0.6511	3.961	0.499	0.622	0.011	2.115	32.730	2.76
0.7111	2.547	0.532	0.468	0.011	2.309	28.550	2.57
0.7711	2.169	0.570	0.436	0.010	2.477	32.728	2.40
0.8311	1.973	0.608	0.430	0.010	2.625	36.652	2.25
0.8923	-0.553	0.646	-0.011	0.011	2.757	-0.911	2.11
0.9405	-0.433	0.677	0.003	0.011	2.852	0.327	22.02
0.9641	-0.178	0.692	0.042	0.010	2.894	4.284	21.98
0.9850	0.368	0.705	0.0	0.011	2.930	0.060	21.94

PSI = 90 DEGREES

ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
5.785	0.148	0.0	0.011	-3.445	-0.002	0.34
7.919	0.197	0.874	0.013	-1.312	5.184	0.26
8.436	0.246	0.931	0.014	-0.014	11.854	0.20
7.710	0.308	0.861	0.013	1.040	17.300	0.16
6.523	0.371	0.787	0.013	1.742	22.936	0.13
5.496	0.422	0.793	0.013	2.155	30.376	0.12
4.527	0.460	0.687	0.012	2.406	31.260	0.11
3.897	0.498	0.614	0.011	2.616	32.768	0.10
2.468	0.536	0.469	0.011	2.797	28.407	0.09
2.075	0.574	0.425	0.010	2.954	32.298	0.09
1.872	0.612	0.420	0.011	3.091	36.256	0.08
-0.664	0.650	-0.028	0.011	3.215	-2.465	0.08
-0.557	0.681	-0.017	0.011	3.303	-1.641	20.07
-0.302	0.696	0.021	0.011	3.343	2.267	20.07
0.249	0.705	0.0	0.011	3.377	0.071	20.07

PSI = 105 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0553	6.050	0.147	0.0	0.011	-3.023	-0.002	8.67
0.1727	6.133	0.155	0.098	0.013	-0.986	5.234	8.51
0.2507	6.014	0.244	0.551	0.015	0.252	11.568	5.20
0.3500	7.655	0.356	0.674	0.013	1.255	17.356	4.14
0.4500	6.640	0.369	0.758	0.013	1.922	22.038	3.44
0.5305	5.596	0.420	0.804	0.013	2.314	30.515	3.02
0.5911	4.615	0.458	0.697	0.012	2.551	31.460	2.77
0.6511	3.575	0.496	0.624	0.011	2.750	33.015	2.56
0.7111	2.537	0.534	0.466	0.011	2.920	28.705	2.38
0.7711	2.136	0.572	0.433	0.010	3.066	32.680	2.22
0.8311	1.926	0.610	0.425	0.011	3.198	36.531	2.08
0.8923	-0.616	0.649	-0.021	0.011	3.315	-1.784	1.96
0.9405	-0.555	0.679	-0.017	0.011	3.398	-1.641	18.13
0.9641	-0.303	0.694	0.021	0.011	3.435	2.253	18.17
0.9850	0.253	0.707	0.0	0.011	3.467	0.072	18.20

PSI = 120 DEGREES

ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
6.040	0.143	0.0	0.011	-3.148	-0.002	17.75
6.236	0.150	0.909	0.014	-1.151	5.037	13.26
6.775	0.238	0.568	0.015	0.063	11.632	10.55
8.048	0.350	0.888	0.013	1.043	16.929	8.36
6.842	0.363	0.815	0.013	1.650	22.696	6.91
5.756	0.413	0.825	0.013	2.068	30.309	6.06
4.813	0.451	0.719	0.012	2.296	31.511	5.55
4.165	0.485	0.647	0.011	2.487	33.269	5.12
2.725	0.527	0.489	0.011	2.650	29.178	4.75
2.322	0.565	0.455	0.011	2.791	33.524	4.44
2.107	0.603	0.444	0.011	2.915	37.154	4.16
-0.436	0.641	0.037	0.010	3.026	0.676	3.91
-0.448	0.672	0.001	0.011	3.105	0.173	16.27
-0.190	0.687	0.040	0.010	3.140	4.068	16.35
0.365	0.700	0.0	0.010	3.171	0.060	16.42

PSI = 135 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0553	5.706	0.137	0.0	0.011	-3.756	-0.002	26.52
0.1727	8.197	0.182	0.905	0.014	-1.768	4.596	19.94
0.2507	6.654	0.225	0.681	0.016	-0.553	10.878	15.74
0.3500	8.265	0.290	0.512	0.014	0.422	16.158	12.38
0.4500	7.102	0.332	0.835	0.013	1.061	21.840	10.17
0.5305	6.072	0.402	0.653	0.013	1.431	29.627	8.65
0.5911	5.056	0.440	0.750	0.012	1.653	31.190	8.12
0.6511	4.453	0.477	0.688	0.012	1.838	33.265	7.48
0.7111	3.016	0.515	0.517	0.011	1.996	25.450	6.93
0.7711	2.607	0.553	0.488	0.011	2.132	34.370	6.46
0.8311	2.388	0.590	0.477	0.011	2.251	38.387	6.04
0.8923	-0.158	0.629	0.050	0.010	2.357	4.198	5.67
0.9405	-0.231	0.655	0.036	0.010	2.433	3.350	14.55
0.9641	0.027	0.674	0.075	0.010	2.466	7.248	14.71
0.9850	0.585	0.687	0.0	0.011	2.495	0.046	14.81

PSI = 150 DEGREES

ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
4.568	0.130	0.0	0.011	-4.726	-0.002	36.23
7.573	0.171	0.680	0.013	-2.758	3.941	26.51
8.542	0.216	0.587	0.016	-1.531	9.740	20.63
6.485	0.276	0.536	0.014	-0.551	15.035	16.07
7.399	0.337	0.854	0.013	0.065	20.464	13.10
6.355	0.386	0.685	0.013	0.451	28.377	11.35
5.436	0.424	0.787	0.013	0.669	30.383	10.37
4.601	0.461	0.719	0.012	0.845	32.861	9.52
3.371	0.499	0.551	0.011	1.003	29.421	8.80
2.963	0.536	0.525	0.012	1.135	34.812	8.18
2.743	0.574	0.519	0.012	1.250	39.390	7.64
0.207	0.612	0.101	0.010	1.352	8.022	7.16
0.077	0.642	0.082	0.010	1.424	7.260	13.18
0.334	0.667	0.121	0.010	1.457	11.150	13.33
0.697	0.690	0.0	0.011	1.484	0.027	13.46

PSI = 165 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0553	3.704	0.119	0.0	0.010	-5.911	-0.002	45.78
0.1727	7.510	0.157	0.832	0.013	-4.018	3.139	32.89
0.2507	8.858	0.200	0.582	0.016	-2.784	8.305	25.21
0.3500	8.693	0.258	0.655	0.015	-1.792	13.504	19.28
0.4500	7.718	0.318	0.671	0.013	-1.155	18.654	15.52
0.5305	6.762	0.367	0.518	0.013	-0.791	26.645	13.40
0.5911	5.621	0.405	0.626	0.012	-0.576	29.080	12.15
0.6511	5.198	0.442	0.763	0.013	-0.359	31.588	11.12
0.7111	3.779	0.479	0.600	0.011	-0.248	29.562	10.24
0.7711	3.374	0.516	0.543	0.011	-0.120	34.665	9.50
0.8311	3.156	0.554	0.563	0.012	-0.005	39.802	8.85
0.8523	0.627	0.592	0.154	0.010	0.050	11.500	8.27
0.9405	0.466	0.622	0.137	0.010	0.160	11.322	12.13
0.9641	0.721	0.637	0.178	0.010	0.191	15.152	12.31
0.9850	1.285	0.650	0.0	0.011	0.218	0.004	12.47

PSI = 180 DEGREES

ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
1.728	0.108	0.0	0.010	-7.185	-0.002	55.72
6.738	0.141	0.751	0.012	-5.473	2.266	39.00
8.743	0.182	0.565	0.015	-4.233	6.699	29.15
8.682	0.238	0.580	0.016	-3.219	11.722	21.78
8.053	0.288	0.889	0.013	-2.569	16.612	17.26
7.155	0.346	0.554	0.013	-2.202	24.565	14.77
6.241	0.383	0.866	0.013	-1.966	27.324	13.31
5.634	0.420	0.809	0.013	-1.809	30.662	12.12
4.229	0.457	0.652	0.011	-1.660	29.268	11.13
3.831	0.494	0.606	0.011	-1.532	34.197	10.28
3.617	0.532	0.607	0.012	-1.423	39.582	9.55
1.056	0.570	0.209	0.010	-1.326	14.402	8.91
0.919	0.600	0.197	0.010	-1.257	15.037	11.55
1.173	0.615	0.235	0.010	-1.227	18.882	11.75
1.735	0.628	0.0	0.010	-1.201	-0.018	11.92

PSI = 195 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0553	-1.270	0.094	0.0	0.009	-0.507	-0.002	66.23
0.1727	5.553	0.122	0.625	0.011	-7.123	1.414	44.67
0.2907	8.461	0.161	0.934	0.014	-5.048	5.070	32.18
0.3500	9.057	0.216	0.999	0.016	-4.762	5.835	24.28
0.4500	8.404	0.275	0.927	0.014	-4.071	14.814	18.07
0.5305	7.574	0.324	0.992	0.014	-3.686	22.316	15.28
0.5911	6.650	0.361	0.908	0.013	-3.460	25.356	13.67
0.6511	6.104	0.398	0.856	0.013	-3.277	29.041	12.38
0.7111	4.714	0.435	0.706	0.012	-3.123	28.620	11.31
0.7711	4.326	0.472	0.664	0.012	-2.993	34.055	10.41
0.8311	4.120	0.509	0.650	0.012	-2.881	38.827	9.64
0.8923	1.604	0.547	0.265	0.010	-2.782	16.869	8.96
0.9405	1.413	0.578	0.254	0.010	-2.713	17.972	11.51
0.9641	1.666	0.592	0.294	0.010	-2.682	21.883	11.72
0.9850	2.228	0.605	0.0	0.010	-2.656	-0.037	11.90

PSI = 210 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
	-5.815	0.079	0.0	0.010	-10.001	-0.001	78.06
	3.774	0.101	0.435	0.010	-5.146	0.675	49.55
	8.038	0.135	0.887	0.013	-3.666	3.562	33.75
	9.216	0.164	1.017	0.017	-2.396	8.008	23.34
	8.764	0.243	0.967	0.015	-2.595	13.001	17.64
	8.007	0.302	1.031	0.014	-2.160	20.083	14.70
	7.156	0.329	0.951	0.013	-2.909	23.371	13.06
	6.593	0.376	0.903	0.013	-2.708	27.281	11.75
	5.218	0.413	0.760	0.012	-2.540	27.745	10.68
	4.643	0.450	0.723	0.012	-2.399	33.695	9.78
	4.648	0.488	0.704	0.012	-2.279	38.513	9.02
	2.136	0.526	0.322	0.010	-2.173	18.871	8.36
	1.512	0.556	0.305	0.010	-2.095	20.263	12.10
	2.165	0.571	0.350	0.010	-2.066	24.134	12.30
	2.726	0.584	0.0	0.011	-2.038	-0.054	12.47

PSI = 225 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0553	-167.175	-0.064	0.0	0.176	-167.527	-0.018	91.64
0.1727	1.072	0.075	0.144	0.010	-12.077	0.135	53.05
0.2907	7.462	0.116	0.826	0.012	-4.524	2.312	32.52
0.3500	9.356	0.172	1.032	0.017	-8.113	6.381	21.35
0.4500	9.117	0.252	1.006	0.016	-7.080	11.336	15.66
0.5305	8.435	0.281	1.078	0.014	-6.545	18.184	12.64
0.5911	7.617	0.319	0.995	0.014	-6.246	21.559	11.31
0.6511	7.075	0.356	0.949	0.013	-6.005	25.671	10.11
0.7111	5.718	0.393	0.811	0.012	-5.815	26.800	9.13
0.7711	5.355	0.431	0.775	0.013	-5.653	33.180	8.33
0.8311	5.176	0.468	0.765	0.013	-5.516	38.487	7.66
0.8923	2.468	0.507	0.378	0.010	-5.397	20.485	7.07
0.9405	2.372	0.537	0.358	0.010	-5.314	21.850	13.33
0.9641	2.627	0.552	0.399	0.010	-5.278	25.697	13.51
0.9850	3.188	0.565	0.0	0.011	-5.247	-0.068	13.66

PSI = 240 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
	-156.154	-0.048	0.0	0.375	-164.381	-0.029	110.24
	-3.271	0.057	-0.322	0.009	-17.343	-0.155	63.15
	6.428	0.095	0.749	0.012	-12.806	1.395	36.05
	9.458	0.153	1.043	0.017	-8.870	5.050	16.80
	9.427	0.214	1.040	0.017	-8.439	9.560	11.87
	8.819	0.264	1.120	0.015	-7.751	16.654	9.55
	8.035	0.302	1.035	0.014	-7.375	20.115	8.37
	7.524	0.340	0.992	0.014	-7.090	24.405	7.44
	6.175	0.377	0.857	0.013	-6.857	26.015	6.69
	5.838	0.415	0.831	0.013	-6.665	32.771	6.08
	5.671	0.453	0.820	0.013	-6.505	38.508	5.57
	3.168	0.491	0.433	0.010	-6.366	22.063	5.13
	3.055	0.522	0.397	0.010	-6.271	22.829	15.18
	3.557	0.537	0.439	0.010	-6.229	26.670	15.31
	3.571	0.550	0.0	0.011	-6.193	-0.077	15.42

PSI = 255 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0553	-140.041	-0.026	0.0	1.000	-158.223	-0.055	138.36
0.1727	-10.722	0.037	-0.493	0.013	-28.574	-0.052	42.88
0.2907	5.845	0.075	0.656	0.011	-16.207	0.837	16.88
0.3500	9.457	0.140	1.043	0.017	-11.454	4.233	9.28
0.4500	9.637	0.203	1.063	0.018	-9.526	9.074	6.36
0.5305	9.105	0.253	1.152	0.015	-8.659	15.660	5.08
0.5911	8.363	0.291	1.070	0.014	-8.204	19.277	4.41
0.6511	7.882	0.329	1.028	0.014	-7.857	23.664	3.90
0.7111	6.556	0.367	0.895	0.013	-7.580	25.638	3.49
0.7711	6.238	0.405	0.872	0.013	-7.355	32.671	3.16
0.8311	6.089	0.443	0.864	0.014	-7.169	38.722	2.89
0.8923	3.594	0.481	0.489	0.010	-7.008	23.568	2.66
0.9405	3.014	0.512	0.424	0.010	-6.898	23.387	17.50
0.9641	3.275	0.527	0.460	0.010	-6.850	27.245	17.57
0.9850	3.842	0.540	0.0	0.011	-6.809	-0.081	17.63

PSI = 270 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
	-128.226	-0.032	0.0	1.352	-152.606	-0.076	178.20
	-18.141	0.028	-0.969	0.208	-42.412	-0.104	2.42
	4.536	0.074	0.855	0.011	-16.573	0.604	0.72
	9.289	0.135	1.025	0.017	-12.442	3.869	0.38
	9.688	0.168	1.069	0.018	-10.152	8.721	0.25
	9.291	0.249	1.168	0.015	-9.149	15.334	0.20
	8.552	0.287	1.091	0.015	-8.629	19.080	0.17
	8.107	0.325	1.051	0.014	-8.233	23.576	0.15
	6.810	0.363	0.922	0.013	-7.921	25.755	0.14
	6.514	0.401	0.902	0.013	-7.667	33.095	0.13
	6.383	0.439	0.893	0.015	-7.457	39.232	0.12
	3.903	0.477	0.520	0.010	-7.277	24.914	0.10
	3.144	0.508	0.437	0.010	-7.154	23.729	20.10
	3.415	0.523	0.481	0.010	-7.100	27.632	20.10
	3.980	0.536	0.0	0.011	-7.055	-0.083	20.09

PSI = 285 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0953	-136.263	-0.038	0.0	1.114	-154.409	-0.087	136.42
0.1727	-14.166	0.039	-1.064	0.063	-31.762	-0.223	45.29
0.2507	4.393	0.080	0.501	0.011	-18.116	0.645	18.17
0.3500	8.681	0.140	0.691	0.016	-12.502	4.013	10.01
0.4500	9.565	0.202	1.056	0.018	-10.193	8.964	6.87
0.5305	9.224	0.253	1.169	0.015	-9.151	15.736	5.48
0.5911	8.578	0.293	1.093	0.015	-8.604	19.569	4.76
0.6511	8.168	0.328	1.059	0.014	-8.185	24.206	4.20
0.7111	6.502	0.366	0.933	0.013	-7.852	26.535	3.77
0.7711	6.630	0.403	0.915	0.013	-7.581	34.035	3.41
0.8311	6.515	0.441	0.906	0.016	-7.356	40.308	3.12
0.8923	4.058	0.480	0.535	0.010	-7.163	26.108	2.87
0.9405	3.141	0.510	0.438	0.010	-7.030	24.014	22.70
0.9641	3.418	0.525	0.482	0.010	-6.972	27.991	22.62
0.9850	3.983	0.538	0.0	0.011	-6.923	-0.083	22.56

PSI = 300 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0953	-149.621	-0.052	0.0	0.617	-158.184	-0.075	109.88
0.1727	-7.995	0.060	-0.245	0.010	-22.421	-0.127	54.48
0.2507	4.470	0.096	0.509	0.011	-15.974	0.558	29.09
0.3500	8.667	0.153	0.956	0.015	-11.755	4.643	17.47
0.4500	9.326	0.214	1.025	0.017	-9.688	9.777	12.35
0.5305	9.044	0.263	1.145	0.015	-8.693	16.827	9.57
0.5911	8.434	0.301	1.078	0.014	-8.155	20.702	8.71
0.6511	8.067	0.338	1.050	0.014	-7.737	25.507	7.74
0.7111	6.820	0.375	0.927	0.013	-7.401	27.790	6.96
0.7711	6.567	0.413	0.909	0.014	-7.124	35.399	6.32
0.8311	6.473	0.450	0.903	0.017	-6.893	41.828	5.79
0.8923	4.033	0.488	0.538	0.010	-6.693	27.029	5.33
0.9405	3.017	0.519	0.428	0.010	-6.555	24.284	25.02
0.9641	3.298	0.533	0.473	0.010	-6.495	28.361	24.88
0.9850	3.861	0.546	0.0	0.011	-6.443	-0.080	24.76

PSI = 315 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0953	-159.954	-0.067	0.0	0.303	-160.869	-0.055	92.16
0.1727	-3.664	0.082	-0.364	0.009	-17.637	-0.361	53.98
0.2507	4.597	0.117	0.566	0.011	-13.711	1.550	33.73
0.3500	8.445	0.172	0.932	0.014	-10.560	5.713	21.97
0.4500	9.021	0.231	0.965	0.016	-8.785	11.065	16.09
0.5305	8.746	0.280	1.112	0.015	-7.873	18.471	13.20
0.5911	8.191	0.316	1.053	0.014	-7.364	22.438	11.62
0.6511	7.788	0.353	1.027	0.014	-6.961	27.297	10.35
0.7111	6.565	0.390	0.905	0.013	-6.632	29.373	9.39
0.7711	6.327	0.427	0.888	0.014	-6.359	37.027	8.56
0.8311	6.242	0.464	0.883	0.016	-6.128	43.645	7.87
0.8923	3.820	0.502	0.516	0.010	-5.927	27.492	7.27
0.9405	2.766	0.533	0.408	0.010	-5.787	24.445	26.85
0.9641	3.070	0.547	0.453	0.011	-5.726	28.637	26.67
0.9850	3.629	0.560	0.0	0.011	-5.673	-0.075	26.52

PSI = 330 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0953	-12.607	0.062	0.0	0.032	-17.138	-0.008	78.43
0.1727	-0.507	0.104	-0.025	0.009	-14.681	-0.044	50.28
0.2507	5.657	0.135	0.641	0.011	-11.697	2.571	34.37
0.3500	8.315	0.193	0.918	0.014	-9.174	7.147	23.82
0.4500	8.987	0.251	0.959	0.015	-7.634	12.679	18.02
0.5305	8.361	0.300	1.070	0.014	-6.804	20.450	15.02
0.5911	7.752	0.336	1.016	0.014	-6.328	24.488	13.34
0.6511	7.382	0.373	0.989	0.014	-5.946	29.303	12.01
0.7111	6.165	0.409	0.865	0.013	-5.629	30.946	10.91
0.7711	5.923	0.446	0.848	0.014	-5.363	36.691	10.00
0.8311	5.838	0.483	0.846	0.014	-5.136	45.309	9.22
0.8923	3.425	0.521	0.480	0.010	-4.937	27.539	8.55
0.9405	2.469	0.551	0.378	0.010	-4.795	24.255	26.06
0.9641	2.749	0.565	0.423	0.010	-4.738	28.561	27.87
0.9850	3.302	0.578	0.0	0.011	-4.685	-0.066	27.69

PSI = 345 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0953	-7.201	0.097	0.0	0.010	-15.339	-0.003	66.69
0.1727	1.888	0.124	0.230	0.010	-12.418	0.522	45.20
0.2507	6.360	0.161	0.713	0.011	-9.862	3.853	32.67
0.3500	8.223	0.216	0.907	0.014	-7.706	8.819	23.68
0.4500	8.327	0.273	0.919	0.014	-6.339	14.423	18.40
0.5305	7.966	0.321	1.028	0.014	-5.578	22.677	15.06
0.5911	7.261	0.358	0.970	0.014	-5.134	26.541	13.93
0.6511	6.866	0.394	0.939	0.013	-4.773	31.206	12.62
0.7111	6.634	0.431	0.811	0.013	-4.471	32.164	11.53
0.7711	6.388	0.467	0.789	0.013	-4.215	35.577	10.61
0.8311	6.288	0.504	0.785	0.014	-3.995	45.868	9.82
0.8923	2.813	0.542	0.428	0.010	-3.801	26.383	9.13
0.9405	2.070	0.571	0.338	0.010	-3.665	23.361	28.65
0.9641	2.345	0.586	0.382	0.010	-3.605	27.755	28.44
0.9850	2.893	0.599	0.0	0.011	-3.553	-0.052	28.26

PSI = 360 DEGREES

X	ALPHA	MACH	CL	CD	PHI	L(LB/IN)	SWEEP
0.0953	-3.235	0.110	0.0	0.009	-13.495	-0.003	56.06
0.1727	3.659	0.142	0.422	0.010	-10.396	1.279	39.43
0.2507	6.953	0.182	0.773	0.012	-8.101	5.332	29.55
0.3500	8.124	0.237	0.897	0.013	-6.191	10.576	22.12
0.4500	7.946	0.295	0.877	0.013	-4.957	16.109	17.55
0.5305	7.413	0.343	0.981	0.014	-4.257	24.781	15.02
0.5911	6.711	0.380	0.917	0.013	-3.845	28.348	13.54
0.6511	6.279	0.416	0.875	0.014	-3.505	32.622	12.33
0.7111	5.020	0.453	0.744	0.012	-3.219	32.679	11.32
0.7711	4.747	0.489	0.716	0.012	-2.975	39.512	10.46
0.8311	4.640	0.526	0.723	0.016	-2.764	46.080	9.72
0.8923	2.213	0.564	0.352	0.010	-2.577	23.751	9.07
0.9405	1.613	0.593	0.288	0.010	-2.446	21.499	28.61
0.9641	1.882	0.608	0.331	0.010	-2.387	25.938	28.40
0.9850	2.424	0.621	0.0	0.012	-2.337	-0.040	28.23

10. Harmonic of Air Loads

The next printout contains the harmonic analysis of the lift generated per inch on each rotor blade segment. This is PRINT Option 10000. The airloads are computed in two harmonic forms, both containing terms out to and including the tenth harmonic. The forms are

$$\text{Lift per Inch} = A0 - A1\cos\Psi - B1\sin\Psi - A2\cos2\Psi - B2\sin2\Psi - A3\cos3\Psi - B3\sin3\Psi \ldots\ldots - A10\cos10\Psi - B10\sin10\Psi \text{ and}$$

$$\text{Lift per Inch} = A0 - C1\sin(\Psi+\phi_1) - C2\sin(2\Psi+\phi_2) - C3\sin(3\Psi+\phi_3) \ldots\ldots - C10\sin(10\Psi+\phi_{10}).$$

The Ratio column is determined from the coefficients in Column C. From this ratio, one can immediately determine which airload harmonic is dominant and the relative relationship of this to the other harmonic coefficients.

HARMONICS OF AIR LOADS

STATION 1 A0 = -0.0185388

A	B	C	PHI	RATIO
0.0058114	-0.0290987	0.0296733	168.7057648	1.0000000
-0.0201269	-0.0076506	0.0215319	249.1871948	0.7256326
-0.0075798	0.0102900	0.0127804	-36.3760834	0.4307035
0.0019173	0.0048735	0.0052371	21.4752045	0.1764905
0.0016457	0.0019163	0.0025260	40.6547089	0.0851264
0.0018161	0.0006374	0.0019247	70.6604767	0.0648645
0.0013799	0.0001234	0.0013854	84.8918610	0.0466900
0.0016308	-0.0009104	0.0018677	119.1726837	0.0629405
-0.0000526	-0.0014860	0.0014869	182.0275879	0.0501094
0.0000777	-0.0004794	0.0004857	170.7967834	0.0163678

STATION 2 A0 = 2.1065311

A	B	C	PHI	RATIO
0.4665607	-2.8272552	2.8654928	170.6293030	1.0000000
0.3842223	0.1021613	0.3975722	75.1100006	0.1387448
0.0412583	-0.1719376	0.1768185	166.5062866	0.0617061
-0.0518297	-0.0356730	0.0629196	235.4613037	0.0219577
-0.0133265	0.0124577	0.0182426	-46.9297943	0.0063663
-0.0067163	-0.0013983	0.0068603	258.2390137	0.0023941
-0.0137545	0.0124043	0.0185217	-47.9545898	0.0064637
0.0100667	0.0237044	0.0257534	23.0097351	0.0089874
0.0264677	-0.0022998	0.0265674	94.9660645	0.0092715
0.0064641	-0.0225474	0.0234557	164.0029297	0.0081856

STATION 3 A0 = 6.1160278

A	B	C	PHI	RATIO
0.6907077	-5.7561398	5.7974300	173.1574097	1.0000000
0.1150140	0.1354709	0.1777093	40.3310547	0.0306531
-0.0053393	-0.1083109	0.1084424	182.8220673	0.0187053
-0.0165641	-0.0159713	0.0230098	226.0436707	0.0039690
-0.0029133	0.0028978	0.0041091	-45.1523743	0.0007088
0.0013191	0.0009068	0.0016007	55.4948120	0.0002761
0.0012444	-0.0000366	0.0012450	91.6824951	0.0002147
0.0000843	-0.0003298	0.0003404	165.6586761	0.0000587
-0.0000005	0.0001539	0.0001539	-0.1882620	0.0000265
0.0000840	-0.0002034	0.0002201	157.5609741	0.0000380

STATION 4 A0 = 10.8414097

A	B	C	PHI	RATIO
0.6164446	-6.7262754	6.7544622	174.7635345	1.0000000
-0.2930883	0.1327320	0.3217429	-65.6354218	0.0476341
-0.0419007	-0.0340860	0.0540141	230.8716888	0.0079968
-0.0247872	-0.0128548	0.0279222	242.5882416	0.0041339
-0.0008707	-0.0201105	0.0201293	182.4791412	0.0029802
0.0141912	0.0010902	0.0142330	85.6067963	0.0021072
-0.0009653	0.0089413	0.0089933	-6.1615915	0.0013315
-0.0037353	-0.0011640	0.0039125	252.6913452	0.0005792
0.0008729	0.0002412	0.0009056	74.5502472	0.0001341
-0.0035800	0.0006888	0.0036457	-79.1098633	0.0005397

STATION 5 A0 = 16.1947784

A	B	C	PHI	RATIO
0.3626862	-7.1265459	7.1357670	177.0865173	1.0000000
-0.3114024	0.1944090	0.3671053	-58.0233765	0.0514458
-0.1032558	-0.0126060	0.1040224	263.0393066	0.0145776
0.0755618	-0.0150281	0.0770417	101.2484741	0.0107966
-0.0024715	0.0103472	0.0106383	-13.4337721	0.0014908
0.0319176	0.0000382	0.0319176	89.9314423	0.0044729
-0.0014862	0.0059217	0.0061053	-14.0892754	0.0008556
0.0184920	0.0004020	0.0184964	88.7545776	0.0025921
-0.0018298	0.0026334	0.0032068	-34.7934418	0.0004494
0.0134738	0.0001376	0.0134745	89.4146423	0.0018883

STATION 6 A0 = 23.7709961

A	B	C	PHI	RATIO
0.0274429	-7.6236906	7.6237392	179.7936707	1.0000000
-0.9006391	0.2562434	0.9363821	-74.1181946	0.1228245
-0.1355020	-0.1138743	0.1769975	229.9566040	0.0232166
0.0095282	-0.0167787	0.0192953	150.4087830	0.0025310
0.0000880	-0.0094386	0.0094390	179.4659424	0.0012381
-0.0118955	-0.0018567	0.0120395	261.1286621	0.0015792
-0.0002423	0.0052868	0.0052924	-2.6245661	0.0006942
-0.0065136	-0.0006836	0.0065494	264.0087891	0.0008591
-0.0002131	0.0050558	0.0050603	-2.4134903	0.0006638
0.0033125	-0.0002771	0.0033241	94.7816010	0.0004360

STATION 7 A0 = 26.5055695

A	B	C	PHI	RATIO
-0.3485193	-6.2393513	6.2490759	183.1970215	1.0000000
-1.3400717	0.3121706	1.3759508	-76.8867188	0.2201847
-0.1670687	-0.1379979	0.2166919	230.4433441	0.0346758
-0.0059609	-0.0201869	0.0210486	196.4511414	0.0033683
0.0012575	-0.0021948	0.0025295	150.1883545	0.0004048
0.0116361	-0.0005068	0.0116471	92.4938660	0.0018638
0.0024073	-0.0083405	0.0086809	163.9004822	0.0013891
0.0011396	-0.0004327	0.0012190	110.7918243	0.0001951
0.0003120	-0.0029015	0.0029182	173.8625031	0.0004670
0.0004716	-0.0002716	0.0005442	119.9330750	0.0000871

STATION 8 A0 = 29.9147339

A	B	C	PHI	RATIO
-0.8066483	-4.7207584	4.7891788	189.6965790	1.0000000
-1.7467089	0.3762742	1.7867775	-77.8431091	0.3730864
-0.1978083	-0.1310782	0.2372965	236.4693298	0.0495485
-0.0017244	-0.0276652	0.0277189	183.5665131	0.0057878
0.0084314	-0.0052728	0.0099443	122.0210419	0.0020764
0.0046946	-0.0064113	0.0079463	143.7868347	0.0016592
0.0059827	0.0014264	0.0061504	76.5897369	0.0012842
0.0056898	-0.0016484	0.0059238	106.1567535	0.0012369
0.0054092	0.0008308	0.0054726	81.2680969	0.0011427
0.0069205	-0.0011486	0.0070152	99.4233398	0.0014648

STATION 9 A0 = 28.9830322

A	B	C	PHI	RATIO
-1.4361496	-1.2663260	1.9147072	228.5956421	0.9784915
-1.9012938	0.4627401	1.9567947	-76.3211823	1.0000000
-0.2739782	0.0837021	0.2864787	-73.0117035	0.1464020
-0.0536059	-0.0473846	0.0715464	228.5250549	0.0365631
-0.0036424	0.0342192	0.0344125	-6.0758619	0.0175861
-0.0486374	-0.0091883	0.0494977	259.3017578	0.0252953
0.0084202	-0.0269197	0.0282058	162.6307220	0.0144143
-0.0112917	0.0050772	0.0123806	-65.7893524	0.0063270
0.0042988	-0.0254356	0.0257963	170.4072418	0.0131829
0.0137325	0.0077968	0.0157915	60.4138336	0.0080701

STATION 10 A0 = 34.9860229

A	B	C	PHI	RATIO
-2.2796831	0.2039624	2.2887888	-84.8873291	1.0000000
-2.1698074	0.5970355	2.2504482	-74.6153717	0.9832485
-0.3524024	-0.1595188	0.3868251	245.6454926	0.1690086
0.1728295	-0.0118687	0.1732365	93.9284821	0.0756891
-0.0039592	0.0551648	0.0553067	-4.1050692	0.0241642
0.0780106	0.0224963	0.0811895	73.9137268	0.0354727
0.0065553	0.0280451	0.0288010	13.1561584	0.0125835
0.0357608	0.0012623	0.0357831	87.9783478	0.0156341
-0.0105172	0.0080913	0.0132695	-52.4273529	0.0057976
0.0129197	-0.0011896	0.0129743	95.2609558	0.0056686

STATION 11 A0 = 40.3416443

A	B	C	PHI	RATIO
-3.0961714	1.2363281	3.3338842	-68.2327118	1.0000000
-2.6404209	0.6432902	2.7176542	-76.3076324	0.8151615
-0.4049954	-0.4475855	0.6036174	222.1401367	0.1810552
0.0306133	-0.0461915	0.0554150	146.4656372	0.0166217
0.1252972	-0.2158247	0.2495590	149.8625793	0.0748553
0.1024029	-0.0254310	0.1055135	103.9468384	0.0316488
0.0641405	-0.0390110	0.0750723	121.3084564	0.0225180
0.0103156	-0.0392041	0.0405385	165.2580566	0.0121595
0.0371099	-0.0429722	0.0567782	139.1867218	0.0170306
-0.0055227	-0.0281254	0.0286625	191.1092834	0.0085973

STATION 12 A0 = 15.1531467

A	B	C	PHI	RATIO
-4.2959366	13.1468153	13.8309002	-18.0956421	1.0000000
-3.9540501	0.7513018	4.0247927	-79.2415466	0.2910000
-0.3706588	-0.5471836	0.6609067	214.1134033	0.0477848
-0.0164340	-0.0444608	0.0474008	200.2856598	0.0034272
-0.0054827	0.0113497	0.0126046	-25.7836151	0.0009113
0.0297508	0.0097892	0.0313200	71.7867584	0.0022645
0.0016600	0.0133093	0.0134125	7.1093483	0.0009697
0.0240062	0.0060478	0.0247563	75.8598328	0.0017899
0.0023791	-0.0078063	0.0081608	163.0503693	0.0005900
-0.0015144	-0.0044872	0.0047358	198.6494751	0.0003424

STATION 13 A0 = 14.6387329

A	B	C	PHI	RATIO
-3.0683117	12.3609266	12.7360525	-13.9405718	1.0000000
-3.6057901	-0.7387867	3.6806965	258.4208984	0.2889982
-0.1978170	-0.3508309	0.4027578	209.4165344	0.0316234
-0.0111755	-0.0461688	0.0475021	193.6071014	0.0037297
0.0133389	-0.0326380	0.0352586	157.7704163	0.0027684
-0.0020485	-0.0065694	0.0068813	197.3187408	0.0005403
0.0107518	-0.0086541	0.0138020	128.8303528	0.0010837
-0.0046484	-0.0016559	0.0049345	250.3928070	0.0003874
0.0063981	-0.0050375	0.0081432	128.2147675	0.0006394
-0.0042478	-0.0011064	0.0043895	255.4011841	0.0003447

STATION 14 A0 = 18.6674194

A	B	C	PHI	RATIO
-3.3165741	12.3558550	12.7932320	-15.0252333	1.0000000
-3.7300339	-0.7245855	3.7997599	259.0065918	0.2970133
-0.2268665	-0.3501016	0.4171804	212.9432526	0.0326095
-0.0109534	-0.0573655	0.0584019	190.8098907	0.0045651
0.0089840	-0.0269448	0.0284030	161.5604095	0.0022202
0.0008049	-0.0112847	0.0113134	175.9201355	0.0008843
0.0058211	-0.0045196	0.0073696	127.8259888	0.0005761
-0.0016236	-0.0042451	0.0045450	200.9294434	0.0003553
0.0012039	-0.0028799	0.0031214	157.3127899	0.0002440
-0.0010307	-0.0023727	0.0025869	203.4801636	0.0002022

STATION 15 A0 = -0.0176909

A	B	C	PHI	RATIO
0.0103698	-0.0756623	0.0763695	172.1959381	1.0000000
0.0104975	0.0040839	0.0112639	68.7422333	0.1474917
-0.0003934	0.0010045	0.0010788	-21.3894806	0.0141261
-0.0008102	-0.0004531	0.0009283	240.7874298	0.0121552
0.0001319	-0.0001743	0.0002186	142.8869476	0.0028622
0.0007655	0.0000467	0.0007669	86.5120850	0.0100423
-0.0000028	0.0004759	0.0004759	-0.3370049	0.0062313
0.0001418	-0.0001749	0.0002252	140.9597321	0.0029482
0.0003694	0.0000019	0.0003694	89.7012482	0.0048371
0.0002440	0.0000810	0.0002571	71.6364288	0.0033660

IV. GRP SAMPLE ANALYSIS

The GRP program was executed using data representing a relatively new rotor blade. The results were compared with results predicted by the blade's manufacturer. The rotor blade was an unsymmetrical blade. The rotor radius was divided into three sections. Sections one and three were made of the same type airfoil. The blade included a sweep tip design. The blade and helicopter configuration analyzed are typical of a helicopter that could be used by the U.S. Navy in a LAMPS type mission.

For the analysis, the blade was divided into 15 segments. The program used the manufacturer's values for the First and Second Moment of Inertia about the Flapping Hinge, vice local blade mass densities. The GRP assumed uniform inflow for all flight velocities . It used a rigid blade analysis while the actual blade does have live twist. The program was run at five different flight weights, ranging from 16,359 to 20,829 pounds. A flat plate area of 35.8 square feet was used at all speeds. The GRP was run for forward flight speeds of 40 to 160 knots at ten knot increments. The program was executed at sea level, tropical day condition. The manufacturer's predicted rotor horsepower was obtained from his Shaft Horsepower versus True Airspeed curves and was corrected to rotor horsepower by using the manufacturer's Mechanical Efficiency curves.

The results of the analysis are shown in the next several tables. Table VI illustrates a comparison of the GRP required rotor horsepower divided by the manufacturer's required rotor horsepower. The GRP agreed within an average of two percent on the entire range from 40 to 160 knots. The GRP agreed within an average of one percent for the cruise range between 70 and 140 knots. It can be seen that between 40 to 60 knots there is a much larger difference

between the two required horsepowers. It is felt that the inflow in this region is not uniform as assumed, but highly mixed and irregular. Also, the GRP results were less than the manufacturer's horsepower in the 150 to 160 knot range. This area represents the region of top speed for the helicopter, and much of the retreating blade is in the stall region. Also, it is expected that there is a change in fuselage attitude at this high speed, which would increase the flat plate area above what was used in the program. The GRP program's maximum endurance velocities agreed exactly with those predicted by the manufacturer.

TABLE I WEIGHT = 16359 LBS

VELOCITY	GRP RHP	MANUFACTURER'S RHP	RATIO (GRP/MAN)
40	1105	1152	.96
50	1006	1041	.97
60	960	973	.99
70	955	958	1.00
80	984	971	1.01
90	1047	1034	1.01
100	1142	1109	1.03
110	1273	1237	1.03
120	1438	1396	1.03
130	1643	1589	1.03
140	1893	1852	1.02
150	2300	2216	1.04
160	2567	2745	.94

TABLE II WEIGHT = 17321 LBS

VELOCITY	GRP RHP	MANUFACTURER'S RHP	RATIO(GRP/MAN)
40	1185	1247	.95
50	1075	1122	.96
60	1018	1038	.98
70	1008	1009	1.00
80	1028	1028	1.00
90	1086	1078	1.01
100	1176	1153	1.02
110	1303	1264	1.03
120	1465	1445	1.01
130	1669	1633	1.02
140	1921	1902	1.01
150	2227	2257	.99
160	2598	2791	.93

TABLE III WEIGHT = 19246 LBS

VELOCITY	GRP RHP	MANUFACTURER'S RHP	RATIO(GRP/MAN)
40	1366	1449	.94
50	1229	1301	.94
60	1148	1186	.97
70	1118	1142	.98
80	1126	1153	.98
90	1172	1199	.98
100	1255	1273	.99
110	1375	1387	.99
120	1530	1557	.98
130	1731	1746	.99
140	1983	2038	.97
150	2290	2440	.94
160	2665	-	-

TABLE IV WEIGHT = 19658 LBS

VELOCITY	GRP RHP	MANUFACTURER'S RHP	RATIO(GRP/MAN)
40	1407	1496	.94
50	1264	1340	.94
60	1178	1231	.96
70	1142	1173	.97
80	1149	1179	.98
90	1193	1221	.98
100	1274	1299	.98
110	1392	1414	.98
120	1546	1566	.99
130	1747	1773	.99
140	1999	2048	.98
150	2305	2477	.93
160	2682	-	-

TABLE V WEIGHT = 20829 LBS

VELOCITY	GRP RHP	MANUFACTURER'S RHP	RATIO(GRP/MAN)
40	1532	1627	.94
50	1370	1457	.94
60	1269	1338	.95
70	1222	1267	.96
80	1219	1258	.97
90	1256	1297	.97
100	1330	1375	.97
110	1445	1477	.98
120	1598	1638	.98
130	1798	1866	.96
140	2045	2157	.95
150	2354	2589	.91
160	2747	-	-

TABLE VI RATIO COMPARISON

	WEIGHT					RATIO
VELOCITY	16359	17321	19246	19658	20829	AVERAGE
40	.96	.95	.94	.94	.94	.95
50	.97	.96	.94	.94	.94	.95
60	.99	.98	.97	.96	.95	.97
70	1.00	1.00	.98	.97	.96	.98
80	1.01	1.00	.98	.97	.97	.99
90	1.01	1.01	.98	.98	.97	.99
100	1.03	1.02	.99	.98	.97	1.00
110	1.03	1.03	.99	.99	.98	1.00
120	1.03	1.01	.98	.99	.98	1.00
130	1.03	1.02	.99	.99	.96	1.00
140	1.02	1.01	.97	.98	.95	.99
150	1.04	.99	.94	.93	.91	.96
160	.94	.93	-	-	-	.94
AVERAGES FOR ENTIRE SPEED RANGE						
AVERAGE	1.00	.99	.97	.97	.96	.98
AVERAGES FOR CRUISE RANGE 70 - 140 KNOTS						
AVERAGE	1.02	1.01	.98	.98	.97	.99

V. CONCLUSIONS

The logic and theory used in the GRP program was investigated and found to be sound. However, there were three discrepancies in the Navy's version of the program that did require attention. The calculations in the reverse flow section on the rotor were incorrect, the calculation of the chord at the 75 percent radius position was incorrect and the original Trim Option for reducing moments would not work. All of the above discrepancies were corrected.

Three desirable features were added to the GRP program. First, the ability to analyze a rotor blade composed of more than one airfoil type was added. The program will now accept up to five different airfoil data input decks for use in analyzing a rotor system. Secondly, the program would only calculate performance in level flight. The ability to calculate performance in climbs and descents has been added. Lastly, the program will now calculate the aerodynamics for a swept tip rotor blade design.

The results of the sample analysis described in Section IV indicates that the program does produce highly accurate performance predictions. The averaged GRP rotor horsepower was within two percent of the manufacturer's data. The results were within one percent when compared in the area of normal cruise flight. The GRP, in this analysis, assumed uniform inflow, constant flat plate area and a rigid rotor blade. It is felt that while complicated, computer-time-comsuming procedures can be taken to reduce these assumptions, they are not warranted if the GRP is to be used strictly as a helicopter performance prediction program.

```
C  AIR-530132B  UNGER     UG   23541     RM 904                                    GRP00020
C     FOR INFO, CALL GEORGE UNGER OR HIS FAITHFUL ORTHODOX COMPANION               GRP00030
C     STEVEN AT X23544, PROVIDED THEY HAVE NOT BEEN LIFTED, SHIFTED,               GRP00040
C     RIFTED, OR OTHERWISE FOUND BETTER JOBS....                                   GRP00050
C                                                                                  GRP00060
C MODIFIED BY LT. JIM LOISELLE, USN, 1977,                                         GRP00070
C NAVAL POSTGRADUATE SCHOOL, MONTEREY, CALIF.                                      GRP00080
C                                                                                  GRP00090
      EQUIVALENCE      (V(1),OMEGAR),   (V(2),R),        (V(3),SPSD),            GRP00100
     1(V(4),RHO),      (V(5),XNB),                                                GRP00110
     1(V(6),VEL),      (V(7),ER),       (V(8),DX),                                GRP00120
     2(V(23),TW),      (V(38),XMASS),   (V(53),C),       (V(68),DPSI),           GRP00130
     3(V(69),FTRI),    (V(70),BIN),     (V(71),BPIN),    (V(72),BPPIN),          GRP00140
     4(V(73),XITLIM),  (V(74),RL),      (V(75),RD),      (V(76),XLTOL),          GRP00150
     5(V(77),XDTOL),   (V(78),FMOM),    (V(79),SMOM),    (V(80),AG),             GRP00160
     6(V(81),BGL),     (V(82),CG),      (V(83),TD3L),    (V(84),DELD),           GRP00170
     7(V(85),A1S),     (V(86),B1S),     (V(87),T75),     (V(88),LAMBDA),         GRP00180
     8(V(89),MUL),     (V(90),UIN),     (V(91),SKIPIN),  (V(92),TWIST)           GRP00190
      EQUIVALENCE      (V(93),XNSEG),                    (V(96),TOP),            GRP00200
     9(V(97),PCNV),    (V(98),PRINT),   (V(99),XEND),    (V(100),ABIT),          GRP00210
     1(V(101),BTOL),   (V(102),BPTOL),  (V(103),SPAR),   (V(104),A2S),           GRP00220
     A(V(105),B2S),    (V(106),RSL),    (V(107),SYM),    (V(108),SFH),           GRP00230
     B(V(109),FDMP),   (V(110),ALOPT),  (V(111),ALL),    (V(112),RA1S),          GRP00240
     C(V(113),RB1S),   (V(114),TOLAB),  (V(115),TD3B),   (V(116),PHD3B),         GRP00250
     D(V(117),LAML),   (V(118),UVL),    (V(120),BSPL),   (V(121),PPSI),          GRP00260
     E(V(122),ATEST),  (V(123),IGC),    (V(124),PLOD),   (V(126),PCR),           GRP00270
     F(V(138),INPL),   (V(139),PSIS),   (V(140),PHIS),   (V(141),THPS),          GRP00280
     G(V(142),FSCG),   (V(143),FSMR),   (V(144),WLCG),   (V(145),WLMR),          GRP00290
     H (V(146),VELY),  (V(158), TIPSWP),(V(159), TPSWST),                        GRP00300
     I(V(94), RCFPM),  (V(95),FPAREA),  (V(156),HIALFA),(V(157),LOALFA),         GRP00310
     J(V(161),RB),     (V(147),SYMSPR),     (V(160),TRIM)                         GRP00320
      EQUIVALENCE (XCQ,TF(1)),(TF(2),XCQL),(TF(3),XCQD),(TF(4),XCZ),(TF(GRP00330
     15),XCX),(TF(6),XCY),(TF(7),XHM),(TF(8),XHL),                               GRP00340
     2(CQ(1),FC(1,1)),(FC(1,2),CQL(1)),(FC(1,3),CQD(1)),(FC(1,4),CZ(1)),GRP00350
     3(FC(1,5),CX(1)),(FC(1,6),CY(1)),(FC(1,7),HM(1)),(FC(1,8),HL(1))            GRP00360
      DIMENSION HM(73),HL(73),AV(9),RE(15)                                       GRP00370
      DIMENSION        X(15),XX(15),DX(15),NN(15),C(15),CR(15),XMASS(15)GRP00380
     1, TW(15), CLT(5,15,100),CDT(5,15,100), PHI(73,15),                         GRP00390
     2     UP(15),UT(15),U(15),          AL(73,15),XMACH(73,15),CL(73,15),GRP00400
     3CD(73,15),THETAR(15),        LOAD(73,15),XLFC(15),B(73),BP(73),BPP(GRP00410
     373),IPSI(73),   BO(20),BPO(20),BPPO(20),BUF1(10),BUF2(10),BUF3(10),GRP00420
     4BUF4(10),BUF5(10),UCD(15),CRDX(15),CQL(73 ),CQD(73 ),CQ(73 ),CZ(73GRP00430
     5 ),CX(73 ),CY(73 ),XR(73 ),CP(73 ),BD(73 ),H(10),          CDX(15),GRP00440
     6BSCLT(1,5,71),BSCDT(1,5,71)                                               GRP00450
```

```
      DIMENSION SWPCOS(15),UR(15), UTUR(15),SWEEP(73,15)                GRP00460
      DIMENSION XDA(73,15),XLAO(15),XLA(15,18),XLB(15,18),DUM(73)       GRP00470
      DIMENSION V(200),TF(9), FC(73,9),XMESS(7)                         GRP00480
      LOGICAL D3B,CONV,SHIN,MCONV,A1B1,ALFA,PRNT,      USVL,TEST        GRP00490
      REAL MU,LAMBDA,MUSQ,MUL,LOAD,LAMI,     IGC,LRF,LATD,LONGD,INPL    GRP00500
      REAL MUY,LMR,MG                                                   GRP00510
      INTEGER CASE                                                      GRP00520
      JOY = 0                                                           GRP00530
      JEB = 0                                                           GRP00540
C*****READ IN BLADE CURVE DATA ***************************************  GRP00550
 2000 READ(5,169) WBLADE                                                GRP00560
      READ(5,69) NBLDAT                                                 GRP00570
      IF (WBLADE .EQ. 0.) GO TO 10                                      GRP00580
      WRITE(6,173)                                                      GRP00590
      WRITE(6,79) NBLDAT                                                GRP00600
 10   DO 63 N=1, NBLDAT                                                 GRP00610
      READ(5,69) NZ                                                     GRP00620
      IF (WBLADE .NE. 0.) WRITE(6,79) NZ                                GRP00630
      DO 61 I=1,NZ                                                      GRP00640
      READ(5,69)  J, (CLT(N,I,K), K=1,J)                                GRP00650
      IF (WBLADE .NE. 0.)WRITE(6,79)J,(CLT(N,I,K),K=1,J)                GRP00660
   61 CONTINUE                                                          GRP00670
      READ(5,69) NZ                                                     GRP00680
      IF (WBLADE .NE. 0.) WRITE(6,79) NZ                                GRP00690
      DO 63 I=1,NZ                                                      GRP00700
      READ(5,69)  J, (CDT(N,I,K), K=1,J)                                GRP00710
      IF (WBLADE .NE. 0.) WRITE(6,79)J,(CDT(N,I,K),K=1,J)               GRP00720
   63 CONTINUE                                                          GRP00730
C*****ZERO OUT LOADER AREA*******************************************  GRP00740
      DO 59 I=1,200                                                     GRP00750
   59 V(I)=0.                                                           GRP00760
C SET UP CONSTANTS AND AUTOMATIC INPUT                                  GRP00770
      PI = 3.14159265                                                   GRP00780
      TWOPI = 6.28318531                                                GRP00790
      RC = 57.2957795                                                   GRP00800
      XXXXX = 1.0                                                       GRP00810
      BTOL=.001                                                         GRP00820
      BPTOL=.001                                                        GRP00830
      XLTOL=100.                                                        GRP00840
      XDTOL=50.                                                         GRP00850
      TOLAB=.25                                                         GRP00860
      BGL=90.                                                           GRP00870
      G=32.2                                                            GRP00880
      IGC=1.                                                            GRP00890
      FTRL = 15.0                                                       GRP00900
      DPSI = 15.0                                                       GRP00910
      BIN = .000001                                                     GRP00920
      BPIN = .000001                                                    GRP00930
      XITLIM = 15.0                                                     GRP00940
```

```
      BPPIN = .000001                                                    GRPC0950
      XNSEG = 15.0                                                       GRPC0960
      B1S = 7.53                                                         GRP00970
      A1S = -1.2                                                         GRPC0980
      SKIPIN = 1.0                                                       GRPC0990
      PCNV = 1.0                                                         GRP01000
      CASE=0                                                             GRP01010
      DO 9000 I=1,15                                                     GRP01020
 9000 RB(I)=1.0                                                          GRP01030
      HIALFA=30.                                                         GRPC1040
      LOALFA=-30.                                                        GRP01050
      TPSWST=16.0                                                        GRP01060
      T75= 5.0                                                           GRPC1070
      LAMBDA=-.0200                                                      GRP01080
C *****************************************************************     GRP01090
C**** READ IN CASE DATA ***************************************         GRPC1100
 1000 CALL LOADED(V)                                                     GRP01110
      CASE=CASE + 1                                                      GRPC1120
      NTPST=TPSWST                                                       GRP01130
      TIPSW=TIPSWP/RC                                                    GRP01140
      I=SPAR                                                             GRP01150
      DO 9002 J=1,I                                                      GRP01160
 9002 RB(J)=0.0                                                          GRPC1170
      MOMITN=0                                                           GRP01180
      RD=-ABS(RD)                                                        GRPC1190
      IF(FPAREA .NE. 0.) RD=-.5*RHO*(VEL*1.689)**2*ABS(FPAREA)           GRP01200
      IF (ABIT.EQ.0.) GO TO 999                                          GRP01210
      A1S=0.                                                             GRP01220
      B1S=0.                                                             GRP01230
999   NPRNT = PRINT                                                      GRPC1240
      DO 810  II = 1,7                                                   GRP01250
      NPRNT = NPRNT -10**(7 - II)                                        GRPC1260
      IF (NPRNT)  811,812,812                                            GRPC1270
 811  XMESS(II) = 0.0                                                    GRP01280
      NPRNT = PRINT                                                      GRPC1290
      GO TO 810                                                          GRP01300
 812  XMESS(II) = 1.0                                                    GRPC1310
 810  CONTINUE                                                           GRPC1320
      SKIP = -1.0                                                        GRP01330
      IF (SKIPIN.NE.0.)  SKIP = 1.0                                      GRP01340
  70  IF (JEB.GT.0) GO TO 1600                                           GRP01350
C**** PRINT HEADING BEFORE EACH CASE ********************************    GRPC1360
      WRITE (6,80)                                                       GRPC1370
C SET UP CONTROL VARIABLES ACCORDING TO INPUT OPTIONS                    GRP01380
      TOLAB = ABS(TOLAB)                                                 GRP01390
      SHIN=XITLIM.LT.0.                                                  GRP01400
      A1B1=ABIT.NE.0.                                                    GRPC1410
      IF(TOP.NE.0.) ATEST=-50.                                           GRPC1420
      ALFA=XITLIM.NE.0..AND.(ALOPT.NE.0..OR.TOP.NE.0.)                   GRP01430
```

```
      PRNT=TRAN.NE.0.                                                    GRP01440
      USVL=UVL.NE.0.                                                     GRP01450
      D3B=TD3B.NE.0.                                                     GRP01460
      IF(PPSI.EQ.0.) PPSI=DPSI                                           GRP01470
      IF(ATEST.EQ.0.) ATEST=5.                                           GRP01480
      NSEG=XNSEG                                                         GRP01490
      PC=PCR*RC                                                          GRP01500
      XDPSI=DPSI/RC                                                      GRP01510
      K=360.0/DPSI+.1                                                    GRP01520
      KP1=K+1                                                            GRP01530
      OM=OMEGAR/R                                                        GRP01540
      R4 = R**4                                                          GRP01550
      R5 = R**5                                                          GRP01560
      OMS = OM**2                                                        GRP01570
      FAC=2./(RC*OM)                                                     GRP01580
      ITLIM=ABS(XITLIM)                                                  GRP01590
      ITN=0                                                              GRP01600
      NSPAR=ABS(SPAR)                                                    GRP01610
      NTRL=FTRL                                                          GRP01620
      IF(SHIN) NTRL=1                                                    GRP01630
      TEST=.TRUE.                                                        GRP01640
      MCONV=.TRUE.                                                       GRP01650
      IDPSI=DPSI                                                         GRP01660
      IPSI(1)=0                                                          GRP01670
      DO 997 I=2,KP1                                                     GRP01680
  997 IPSI(I)=IPSI(I-1)+IDPSI                                            GRP01690
      NB=XNB                                                             GRP01700
C*****ZERO OUT LAMBDA*S IF NCT TO BE USED  ******************************GRP01710
      IF(USVL) GO TO 551                                                 GRP01720
      DO 550 I=2,KP1                                                     GRP01730
      DO 550 J=1,NSEG                                                    GRP01740
  550 XDA(I,J)=0.                                                        GRP01750
C**** READ HARMONICS OF LAMBDA IF DESIRED ****************************  GRP01760
  551 IF(LAML.EQ.0.) GO TO 504                                           GRP01770
      LAML=0.                                                            GRP01780
      READ(5,500) NHARM                                                  GRP01790
      DO 503 I=1,NSEG                                                    GRP01800
      READ(5,501) XLAO(I)                                                GRP01810
      READ(5,502) (XLA(I,J),J=1,NHARM)                                   GRP01820
  503 READ(5,502) (XLB(I,J),J=1,NHARM)                                   GRP01830
C**** COMPUTE VARIABLE LAMBDAS IF TO BE USED ***************************  GRP01840
  504 IF(.NOT.USVL) GO TO 507                                            GRP01850
      XI=0.                                                              GRP01860
      DO 506 I=2,KP1                                                     GRP01870
      XI=XI+XDPSI                                                        GRP01880
      DO 506 J=1,NSEG                                                    GRP01890
      XDA(I,J)= -XLAO(J)                                                 GRP01900
      ARG=0.                                                             GRP01910
      DO 506 L=1,NHARM                                                   GRP01920
```

```
      ARG=ARG+XI                                                        GRPC1930
  506 XDA(I,J)=XDA(I,J)-XLA(J,L)*COS(ARG)-XLB(J,L)*SIN(ARG)             GRPC1940
C**** READ BIVARIANT SPAR DATA IF DESIRED ******************************GRPC1950
  507 IF(BSPL.EQ.0.) GO TO 508                                          GRPC1960
      BSPL=0.                                                           GRPC1970
      READ(5,169) WRSPAR                                                GRPC1980
      READ(5,69) NZ                                                     GRPC1990
      IF (WRSPAR .EQ. 0.0) GOTO 9006                                    GRPC2000
      WRITE(6,74)                                                       GRPC2010
      WRITE(6,69) NZ                                                    GRPC2020
 9006 DO 509 I=1,NZ                                                     GRPC2030
      READ(5,69) J,(BSCLT(1,I,KK),KK=1,J)                               GRPC2040
  509 IF (WRSPAR .NE. 0.0) WRITE(6,69)J,(BSCLT(1,I,KK),KK=1,J)          GRPC2050
      READ(5,69) NZ                                                     GRPC2060
      IF (WRSPAR .NE. 0.0) WRITE(6,69) NZ                               GRPC2070
      DO 510 I=1,NZ                                                     GRPC2080
      READ(5,69) J,(BSCDT(1,I,KK),KK=1,J)                               GRPC2090
  510 IF (WRSPAR .NE. 0.) WRITE(6,69) J,(BSCDT(1,I,KK), KK=1,J)         GRPC2100
C GRAVITY ANGLE COMPUTATIONS                                            GRPC2110
  508 IF(BGL.EQ.90.0) GO TO 301                                         GRPC2120
      AA=COS(AG/RC)                                                     GRPC2130
      BB=COS(BGL/RC)                                                    GRPC2140
      CC=COS(CG/RC)                                                     GRPC2150
      AA2=AA**2                                                         GRPC2160
      BB2=BB**2                                                         GRPC2170
      CC2=CC**2                                                         GRPC2180
      HW=SQRT(1.0+ AA2*BB2*CC2)                                         GRPC2190
      HX=BB*SQRT(CC2*(AA2-1.0)+1.0)                                     GRPC2200
      HY=CC*SQRT(AA2*(BB2-1.0)+1.0)                                     GRPC2210
      HZ=AA*SQRT(BB2*(CC2-1.0)+1.0)                                     GRPC2220
      GO TO 302                                                         GRPC2230
  301 HW=1.0                                                            GRPC2240
      HX=0.0                                                            GRPC2250
      HY=0.0                                                            GRPC2260
      HZ=1.0                                                            GRPC2270
C COMPUTE X*S AND CHORDS                                                GRPC2280
  302 D=ER                                                              GRPC2290
      X(1)=DX(1)/2.0                                                    GRPC2300
      XX(1)=X(1)+ER                                                     GRPC2310
      DO 1 I=2,NSEG                                                     GRPC2320
      D=D+DX(I-1)                                                       GRPC2330
      X(I)=X(I-1)+(DX(I-1)+DX(I))/2.0                                   GRPC2340
    1 XX(I)=X(I)+ER                                                     GRPC2350
      SUM=D+DX(NSEG)                                                    GRPC2360
      IF(ABS(C(1)-C(2)).GT..0000001) GO TO 199                          GRPC2370
      DO 12 I=2,NSEG                                                    GRPC2380
   12 C(I)=C(I-1)                                                       GRPC2390
  199 DO 86 I=1,NSEG                                                    GRPC2400
      IF(X(I)-.75)86,88,87                                              GRPC2410
```

```
   86 CONTINUE                                                          GRP02420
   87 C75=C(I-1)+((.75-X(I-1))/(X(I)-X(I-1))*(C(I)-C(I-1)))             GRP02430
      GO TO 89                                                          GRP02440
   88 C75=C(I)                                                          GRP02450
   89 C752=2.*C75**2                                                    GRP02460
      BG=G*R/OMEGAR**2                                                  GRP02470
C PRE-COMPUTATION OF FREQUENTLY USED COMBINATIONS                       GRP02480
      XLF=RHO*OMEGAR**2/24.                                             GRP02490
      DO 2 I=1,NSEG                                                     GRP02500
      CDX(I)=C(I)**2*DX(I)                                              GRP02510
      CR(I)=C(I)/R                                                      GRP02520
      CRDX(I)=CR(I)*DX(I)                                               GRP02530
    2 XLFC(I)=XLF*C(I)                                                  GRP02540
C COMPUTE 1ST AND 2ND MOMENTS                                           GRP02550
      RR2=.5*RHO*R**2                                                   GRP02560
      RR5=RR2*R**3                                                      GRP02570
      IF(SMOM.NE.0.) GO TO 96                                           GRP02580
      S=XMASS(1)/RR2*X(1)*DX(1)                                         GRP02590
      SR=S*X(1)                                                         GRP02600
      DO 3 I=2,NSEG                                                     GRP02610
      DXD=XMASS(I)/RR2*X(I)*DX(I)                                       GRP02620
      S=S+DXD                                                           GRP02630
    3 SR=SR+DXD*X(I)                                                    GRP02640
      SMOM=SR*RR5                                                       GRP02650
      S=S/SR                                                            GRP02660
      FMOM=S*SMOM/R                                                     GRP02670
      GO TO 97                                                          GRP02680
   96 SR=SMOM/RR5                                                       GRP02690
      S=FMOM*R/ SMOM                                                    GRP02700
C COMPUTE SIGMA                                                         GRP02710
   97 RS=RSL                                                            GRP02720
      IF(RSL.EQ.0.) RS=XNB*C75/(PI*R)                                   GRP02730
C COMPUTE TWISTS                                                        GRP02740
      IF(TWIST.EQ.0.0) GO TO 102                                        GRP02750
      DO 101 I=1,NSEG                                                   GRP02760
  101 TW(I)=(XX(I)-.75)*TWIST                                           GRP02770
  102 HK=TWOPI*RR2*OMEGAR**2                                            GRP02780
      IF(D3B) PHD3BR=PHD3B/RC                                           GRP02790
      XSIN=SIN(XDPSI)                                                   GRP02800
      XCOS=COS(XDPSI)                                                   GRP02810
C**** COMPUTE MU AND LAMBDA ********************************************GRP02820
      IF(.NOT.ALFA.AND..NOT.USVL) GO TO 777                             GRP02830
      IF(UVL.LT.0.) GO TO 777                                           GRP02840
      ALLR=ALL/RC                                                       GRP02850
      CAL=COS(ALLR)                                                     GRP02860
      MU=VEL*CAL/OMEGAR*1.689                                           GRP02870
      MUSQ=MU**2                                                        GRP02880
      IF(USVL) GO TO 104                                                GRP02890
      XLMBD = MU*SIN(ALLR)/CAL-RL/(HK*2. *MU)                           GRP02900
```

```
      IF(MU.LT..1) XLMBD = XLMBD/2.                                          GRPC2910
      DO 1603 ITOM = 1,100                                                   GRPC2920
      LAMBDA = MU*SIN(ALLR)/CAL-RL/(CAL*2.*HK*SQRT(MU**2+XLMBD**2))          GRPC2930
      IF(ABS(LAMBDA-XLMBD).LT..0001) GO TO 104                               GRPC2940
 1603 XLMBD = LAMBDA                                                         GRPC2950
      WRITE (6,1604) LAMBDA,XLMBD                                            GRPC2960
      GO TO 104                                                              GRPC2970
  777 IF(UIN.EQ.0.) GO TO 103                                                GRPC2980
      MU = MUL                                                               GRPC2990
      MUSQ = MU**2                                                           GRP03000
      VEL = SQRT((MUSQ+LAMBDA**2)*(OMEGAR*.5921)**2)                         GRP03010
      GO TO 104                                                              GRP03020
  103 MUSQ = (VEL/(OMEGAR*.5921))**2-LAMBDA**2                               GRP03030
      MU = SQRT(MUSQ)                                                        GRP03040
C**** COMPUTE TIP MACH NO. ********************************************     GRP03050
  104 XMTIP = OMEGAR/SPSD                                                    GRP03060
      MUY = VELY/OMEGAR*1.689                                                GRP03070
C PRINT INPUT                                                                GRP03080
      DO 198 I=1,NSEG                                                        GRP03090
  198 NN(I)=I                                                                GRP03100
      GO TO 1002                                                             GRP03110
 1001 WRITE (6,58)                                                           GRP03120
 1002 WRITE (6,200) (NN(I),I=1,NSEG)                                         GRP03130
      WRITE (6,201) (XMASS(I),I=1,NSEG)                                      GRP03140
      WRITE (6,202) (DX(I),I=1,NSEG)                                         GRP03150
      WRITE (6,203) (XX(I),I=1,NSEG)                                         GRP03160
      WRITE (6,204) (C(I),I=1,NSEG)                                          GRP03170
      WRITE (6,205) (TW(I),I=1,NSEG)                                         GRP03180
      WRITE (6,206) (RB(I), I=1,NSEG)                                        GRP03190
      RB(1)=1.0                                                              GRP03200
      WRITE (6,1010) CASE                                                    GRP03210
      WRITE (6,207) OMEGAR,AG,R,BGL,SPSD,CG,RHO,TD3I                         GRP03220
      WRITE (6,208) G,ER,NB,DELD,XMTIP,SMOM,RS,SUM,FMOM,VEL,HK,IDPSI,FDMGRP03230
     1P,SFH,IGC,PC,TD3B,PHD3B                                                GRP03240
      WRITE (6,225) FSCG,VELY                                                GRP03250
      WRITE (6,226) FSMR,PSIS                                                GRP03260
      WRITE (6,227) WLCG,PHIS                                                GRP03270
      WRITE (6,228) WLMR,THFS                                                GRP03280
      WRITE (6,585)                                                          GRP03290
      WRITE (6,211) BTOL,BPTOL,NTRL                                          GRP03300
C**** PRINT MAJOR ITERATION OPTIONS IF USED ***************************     GRP03310
      IF(XITLIM .EQ.0.) GO TO 1600                                           GRP03320
      WRITE (6,38) RL,RD,ITLIM,XLTOL,XDTOL                                   GRP03330
      IF(SHIN) WRITE (6,25)                                                  GRP03340
      IF(.NOT.SHIN) WRITE (6,585)                                            GRP03350
      IF(A1B1) WRITE(6,95) RA1S,RB1S,TOLAB                                   GRP03360
      IF(ALFA) WRITE(6,39) ALL                                               GRP03370
C**** SET UP CASE AND COMPUTE STARTING VALUES *************************     GRP03380
 1600 CONTINUE                                                               GRP03390
```

```
   29   LL=0                                                                  GRP03400
        A1R=A1S/RC                                                            GRP03410
        B1R=B1S/RC                                                            GRP03420
        CB=COS(B1R)                                                           GRP03430
        SB=SIN(B1R)                                                           GRP03440
        IF(BIN.EQ.0..OR.ITN.NE.0) GO TO 210                                   GRP03450
        B(1)=BIN                                                              GRP03460
        BP(1)=BPIN                                                            GRP03470
        BPP(1)=BPPIN                                                          GRP03480
        BIN=0.                                                                GRP03490
        GO TO 114                                                             GRP03500
   210  IF(PCNV.NE.0.0) GO TO 113                                             GRP03510
        GAM=5.73*C75*RHO*R**4/SMOM                                            GRP03520
        T7R=T75/RC                                                            GRP03530
        HA=GAM/2.*(T7R*((1.0+MUSQ)/4.0)+LAMBDA/3.0)                           GRP03540
        BPP(1)=MU*(8./3.*T7R+2.*LAMBDA)/(1.-.5*MUSQ)                          GRP03550
        BP(1)=-4./3.*MU*HA/(1.+.5*MUSQ)                                       GRP03560
        B(1)=HA-BPP(1)                                                        GRP03570
        GO TO 114                                                             GRP03580
   113  B(1)=B(KP1)                                                           GRP03590
        BP(1)=BP(KP1)                                                         GRP03600
        BPP(1)=BPP(KP1)                                                       GRP03610
   114  PSI=0.0                                                               GRP03620
        LL=LL+1                                                               GRP03630
        XMH3 = 0.0                                                            GRP03640
        XMH5 = 0.0                                                            GRP03650
        XLH1 = 0.0                                                            GRP03660
        XLH2 = 0.0                                                            GRP03670
        HMR = (WLMR-WLCG)/(12.*R)                                             GRP03680
        LMR = (FSCG-FSMR)/(12.*R)                                             GRP03690
        PSO = PSIS/OM                                                         GRP03700
        PHSO = PHIS/OM                                                        GRP03710
        THFO = THFS/OM                                                        GRP03720
        FMEOR = FMOM*ER/(RHO*PI*R4)                                           GRP03730
        ERPI = ER/TWOPI                                                       GRP03740
        SUM  = 0.0                                                            GRP03750
        SUM1 = 0.0                                                            GRP03760
        SUM2 = 0.0                                                            GRP03770
        SUM3 = 0.0                                                            GRP03780
        SUM4 = 0.0                                                            GRP03790
        RCFPS=RCFPM/60.                                                       GRP03800
C  ***************************************************************************GRP03810
C BEGIN CASE  ************************************************************   GRP03820
        DO 30 I=2,KP1                                                         GRP03830
        PSI=PSI+XDPSI                                                         GRP03840
        B(I)=B(I-1)+BP(I-1)*XSIN+(1.-XCOS)*BPP(I-1)                           GRP03850
        BD(I)=B(I)*RC                                                         GRP03860
        BP(I)=BP(I-1)*XCOS+BPP(I-1)*XSIN                                      GRP03870
        YSIN=SIN(B(I))                                                        GRP03880
```

```
      ZSIN=SIN(PSI)                                                          GRP03890
      YCOS=COS(B(I))                                                         GRP03900
      ZCOS=COS(PSI)                                                          GRP03910
      CWM =(((ZCOS*HX+ZSIN*HY)*YSIN+YCOS*HZ)*BG/HW+ER*YSIN)*S                GRP03920
      IF(SMOM.NE.0.) CWM=CWM+YSIN*YCOS                                       GRP03930
      AM=0.0                                                                 GRP03940
      DO 7 IJ=1,7                                                            GRP03950
    7 H(IJ)=0.0                                                              GRP03960
      PSI2=2.0*PSI                                                           GRP03970
C  CALCULATIONS FOR DELTA 3 BAR                                              GRP03980
      TD3=TD3L                                                               GRP03990
      IF(D3B) TD3=TD3+TD3B*SIN(PSI+PHD3BR)                                   GRP04000
C BEGIN SPANWISE INTEGRATION*************************************           GRP04010
      DO 28 N=1,NSEG                                                         GRP04020
      NB=RB(N)                                                               GRP04030
      UP(N) = (LAMBDA+(ER+ X(N)*YCOS)*(PHSO*ZSIN+ THFO*ZCOS)- LMR*           GRP04040
     1THFO)*YCOS-X(N)*BP(I)-(MU*ZCOS-MUY*ZSIN) *YSIN                         GRP04050
      IF(USVL) UP(N)=UP(N)-XDA(I,N)*YCOS /OMEGAR+VEL*SIN(ALL/RC)/OMEGAR      GRP04060
      IF (RCFPM .NE. 0.)  UP(N)=UP(N) - RCFPS*YCOS/OMEGAR                    GRP04070
      UT(N) = (1.-PSO)*(ER+X(N)*YCOS)+(MU-HMR*THFO)* ZSIN+(MUY+LMR *PSO      GRP04080
     1+HMR*PHSO)*ZCOS                                                        GRP04090
      UR(N) = MU*ZCOS*YCOS-(LAMBDA+(ER+X(N)*YCOS)*(PHSO*ZSIN + THFO*ZCOSGRP04100
     1) - LMR*THFO)*YSIN                                                     GRP04110
C  CALCULATIONS FOR TIP SWEEP                                              GRP04120
      IF (N .LT. NTPST) GOTO 9007                                            GRP04130
      URS=UR(N)*COS(TIPSW) + UT(N)*SIN(TIPSW)                                GRP04140
      UTS=UT(N)*COS(TIPSW) - UR(N)*SIN(TIPSW)                                GRP04150
      UT(N)=UTS                                                              GRP04160
      UR(N)=URS                                                              GRP04170
 9007 USQ=UP(N)**2+UT(N)**2 + UR(N)**2                                       GRP04180
      U(N)=SQRT(USQ)                                                         GRP04190
      U(N) = SIGN(U(N),UT(N))                                                GRP04200
      UTUR(N) = SQRT(UT(N)**2 + UR(N)**2)                                    GRP04210
      UTUR(N)=SIGN(UTUR(N),UT(N))                                            GRP04220
      SWPCOS(N) = ABS(UT(N))/UTUR(N)                                         GRP04230
      SWEEP(I,N)=ATAN2(SQRT(1.-SWPCOS(N)**2),SWPCOS(N))*RC                   GRP04240
      PHI (I,N) = ATAN2(UP(N),UTUR(N))*RC                                    GRP04250
 2222 XMACH(I,N)=XMTIP*U(N)                                                  GRP04260
      XMACHT = ABS(XMACH(I,N))                                               GRP04270
      THETAR(N)=(TW(N)-A1S*ZCOS-B1S*ZSIN-A2S*COS(PSI2)-B2S*SIN(PSI2)-TD3GRP04280
     1*BD(I)+T75)/RC                                                         GRP04290
      AL(I,N) = PHI(I,N)+ATAN2(ABS(SWPCOS(N))*SIN(THETAR(N)),COS(THETAR(GRP04300
     1N)))*RC                                                                GRP04310
      ABAL=ABS(AL(I,N))                                                      GRP04320
      IF(ABAL.GT.180.) AL(I,N)=SIGN(ABAL-360.,-AL(I,N))                      GRP04330
      ALRAD=AL(I,N)/RC                                                       GRP04340
      ALTAB=ABS(AL(I,N))                                                     GRP04350
      IF(AL(I,N) .GT. HIALFA .OR. AL(I,N) .LT. LOALFA)XMACHT=0.              GRP04360
      IF(N .LE. NSPAR) GO TO 27                                              GRP04370
```

```
      IF(SYM.NE.0.)  ALTAB=AL(I,N)                                          GRPC4380
      CALL BLIN4  (CLT,NB,5,15,100,CL(I,N),ALTAB,XMACHT,L1)                 GRPC4390
      CALL BLIN4  (CDT,NB,5,15,100,CD(I,N),ALTAB,XMACHT,L2)                 GRPC4400
      IF (L1 + L2 .EQ.2) GOTO 107                                           GRP04410
      IERR =  1                                                             GRPC4420
106   IF(IERR .EQ. 0) GOTO 8001                                             GRP04430
      WRITE(6,8821)                                                         GRP04440
      WRITE(6,8823) ALTAB,XMACHT,LL,N,XX(N),IPSI(I),L1,L2                   GRP04450
      IF(IERR .EQ. 1) GOTO 5000                                             GRP04460
8001  WRITE(6,8822)                                                         GRPC4470
      WRITE(6,8823) ALTAB,XMACHT,LL,N,XX(N),IPSI(I),L1,L2                   GRP04480
      IF (IERR .EQ. 0) GOTO 5000                                            GRP04490
107   CD(I,N)=CD(I,N) + DELD                                                GRP04500
      IF (N.EQ.1) CL(I,1)=0.0                                               GRP04510
      GOTO 172                                                              GRP04520
27    IF (SYMSPR .NE. 0.) ALTAB=AL(I,N)                                     GRP04530
      CALL BLIN4  (BSCLT,1,1,5,71,CL(I,N),ALTAB,XMACHT,L1)                  GRP04540
      CALL BLIN4  (BSCDT,1,1,5,71,CD(I,N),ALTAB,XMACHT,L2)                  GRP04550
      IF (L1 + L2 .EQ. 2) GOTO 172                                          GRP04560
      IERR=0                                                                GRP04570
      GOTO 106                                                              GRP04580
172   IF (N.EQ.NSEG) CL(I,N)=0.                                             GRP04590
      IF (ABS(SWPCOS(N)) .LT. .5) CL(I,N)=.5*CL(I,N)                        GRPC4600
      IF (ABS(SWPCOS(N)) .LT. .3) CL(I,N)=0.0                               GRP04610
      IF(AL(I,N).GE.0..OR.SYM.NE.0.) GO TO 5                                GRPC4620
      CL(I,N)=-CL(I,N)                                                      GRP04630
    5 UCD(N)=ABS(U(N))*CRDX(N)                                              GRP04640
      LOAD(I,N)=(CL(I,N)*(UTUR(N))+CD(I,N)*UP(N))*ABS(U(N))*XLFC(N)         GRP04650
      CU = CD(I,N)*UTUR(N)*UCD(N)                                           GRP04660
      H(1)=H(1)+CU                                                          GRPC4670
      H(2)=H(2)+CU*X(N)                                                     GRP04680
      CU=CL(I,N)*UP(N)*UCD(N)                                               GRP04690
      H(3)=H(3)+CU                                                          GRP04700
      H(4)=H(4)+CU*X(N)                                                     GRPC4710
      CU = (CL(I,N)*UTUR(N)+CD(I,N)* UP(N))*UCD(N)                          GRPC4720
      H(5)=H(5)+CU                                                          GRP04730
      H(6)=H(6)+CU*X(N)                                                     GRP04740
   28 AM=AM+CU*X(N)                                                         GRPC4750
C*************************************************************************GRP04760
      AM=AM/SR                                                              GRP04770
C COMPUTE FORCE COEFFICIENTS AROUND AZIMUTH                                 GRP04780
      CQL(I )=(ER*H(3)+H(4)*YCOS)/TWOPI                                     GRP04790
      CQD(I )=(ER*H(1)+H(2)*YCOS)/TWOPI                                     GRPC4800
      CQ(I)=CQD(I)-CQL(I)                                                   GRP04810
      CZ(I )=-H(5)*YCOS/TWOPI                                               GRPC4820
      H13=H(1)-H(3)                                                         GRP04830
      CX(I )=(H(5)*YSIN*ZCOS-ZSIN     *H(1)+H(3)*ZSIN)/TWOPI                GRPC4840
      CY(I )=(-H(5)*YSIN*ZSIN-ZCOS*H13)/TWOPI                               GRPC4850
      HEYH=-H(5)*ER*YCOS-H(6)                                               GRP04860
```

```
      H24=H(2)-H(4)                                                     GRP04870
      CP(I  )=(HEYH*ZCOS-YSIN*ZSIN*H24*(1.-INPL))/TWOPI                 GRP04880
      XR(I  )=(HEYH*ZSIN-YSIN*ZCOS*H24*(1.-INPL))/TWOPI                 GRP04890
      MG = 2.* PHSO* ZCOS- 2.*THFO* ZSIN                                GRP04900
      BPP(I) =(AM-CWM-(BP(I)*FDMP+(B (I)-PCR)*SFH/OM)/(SMOM*OM))+MG     GRP04910
      IF(SMOM.EQ.0.) BPP(I) = 0.0                                       GRP04920
      XMH2 = ( BPP(I)*YCOS-BP(I)**2*YSIN )                              GRP04930
      HM(I) = FMEOR*XMH2*ZCOS+ER*CZ(I) *ZCOS-(SFH*(B(I)-PCR)*ZCOS) /    GRP04940
     1(RHO*PI*OMEGAR**2 *R**3)                                          GRP04950
      HL(I) = FMEOR*XMH2*ZSIN+ER*CZ(I) *ZSIN-(SFH*(B(I)-PCR)*ZSIN) /    GRP04960
     1(RHO*PI*OMEGAR**2 *R**3)                                          GRP04970
C     PRINT TRANSIENT AND/OR DEBUGGING IF DESIRED                       GRP04980
      IF ((XMESS(2)+XMESS(1)).EQ.0.)  GO TO 30                          GRP04990
      IF(LL.EQ.1.AND.I.EQ.2) WRITE (6,94) B(1),BP(1),BPP(1)             GRP05000
      NPSI=IPSI(I)                                                      GRP05010
      IF (XMESS(1).EQ.0.)  GO TO 299                                    GRP05020
      IF (I.GT.2)  GO TO 298                                            GRP05030
      WRITE (6,58)                                                      GRP05040
  298 WRITE(6,91) NPSI,LL,B(I),BP(I),BPP(I),(UP(N),UT(N),U(N),PHI(I,N), GRP05050
     1AL(I,N),XMACH(I,N),CL(I,N),CD(I,N),LOAD(I,N),N=1,NSEG)            GRP05060
      GO TO 30                                                          GRP05070
  299 WRITE (6,92) NPSI,LL,B(I),BP(I),BPP(I)                            GRP05080
   30 CONTINUE                                                          GRP05090
C*******************************************************************GRP05100
C SAVE STARTING VALUES AT PSI = 0                                       GRP05110
      BO(LL)=B(1)                                                       GRP05120
      BPO(LL)=BP(1)                                                     GRP05130
      BPPO(LL)=BPP(1)                                                   GRP05140
      IF (LL.LT.2) GO TO 113                                            GRP05150
C TEST FOR FLAPPING CONVERGENCE                                         GRP05160
      CONV=(ABS(B(KP1)-B(1)).LE.BTOL).AND.(ABS(EP(KP1)-EP(1)).LE.BPTOL) GRP05170
      IF(CONV) GO TO 711                                                GRP05180
      IF(LL.LT.NTRL) GO TO 113                                          GRP05190
      IF(.NOT.(SHIN.AND.ITN.LT.ITLIM).AND.PRNT) WRITE (6,34)            GRP05200
C *******************************************************************GRP05210
C                                                                       GRP05220
C     COMPUTE AND PRINT HARM. ANAL. OF BETA IN DEGREES                  GRP05230
C                                                                       GRP05240
  711 BD(1)=B(1)*RC                                                     GRP05250
      CALL HARM(K ,6,BD,0.0,A0,BUF1,BUF2,BUF3,BUF4,BUF5,L)              GRP05260
      IF (.NOT.A1B1) GO TO 164                                          GRP05270
C     COMPUTE DELTA A1S AND B1S                                         GRP05280
      DA1S = (BUF1(1)-RA1S)*IGC                                         GRP05290
      DB1S = (BUF2(1)-RB1S)*IGC                                         GRP05300
C INTEGRATE FORCE COEFFICIENTS AROUND AZIMUTH                           GRP05310
  164 XCQL=CQL(2)                                                       GRP05320
      XCQD=CQD(2)                                                       GRP05330
      XCQ=CQ(2)                                                         GRP05340
      XCZ=CZ(2)                                                         GRP05350
```

```
      XCX=CX(2)                                                          GRP05360
      XCY=CY(2)                                                          GRP05370
      XXR=XR(2)                                                          GRP05380
      XCP=CP(2)                                                          GRP05390
      XHM = HM(2)                                                        GRP05400
      XHL = HL(2)                                                        GRP05410
      DO 601 I=3,KP1                                                     GRP05420
      XCQL=XCQL+CQL(I)                                                   GRP05430
      XCQD=XCQD+CQD(I)                                                   GRP05440
      XCQ=XCQ+CQ(I)                                                      GRP05450
      XCZ=XCZ+CZ(I)                                                      GRP05460
      XCX=XCX+CX(I)                                                      GRP05470
      XCY=XCY+CY(I)                                                      GRP05480
      XXR=XXR+XR(I)                                                      GRP05490
      XHM = XHM+HM(I)                                                    GRP05500
      XHL = XHL+HL(I)                                                    GRP05510
  601 XCP=XCP+CP(I)                                                      GRP05520
C***  COMPUTE TOTAL FORCES*******************************               GRP05530
      XK=K                                                               GRP05540
 1750 F=XNB/XK*HK                                                        GRP05550
      FR=F*R                                                             GRP05560
      CMF=OM/550.                                                        GRP05570
      Q=XCQ*FR                                                           GRP05580
      HP=Q*OMF                                                           GRP05590
      PHP=XCQD*FR*OMF                                                    GRP05600
      ZF=XCZ*F                                                           GRP05610
      XF=XCX*F                                                           GRP05620
      YF=XCY*F                                                           GRP05630
      RM=XXR*FR                                                          GRP05640
      PM=XCP*FR                                                          GRP05650
      XLH = XHL*FR                                                       GRP05660
      XMH = XHM*FR                                                       GRP05670
      AX=ALLR                                                            GRP05680
      IF(.NOT.USVL.OR.UVL.LT.0.) AX=ATAN(LAMBDA/MU-(ZF/HK)/(2.*MU*SQRT(LGRP05690
     1AMBDA**2+MUSQ)))                                                   GRP05700
      ALS=AX*RC                                                          GRP05710
      ALC=ALS-B1S                                                        GRP05720
      AR=ATAN(RD/RL)                                                     GRP05730
      XRC=SQRT(ZF**2+XF**2)                                              GRP05740
      RR=SQRT(RL**2+RD**2)                                               GRP05750
      CA=COS(AX)                                                         GRP05760
      SA=SIN(AX)                                                         GRP05770
      XCL=-ZF*CA+XF*SA                                                   GRP05780
      XCD=-ZF*SA-XF*CA                                                   GRP05790
      AC=ATAN2(XCD,XCL)                                                  GRP05800
      VAC=MU*OMEGAR/CA/1.688                                             GRP05810
      IF (.NOT.ALFA) MU=VEL/VAC*MU                                       GRP05820
      MUSQ=MU**2                                                         GRP05830
      EQD=326.*HP/VAC+XCD                                                GRP05840
```

```
      EQLD=XCL/EQD                                                              GRPC5850
      EQPA=EQD/RHO*.70116482/VAC**2                                             GRPC5860
      ALR=ALC/RC                                                                GRPC5870
      W=ATAN2(SIN(A1R)/COS(A1R),CA)                                             GRPC5880
      SW=SIN(W)                                                                 GRPC5890
      CW=COS(W)                                                                 GRPC5900
      TAU=ATAN(SIN(ALR)/COS(ALR)*CW)                                            GRPC5910
      STAU=SIN(TAU)                                                             GRPC5920
      CTAU=COS(TAU)                                                             GRPC5930
      THR=XF*(SA*CW*CTAU-CA*STAU)-ZF*(CA*CTAU*CW+SA*STAU)+YF*SW*CTAU            GRPC5940
      CT=THR/HK                                                                 GRPC5950
      HF=-XF*(CA*CTAU+SA*STAU*CW)-ZF*(SA*CTAU-CA*STAU*CW)-YF*SW*STAU            GRPC5960
      CH=HF/HK                                                                  GRPC5970
      CLP=XCL/HK                                                                GRPC5980
      CDP=XCD/HK                                                                GRPC5990
      CTOS=CT/RS                                                                GRPC6000
      CHOS=CH/RS                                                                GRPC6010
      CLPOS=CLP/RS                                                              GRPC6020
      CDPOS=CDP/RS                                                              GRPC6030
      RES=SQRT(XF**2+YF**2+ZF**2)                                               GRPC6040
      LRF=100./(XCL*R)                                                          GRPC6050
      LATD=RM*LRF                                                               GRPC6060
      LONGD=PM*LRF                                                              GRPC6070
      CQANS = Q/(HK*R)                                                          GRPC6080
      CQOS = CQANS/RS                                                           GRPC6090
C*************************************************************************GRPC6100
C**** APPLY MAJOR ITERATION CONVERGENCE CRITERIA ********************** GRPC6110
 1500 IF (XITLIM.EQ.0.) GO TO 116                                               GRPC6120
      MCONV=ABS(RL-XCL).LE.XLTOL                                                GRPC6130
      IF(.NOT.ALFA) MCONV=MCONV.AND.ABS(RD-XCD).LE.XDTOL                        GRPC6140
      IF(SHIN) MCONV=MCONV.AND.CONV                                             GRPC6150
      IF(ABIT.NE.0.) MCONV=MCONV.AND.ABS(DA1S).LE.TOLAB.AND.ABS(DB1S).LEGRPC6160
     1.TOLAB                                                                    GRPC6170
      IF (TRIM.NE.0.)MCONV=MCONV.AND.ABS(RM).LE.100..AND.ABS(PM).LE.100.GRPC6180
C *************************************************************************GRPC6190
C IF MAJ. IT. CONVERGED GO TO FINAL PRINTOUT, IF NOT TEST FOT IT. LIMIT GRPC6200
C *************************************************************************GRPC6210
      IF (SKIP.GT.0..AND..NOT.MCONV)  GO TO  1699                               GRPC6220
  116 WRITE (6,58)                                                              GRPC6230
      WRITE (6,142) A1S,B1S,A2S,B2S,T7S,LAMBDA,MU ,MUY                          GRPC6240
      WRITE (6,180)CT,CH,CLP,CDP,CTOS,CHOS,CLPOS,CDPOS,CQANS,CQOS               GRPC6250
      WRITE (6,181)XCL,XF,RES,XCD,YF,RM                                         GRPC6260
      WRITE (6,182) HP,ZF,PM,EQD,EQLD,EQPA,ALS,THR,Q                            GRPC6270
      WRITE (6,183)ALC,HF,PHP,LATD,VAC,LONGD,     XMH,XLH,ITN                   GRPC6280
      IF (XITLIM.EQ.0.) GO TO 115                                               GRPC6290
 1699 IF (MCONV) GO TO 115                                                      GRPC6300
C !!*********************************************************************GRPC6310
C IF LIMIT NOT EXCEEDED ALTER PARAMETERS, OTHERWISE PRINT FAILURE MESSAGGRPC6320
C *************************************************************************GRPC6330
```

```
      IF (ITN.LT.ITLIM) GO TO 51                                        GRPC6340
 1700 CONTINUE                                                          GRPC6350
      WRITE (6,48)                                                      GRPC6360
      WRITE (6,56)                                                      GRPC6370
      WRITE (6,48)                                                      GRPC6380
      ITN=ITN+1                                                         GRPC6390
      GO TO 115                                                         GRPC6400
C**** ALTER PARAMETERS ACCORDING TO OPTIONS ***************************** GRPC6410
   51 RSF=RS*5.73                                                       GRPC6420
      DATH=16.*MU/(6.-3.*MUSQ)+RSF/(12.*MUSQ)                           GRPC6430
      DAL=4.*MU/(2.-MUSQ)+1./MU+RSF/(8.*MUSQ)                           GRPC6440
      HR=HK*RS/2.                                                       GRPC6450
      HJ=.47+.28*MUSQ                                                   GRPC6460
      HR5=HR*5.73                                                       GRPC6470
      DRTH=HR5*(.3+.48*MUSQ)                                            GRPC6480
      DRL=HR5*HJ                                                        GRPC6490
      ABF=0.                                                            GRPC6500
      DAB=4.*MUSQ/(MUSQ-2.)-RSF/(8.*MU)-1.                              GRPC6510
      DRB=-DRL*MU                                                       GRPC6520
      IF (.NOT.A1B1) GO TO 52                                           GRPC6530
      FEI = ATAN2( C75*R4/1760.,((3.- 8.*ER +6.*ER**2)/(ER*R *FMOM *    GRPC6540
     1 (  1.0  ) +SFH/OMS))                                             GRPC6550
      A1S = A1S-(DA1S*COS(FEI) +DB1S* SIN(FEI))                         GRPC6560
      ABF = DA1S*SIN(FEI)- DB1S*COS(FEI)                                GRPC6570
      B1S=B1S+ABF                                                       GRPC6580
      ABF=ABF/RC                                                        GRPC6590
   52 DELR=RR-XRC-DRB*ABF                                               GRPC6600
      DELA=AR-AC-DAB*ABF                                                GRPC6610
      DRALTH=DRL*DATH-DRTH*DAL                                          GRPC6620
      DTH=(RL-XCL-DRB*ABF)/DRTH*RC*IGC*(1.-TOP)                         GRPC6630
      DLMDA=(RL-XCL-DRB*ABF)/DRL*IGC*TOP                                GRPC6640
      IF (ALFA) GO TO 888                                               GRPC6650
      DTH=(DRL*DELA-DAL*DELR)/DRALTH*RC*IGC                             GRPC6660
      DLMDA=(DATH*DELR-DRTH*DELA)/DRALTH*IGC                            GRPC6670
      IF (.NOT.USVL) GO TO 888                                          GRPC6680
      DALFA=DLMDA/MU                                                    GRPC6690
      ALLR=ALLR+DALFA                                                   GRPC6700
  888 IF (ABS(DTH/10.).GT..5)  DTH = SIGN(.5*10.,DTH)                   GRPC6710
      IF (ABS(DLMDA/0.0200).GT..4)  DLMDA = SIGN(.4*0.0200,DLMDA)       GRPC6720
      T75=T75+DTH                                                       GRPC6730
  311 LAMBDA=LAMBDA+DLMDA                                               GRPC6740
      ITN=ITN+1                                                         GRPC6750
C ********************************************************************GRPC6760
C**** TEST FOR LIFT CURVE SLOPE LESS THAN ACCEPTABLE MINIMUM *********  GRPC6770
      IF (ITN.EQ.1) GO TO 952                                           GRPC6780
      IF (.NOT.ALFA) GO TO 115                                          GRPC6790
      TEMP=XCL-TEMP                                                     GRPC6800
      A=TEMP/DTP*RC/DRTH*5.73                                           GRPC6810
      IF (A.LT.ATEST) TEST=.FALSE.                                      GRPC6820
```

```
      IF (.NOT.TEST) WRITE (6,951) A,AIEST                              GRP06830
  952 TEMP=XCL-DRB*ABF                                                  GRP06840
      DTP=DTH                                                           GRP06850
C ***************************************************************     GRP06860
C     PRINT INITIAL BETA, *, AND **, AND SUMMARY OF FINAL REV.          GRP06870
  115 IF (XMESS(6).EQ.1..AND.MCONV)  GO TO 2501                         GRP06880
      GO TO 1501                                                        GRP06890
 2501 WRITE (6,58)                                                      GRP06900
      WRITE (6,134)                                                     GRP06910
      LL=LL-1                                                           GRP06920
      DO 132 I=1,LL                                                     GRP06930
  132 WRITE (6,133) I,B0(I ),BP0(I ),BPP0(I )                           GRP06940
      LL= LL + 1                                                        GRP06950
      WRITE (6,135) LL                                                  GRP06960
      MM=K/2+1                                                          GRP06970
      DO 136 I=1,MM                                                     GRP06980
      L=I+MM-1                                                          GRP06990
  136 WRITE (6,137) IPSI(I),B(I),BP(I),BPP(I),IPSI(L),B(L),BP(L),BPP(L) GRP07000
      WRITE (6,160)                                                     GRP07010
      WRITE (6,161) A0, (BUF1(I) ,I=1,6)                                GRP07020
      WRITE (6,162) (BUF2(I) ,I=1,6)                                    GRP07030
C               ***************************************************     GRP07040
 1501 IF (XMESS(5).EQ.1..AND.MCONV)  GO TO 2502                         GRP07050
      GO TO 1502                                                        GRP07060
C**   COMPUTE AND PRINT AVERAGES**************************              GRP07070
 2502 WRITE(6,58)                                                       GRP07080
      WRITE (6,148)                                                     GRP07090
      DO 143 I=2,KP1                                                    GRP07100
  143 WRITE (6,144) IPSI(I),(FC(I,J),J=1,8)                             GRP07110
      DO 602 I=1,8                                                      GRP07120
  602 AV(I)=TF(I)/XK                                                    GRP07130
      WRITE (6,145) (AV(I),I=1,8)                                       GRP07140
      DO 603 I=1,8                                                      GRP07150
  603 AV(I)=XNB*AV(I)                                                   GRP07160
      WRITE (6,146) (AV(I),I=1,8)                                       GRP07170
      DO 604 I=1,8                                                      GRP07180
  604 AV(I)=AV(I)/RS                                                    GRP07190
      WRITE (6,147) (AV(I),I=1,8)                                       GRP07200
      MM=K/2 + 1                                                        GRP07210
      I=MM + 1                                                          GRP07220
      DO 151 J=I,KP1                                                    GRP07230
      IF(CQD(I) .LT. CQD(J)) GO TO 152                                  GRP07240
  151 CONTINUE                                                          GRP07250
      GO TO 154                                                         GRP07260
  152 I = J                                                             GRP07270
  154 BCQDOS=CQD(I)*XNB/RS                                              GRP07280
      WRITE (6,153) BCQDOS,IPSI(I)                                      GRP07290
C               ***************************************************     GRP07300
C     COMPUTE AND PRINT HARM. ANAL. OF CZ IF DESIRED                    GRP07310
```

```
 1502 IF (XMESS(4).EQ.1..AND.MCONV)  GO TO 2503                          GRP07320
      GO TO 1503                                                         GRP07330
 2503 DO 902 I=1,K                                                       GRP07340
  902 CZ(I)=CZ(I+1)                                                     GRP07350
      WRITE (6,58)                                                      GRP07360
      WRITE (6,901)                                                     GRP07370
      CALL HARM (K,6,CZ,DPSI,A0,BUF1,BUF2,BUF3,BUF4,BUF5,L)             GRP07380
      A0=A0*HK                                                          GRP07390
      DO 900 I=1,6                                                      GRP07400
      BUF1(I)=-BUF1(I)*HK                                               GRP07410
  900 BUF2(I)=-BUF2(I)*HK                                               GRP07420
      WRITE (6,161) A0,(BUF1(I),I=1,6)                                  GRP07430
      WRITE (6,162) (BUF2(I),I=1,6)                                     GRP07440
C ***************************************************************      GRP07450
C**** PRINT DATA SECTION AT SPECIFIED INTERVAL IF DESIRED ************   GRP07460
 1503 IF (XMESS(7).EQ.1..AND.MCONV)  GO TO 2505                         GRP07470
      GO TO 523                                                         GRP07480
 2505 WRITE (6,58)                                                      GRP07490
      NP=ABS(PPSI)/DPSI+1.1                                             GRP07500
      NPL1=NP-1                                                         GRP07510
      NPL12=NPL1*2                                                      GRP07520
      KLN=KP1-NPL1                                                      GRP07530
      DO 73 I=NP,KLN,NPL12                                              GRP07540
      J=I+NPL1                                                          GRP07550
      PSIP=IPSI(I)                                                      GRP07560
      WRITE (6,71) IPSI(I),IPSI(J)                                      GRP07570
   73 WRITE(6,72)  (XX(N),AL(I,N),XMACH(I,N),CL(I,N), CD(I,N),PHI(I,N),  GRP07580
     1LOAD(I,N),SWEEP(I,N),AL(J,N),XMACH(J,N),CL(J,N),CD(J,N),PHI(J,N),  GRP07590
     2LOAD(J,N),SWEEP(J,N), N=1,NSEG)                                   GRP07600
C ***************************************************************      GRP07610
C      COMPUTE AND PRINT HARMONICS OF AIR LOADS IF DESIRED              GRP07620
  523 IF (XMESS(3).EQ.1..AND.MCONV)  GO TO 2506                         GRP07630
      GO TO 47                                                          GRP07640
 2506 WRITE (6,519)                                                     GRP07650
      DO 521 N=1,NSEG                                                   GRP07660
      DO 520 I=1,K                                                      GRP07670
  520 DUM(I)=LOAD(I+1,N)                                                GRP07680
      NH=MIN1(180./DPSI+.1,10.)                                         GRP07690
      CALL HARM (K,NH,DUM,DPSI,A0,BUF1,BUF2,BUF3,BUF4,BUF5,L)           GRP07700
      WRITE(6,522)N,A0,(BUF1(I),BUF2(I),BUF3(I),BUF4(I),BUF5(I),I=1,NH) GRP07710
  521 CONTINUE                                                          GRP07720
C ***************************************************************      GRP07730
CC     GO TO RESTART PROCEDURE IF INDICATED                             GRP07740
C ***************************************************************      GRP07750
   47 IF(XITLIM.NE.0..AND.ITN.LE.ITLIM.AND..NOT.MCONV.AND.TEST) GO TO   GRP07760
     1  1111                                                           GRP07770
      GO TO 77                                                          GRP07780
 1111 JEB = JEB + 1                                                     GRP07790
      GO TO 6969                                                        GRP07800
```

```
   77 JOY = 1                                                                GRP07810
 6969 IF (JOY.GT.0) GO TO 5000                                               GRP07820
C***   MOMENT OPTION*************************************************       GRP07830
      IF (TRIM .EQ. 0.) GO TO 1710                                           GRP07840
      MOMITN=MOMITN + 1                                                      GRP07850
      IF (MOMITN .GT. 1) GO TO 1701                                          GRP07860
      A1S1 = A1S                                                             GRP07870
      B1S1 = B1S                                                             GRP07880
      RM1 = RM                                                               GRP07890
      PM1 = PM                                                               GRP07900
      A1S = IGC * (A1S -.0006*RM)                                            GRP07910
      B1S = IGC * (B1S + .0007*PM)                                           GRP07920
      GO TO 1710                                                             GRP07930
 1701 A1S2 = A1S                                                             GRP07940
      RM2 = RM                                                               GRP07950
      PM2 = PM                                                               GRP07960
      B1S2  = B1S                                                            GRP07970
      B1S = IGC * (B1S2*PM1-PM2*B1S1)/(PM1-PM2)                              GRP07980
      A1S = IGC * (A1S2*RM1-RM2*A1S1)/(RM1-RM2)                              GRP07990
      ABF=B1S/RC                                                             GRP08000
 1710 CONTINUE                                                               GRP08010
      IF (JEB.LE.15) GO TO 70                                                GRP08020
      WRITE (6,808)                                                          GRP08030
C ***********************************************************************GRP08040
C     GO TO NEXT CASE IF LOC. 99 NOT EQ. ANY NEG NUMBER.                     GRP08050
C ***********************************************************************GRP08060
 5000 JOY = 0                                                                GRP08070
      JEB = 0                                                                GRP08080
      IF (XEND.EQ.2.) GO TO 2000                                             GRP08090
      IF (XEND.GE.0.) GO TO 1000                                             GRP08100
      WRITE (6,5001)                                                         GRP08110
 6666 STOP                                                                   GRP08120
   25 FORMAT(     66X,28HUSING SHORT ITERATION SCHEME)                       GRP08130
   34 FORMAT(////1H 42(1H*),5X,25HFLAPPING DID NOT CONVERGE,5X,42(1H*))     GRP08140
   38 FORMAT(    /16H REQUIRED LIFT =F9.2, 8X15HREQUIRED DRAG =F8.2,10X23GRP08150
     1HMAJOR ITERATION LIMIT =I3//16H LIFT TOLERANCE=F9.2, 8X15HDRAG TOLGRP08160
     2ERANCE=F8.2)                                                          GRP08170
   39 FORMAT(53H0ALPHA OPTION HAS BEEN REQUESTED - - - INPUT ALPHA = F8.GRP08180
     14)                                                                    GRP08190
   48 FORMAT(1H0,119(1H*))                                                  GRP08200
   56 FORMAT(1H0,39(1H*),5X,32HMAJOR ITERATION DID NOT CONVERGE,5X,38(1HGRP08210
     1*))                                                                   GRP08220
   58 FORMAT (1H1)                                                          GRP08230
   69 FORMAT (I2,10F7.0,/ (F9.0,9F7.0))                                    GRP08240
   71 FORMAT( //29X6HPSI = I4,9H  DEGREES44X6HPSI = I4,9H  DEGREES)        GRP08250
   72 FORMAT(132H0    X        ALPHA     MACH      CL       CD       PHI  L(LB/GRP08260
     1IN)     SWEEP       ALPHA     MACH      CL       CD       PHI  L(LB/IN)GRP08270
     2  SWEEP     //(F7.4,2X,6F8.3,F10.2,5X,6F8.3,F10.2))                  GRP08280
  173  FORMAT(1H1,50X,'BLADE DATA',/)                                       GRP08290
```

```
 74   FORMAT(1H1,50X,'SPAR DATA',/)                                          GRP08300
 79   FORMAT(1X,I2,7X,10F10.3,/,(10X,10F10.3))                               GRP08310
 80   FORMAT(1H1,2X,25HNAVAL AIR SYSTEMS COMMAND,4X,17HAIRFRAME DIVISIONGRP08320
     1,4X,19HAERO + HYDRO BRANCH, 4X,19HPERFORMANCE SECTION,4X,16HROTARYGRP08330
     5 WING UNIT/2X,'UNITED STATES NAVY    DEPARTMENT OF DEFENSE(?)'/53XGRP08340
     3,16HINPUT QUANTITIES)                                                 GRP08350
 91   FORMAT(/7H0PSI = I3,9H  DEGREES,5H  REVI3,5X7HBETA = F11.8,5X8HBETGRP08360
     1A* = F11.8,5X,9HBETA** = F11.8/                                       GRP08370
     2       12OHO       UP              UT            U             PHI        ALGRP08380
     3PHA       MACH NO.        CL            CD       LOAD(LB/IN)/         GRP08390
     4/ (9F12.7))                                                           GRP08400
 92   FORMAT (7H0PSI = I3,9H  DEGREES,5H  REVI3,5X7HBETA = F11.8,5X8HBETGRP08410
     1A* = F11.8,5X,9HBETA** = F11.8)                                       GRP08420
 94   FORMAT(11H0BETA(0) = ,F11.8,5X,11HBETA*(0) = ,F11.8,5X,12HBETA**(0GRP08430
     1) = ,F11.8)                                                           GRP08440
 95   FORMAT(17H0REQUESTED A1  = F10.4,6X16HREQUESTED B1  = F9.4,8X25HTOGRP08450
     1LERANCE ON A1 AND B1 = F6.3)                                          GRP08460
133   FORMAT(1H029X,I2,3X,3F17.7)                                            GRP08470
134   FORMAT(    1H0,28X,3HREV,12X,7HBETA(0),10X,8HBETA*(0),8 X,9HBETA**GRP08480
     1(0))                                                                  GRP08490
135   FORMAT(29H0EQUILIBRIUM SOLUTION  REV = I2       /4H0PSI5X4HBETA8X5HGRP08500
     1BETA*6X6HBETA**        30X3HPSI5X4HBETA8X5HBETA*6X6HBETA**)           GRP08510
137   FORMAT(I4,3F12.7,28XI3,3F12.7)                                         GRP08520
142   FORMAT(6H0  A1S,11X,3HB1S,11X, 3HA2S,11X,3HB2S,11X, 10HTHETA .75-,GRP08530
     111X,9HLAMBDA(S),11X,6HMU(X)S,11X,6HMU(Y)S/ 1X,F6.2,3F14.2,F18.2,  GRP08540
     2F21.4,2F16.4)                                                         GRP08550
144   FORMAT(I11,4X,8(1PE12.4))                                              GRP08560
145   FORMAT(15H0AVERAGE        ,8(1PE12.4))                                 GRP08570
146   FORMAT(15H (B) * AVE.     ,8(1PE12.4))                                 GRP08580
147   FORMAT(15H (B)*AV/SIG     ,8(1PE12.4))                                 GRP08590
148   FORMAT(//52X17HFORCE INTEGRATION//8X3HPSI10X2HCQ10X3HCQL9X3HCQD9X2GRP08600
     1HCZ,10X,2HCX,10X,2HCY,9X,4HCMHS,8X,4HCLHS,//)                         GRP08610
153   FORMAT(//  34X18HMAX B*CQD/SIGMA = F8.6,10H AT PSI = I3)               GRP08620
160   FORMAT(36X48HFOURIER COEFFICIENTS (WITH RESPECT TO THE SHAFT)//16XGRP08630
     173HBETA (DEG) = A0-A1*COS(PSI)-B1*SIN(PSI)-A2*COS(2*PSI)-B2*SIN(2*GRP08640
     2PSI).....)                                                            GRP08650
161   FORMAT(1H0  6X2HA012X2HA112X2HA212X2HA312X2HA412X2HA512X2HA6/7(1PEGRP08660
     114.4))                                                                GRP08670
162   FORMAT(1H020X        2HB112X2HB212X2HB312X2HB412X2HB512X2HB6/14X6(GRP08680
     11PE14.4))                                                             GRP08690
169   FORMAT(F10.0)                                                          GRP08700
180   FORMAT(    //       10HOCT      =1PE14.6,7X9HCH       =1PE14.6,7X10HCGRP08710
     1L*       =1PE14.6,7X10HCD*       =1PE14.6/10H CT/SIGMA=1PE14.6,7X9HCGRP08720
     2H/SIGMA=1PE14.6,7X10HCL*/SIGMA=1PE14.6,7X10HCD*/SIGMA=1PE14.6/1X,9GRP08730
     3H CQ      =1PE14.6,7X,10HCQ*/SIGMA=1PE14.6)                           GRP08740
181   FORMAT(1H0/    8X,12HLIFT        =,F11.3,8H  POUNDS,8X,12HX FORCE    GRP08750
     1 =,F11.3,8H  POUNDS,8X,12HRESULTANT  =,F11.3,8H  POUNDS//8X,12HDRAGRP08760
     2G        =,F11.3,8H  POUNDS,8X,12HY FORCE     =,F11.3,8H  POUNDS,8X,GRP08770
     312HROLL MOM   =,F11.3,11H  FT-POUNDS)                                 GRP08780
```

```
  182 FORMAT(1H0,7X,12HHORSEPOWER =,F11.3,16X,12HZ FORCE    =,F11.3,8H  GRP08790
     1POUNDS,8X,12HPITCH MOM  =,F11.3,11H  FT-POUNDS//8X,12HEQUIV DRAG =GRP08800
     2,F11.3,8H  POUNDS,8X,12HEQUIV L/D  =,F11.3,16X,12HEQUIV P.A. =,F11GRP08810
     3.3,10H  SQ. FEET//8X,12HALPHA(S)    =,F11.3,9H  DEGREES,7X,12HTHRUSGRP08820
     4T     =,F11.3,8H  POUNDS,8X,12HTORQUE     =,F11.3,11H  FT-POUNDS) GRP08830
  183 FORMAT(1H0,7X,12HALPHA(C)    =,F11.3,9H  DEGREES,7X,12HH FORCE    =GRP08840
     1,F11.3,8H  POUNDS,8X,12HPROFILE HP =,F11.3,                //8X12HLAGRP08850
     2T. DIS.  =F11.3,9H  PERCENT7X12HV(ACTUAL)  =F11.3,7H  KNOTS9X12HLOGRP08860
     3NG. DIS. =F11.3,9H  PERCENT// 47X,                          GRP08870
     425HSHEARS HUB PITCH MOMENT =F10.2,4X 6HFT-LBS //47X         GRP08880
     525HSHEARS HUB ROLL MOMENT  =F10.2,4X 6HFT-LBS // ,47X,      GRP08890
     6 'MAJOR ITERATIONS USED =', I4,/119(1H*))                   GRP08900
  200 FORMAT(/ 5X7HSTATION15I7)                                   GRP08910
  201 FORMAT(14H0MASS SLUG/FT 15F7.4)                             GRP08920
  202 FORMAT(8H0DELTA X6X15F7.4)                                  GRP08930
  203 FORMAT(2H0X12X15F7.4)                                       GRP08940
  204 FORMAT(11H0CHORD FEET3X15F7.4)                              GRP08950
205   FORMAT(11H0TWIST DEG.3X15F7.4)                             GRP08960
206   FORMAT(/,' BLADE DECK',1X,15F7.0)                          GRP08970
  207 FORMAT(1H0,9X,18H  OMEGA-R          =F8.2,5X,30H   FT/SEC GRP08980
     1          ,15H  AG          =F8.2,5X,9H  DEGREES//10X,18H  RADIUSGRP08990
     2       =F8.2,7X,27H FEET                    ,16H   BG     GRP09000
     3    =F8.2,5X,9H  DEGREES//10X,18H  SPEED OF SOUND = F8.2,5X,30H  GRP09010
     4FEET/SEC                ,15H  CG          =F8.2,5X,9H  DEGREESGRP09020
     5//10X,18H  RHO              =F13.7, 30H   SLUGS/CUBIC FT.     GRP09030
     6  ,15H  TAN DELTA 3 =F8.2,5X,9H          )                   GRP09040
  208 FORMAT(1H0,9X,18H  G                = F8.2,5X,30H   FEET/SEC SQ.   GRP09050
     1          ,15H  E/R          = F10.4 // 10X,18H  NO. BLADES (B) =GRP09060
     2 I5,    38X,15H  DELTA DRAG  = F10.4// 10X,18H  TIP MACH NO.    = F1GRP09070
     30.4,33X,15H  MOM-INERTIA = F13.7,15H  SLUG FEET SQ. // 10X,18H  SIGRP09080
     4GMA       =F10.4,33X,15H  SUM(DX)+E/R =F10.4//10X,18H  M(M)    GRP09090
     5      =F13.7,3X,9HSLUG FEET,18X,15H  VELOCITY    = F8.2,7X,5HKNOTGRP09100
     6S//12X16HTHRUST FACTOR  =F9.0,                34X15H  DELTA PSI   =I6GRP09110
     7, 9X7HDEGREES//12X16HFLAP DAMPER    =F9.0,7X19HFT. LB./RADIAN/SEC.GRP09120
     810X13HHINGE SPRING=F9.0,6X14HFT. LB./RADIAN/ 12X16HIT. GAIN CON.  GRP09130
     9=F8.2,37X13HPRE-CONING  =  F10.4,5X7HDEGREES/ 12X16HTAN D3 BAR    GRP09140
     * =F8.2,37X15HD3 BAR PHASE  = F 8.4,5X7HDEGREES)                  GRP09150
  211 FORMAT(20H TOLERANCE ON BETA = F8.5,5X,20HTOLERANCE ON BETA* = F8.GRP09160
     15,5X,27HFLAPPING ITERATION LIMIT = I2)                          GRP09170
  225 FORMAT( 12X16HFS(CG)          =F8.3,8X19HINCHES              10X    GRP09180
     113HV(Y)S        =F9.3,6X 14HKNOTS          )                    GRP09190
  226 FORMAT( 12X16HFS(MR)          =F8.3,8X19HINCHES              10X    GRP09200
     113HPSI *        =F9.3,6X 14HRADIANS/SEC    )                    GRP09210
  227 FORMAT( 12X16HWL(CG)          =F8.3,8X19HINCHES              10X    GRP09220
     113HPHI *        =F9.3,6X 14HRADIANS/SEC    )                    GRP09230
  228 FORMAT( 12X16HWL(MR)          =F8.3,8X19HINCHES              10X    GRP09240
     113HTHETA(F) *   =F9.3,6X 14HRADIANS/SEC    )                    GRP09250
  500 FORMAT(I3)                                                   GRP09260
  501 FORMAT(E15.6)                                                GRP09270
```

```
  502 FORMAT (5E14.6)                                                    GRPC9280
  519 FORMAT(1H1////27X22HHARMONICS OF AIR LOADS)                        GRP09290
  522 FORMAT(// 8HOSTATIONI3,5X5HA0 = F11.7//10X,1HA,14X,1HB,14X,1HC,13XGRPC9300
     1,3HPHI,11X,5HRATIO/ (5F15.7))                                      GRP09310
  585 FORMAT(1H )                                                        GRP09320
  808 FORMAT (1H019X44HSUBROUTINE PTONE CALLED MORE THAN  15  TIMES)     GRP09330
  901 FORMAT(42X35HHARMONIC ANALYSIS OF DIMENSIONAL CZ//27X66HCZ = A0+A1GRP09340
     1*COS(PSI)+B1*SIN(PSI)+A2*COS(2*PSI)+B2*SIN(2*PSI)+...../)          GRP09350
  951 FORMAT(19HOLIFT CURVE SLOPE (F6.2,38H) LESS THAN MINIMUM ACCEPTABLGRP09360
     1E VALUE (F4.2,1H)//67H STALL CRITERION HAS BEEN VIOLATED -- WILL GGRP09370
     2O TO NEXT CASE (IF ANY))                                           GRP09380
 1010 FORMAT (9H0CASE NO.I3)                                             GRPC9390
 1604 FORMAT(40H0TROUBLE WITH LAMBDA CONV. STATEMENT 225  2F10.6)        GRP09400
 5001 FORMAT(47H1END GENERALIZED ROTOR PERFORMANCE CALCULATIONS)         GRP09410
 8821 FORMAT(//,1X,'CL AND / OR CD LOOKUP PROBLEM WITH BLADE DATA')      GRPC9420
 8822 FORMAT(//,1X,'CL AND / OR CD LOOKUP PROBLEM WITH SPAR DATA')       GRP09430
 8823 FORMAT(82X, 17HNATURE OF PROBLEM /8X,4HALFA ,7X,8HMACH NO. ,8X,4HRGRP09440
     1EV. , 6X,7HSEGMENT ,12H  BLADE STA. ,6X,3HPSI ,10X,2HCL ,10X,2HCD GRP09450
     2/,1X,2F12.3,2I12,F12.4,I12,5X,I7,5X,I7,                            GRP09460
     3 //,'  1=NO PROBLEM, 2=LO MACH, 3=HI MACH, 4=LO ALPHA, 5=HI ALPHA')GRPC9470
       END                                                               GRP09480
       SUBROUTINE LOADED (UNPUT)                                         GRPC9490
       DIMENSION UNPUT(5),C(5)                                           GRP09500
       WRITE (6,2)                                                       GRPC9510
 2     FORMAT (1H1,18HINPUT CARD LISTING  //)                            GRPC9520
     6 READ(5,1) NNUM,NLOC,(C(I),I=1,5)                                  GRPC9530
     1 FORMAT(I2,I4,5F12.0,I6)                                           GRPC9540
       IF(NNUM.GT.5) NNUM=NNUM/10                                        GRP09550
       J=IABS(NNUM)                                                      GRP09560
       WRITE (6,3) NNUM,NLOC, (C(I),I=1,J)                               GRP09570
 3     FORMAT (1X,I2,I4,5F20.10)                                         GRP09580
       IF(NLOC.NE.0) LOC=NLOC                                            GRP09590
       DO 4 I=1,J                                                        GRP09600
       UNPUT(LOC)=C(I)                                                   GRPC9610
     4 LOC=LOC+1                                                         GRP09620
       IF(NNUM) 5,7,6                                                    GRP09630
     7 WRITE (6,8)                                                       GRP09640
   8   FORMAT(1H0, 52X,21HWORD COUNT IS MISSING)                         GRP09650
     5 RETURN                                                            GRP09660
       END                                                               GRP09670
C ***********************************************************************GRP09680
       SUBROUTINE BLIN4 (T,NB,NBD,M,K,Y,X,Z,L)                           GRP09690
       DIMENSION T(NBD,M,K)                                              GRP09700
       IF (Z-T(NB,1,2)) 10,5,5                                           GRP09710
     5 DO 1 J = 2,20                                                     GRPC9720
       IF (T(NB,J,2)-Z) 1,2,2                                            GRPC9730
     1 CONTINUE                                                          GRP09740
       GO TO 11                                                          GRPC9750
   2   UZ=T(NB,J,2)                                                      GRPC9760
```

```
      EZ=T(NB,J-1,2)                                                    GRPC9770
      N=T(NB,J,1)*2. +1.                                                GRP09780
      IF (X-T(NB,J,3)) 12,7,7                                           GRP09790
    7 DO 3 I = 5,N,2                                                    GRP09800
      IF (T(NB,J,I)-X) 3,4,4                                            GRP09810
    3 CONTINUE                                                          GRP09820
      GO TO 13                                                          GRPC9830
    4 UZUX=T(NB,J,I)                                                    GRP09840
      UZUY=T(NB,J,I+1)                                                  GRPC9850
      UZLX=T(NB,J,I-2)                                                  GRP09860
      UZLY=T(NB,J,I-1)                                                  GRP09870
      N=T(NB,J-1,1)*2. +1.                                              GRP09880
      IF (X-T(NB,J-1,3)) 12,9,9                                         GRPC9890
    9 DO 6 I = 5,N,2                                                    GRPC9900
      IF (T(NB,J-1,I)-X) 6,8,8                                          GRPC9910
    6 CONTINUE                                                          GRP09920
      GO TO 13                                                          GRPC9930
    8 EZUX=T(NB,J-1,I)                                                  GRPC9940
      EZUY=T(NB,J-1,I+1)                                                GRP09950
      EZLX=T(NB,J-1,I-2)                                                GRPC9960
      EZLY=T(NB,J-1,I-1)                                                GRP09970
      UY = (UZLY - UZUY) / (UZUX - UZLX) * (UZUX - X) + UZUY            GRPC9980
      EY = (EZLY - EZUY) / (EZUX - EZLX) * (EZUX - X) + EZUY            GRPC9990
      Y = (UY - EY) / (UZ - EZ) * (Z - EZ) + EY                         GRP10000
      L = 1                                                             GRP10010
      RETURN                                                            GRP10020
   10 L = 2                                                             GRP10030
      RETURN                                                            GRP10040
   11 L = 3                                                             GRP10050
      RETURN                                                            GRP10060
   12 L = 4                                                             GRP10070
      RETURN                                                            GRP10080
   13 L = 5                                                             GRP10090
      RETURN                                                            GRP10100
      END                                                               GRP10110
C ***************************************************************************GRP10120
      SUBROUTINE HARM(K,NH,Y,ALPHA,A0,A,B,C,PHI,RATIO,LL)               GRP10130
      DIMENSION A(1),B(1),C(1),PHI(1),RATIO(1),Y(1)                     GRP10140
      PI = 3.14159                                                      GRP10150
      NK = NH                                                           GRP10160
      IF (NH) 15,15,18                                                  GRP10170
   15 NH = K / 2                                                        GRP10180
   18 IF (NH - K / 2) 10,10,210                                         GRP10190
   10 LK = K / 2                                                        GRP10200
      M = LK * 2                                                        GRP10210
      IF (K - M) 60,30,60                                               GRP10220
   30 HAN = NH                                                          GRP10230
      CAP = K / 2                                                       GRP10240
      IF (HAN - CAP) 40,35,40                                           GRP10250
```

```
 35   NK = NH - 1                                                        GRP10260
40    K1 = K / 2                                                         GRP10270
      IF(NH.LT.K1) GO TO 60                                              GRP10280
      A(K1) = 0.0                                                        GRP10290
      B(K1) = 0.0                                                        GRP10300
      DO 50 I = 1,K                                                      GRP10310
50    A(K1) = A(K1) + ( - 1.0) ** (I - 1) * Y(I)                         GRP10320
      A(K1) = A(K1) / FLOAT(K)                                           GRP10330
60    A0 = 0.0                                                           GRP10340
      DO 70 N = 1,K                                                      GRP10350
70    A0 = A0 + Y(N)                                                     GRP10360
      A0 = A0 / FLOAT(K)                                                 GRP10370
      DO 90 J = 1,NK                                                     GRP10380
      A(J) = 0.0                                                         GRP10390
      B(J) = 0.0                                                         GRP10400
      DO 90 I = 1,K                                                      GRP10410
      PSI = 6.2831853 / FLOAT(K)                                         GRP10420
      T = FLOAT(J) * FLOAT(I - 1)                                        GRP10430
      A(J) = A(J) + Y(I) * COS(T * PSI)                                  GRP10440
90    B(J) = B(J) + Y(I) * SIN(T * PSI)                                  GRP10450
      DO 100 J = 1,NK                                                    GRP10460
      A(J) = A(J) * 2.0/ FLOAT(K)                                        GRP10470
100   B(J) = B(J) * 2.0/ FLOAT(K)                                        GRP10480
      DO 195 J = 1,NH                                                    GRP10490
      TT = FLOAT(J) * ALPHA / 57.295779                                  GRP10500
      APR    = A(J) * COS(TT) - B(J) * SIN(TT)                           GRP10510
      BPR    = A(J) * SIN(TT) + B(J) * COS(TT)                           GRP10520
      A(J) =-APR                                                         GRP10530
195   B(J) =-BPR                                                         GRP10540
      DO 110 J = 1,NH                                                    GRP10550
110   C(J) = SQRT(A(J) ** 2 + B(J) ** 2)                                 GRP10560
      G = C(1)                                                           GRP10570
      DO 140 J = 2,NH                                                    GRP10580
      IF (G - C(J)) 130,130,140                                          GRP10590
130   G = C(J)                                                           GRP10600
140   CONTINUE                                                           GRP10610
      DO 150 J = 1,NH                                                    GRP10620
      IF (G) 152,151,152                                                 GRP10630
 151  RATIO(J) = 9999999.9999999                                         GRP10640
      IF(C(J).EQ.0.)  RATIO(J) = 1.0                                     GRP10650
      GO TO 150                                                          GRP10660
152   RATIO(J) = C(J) / G                                                GRP10670
 150  CONTINUE                                                           GRP10680
      DO 180 J = 1,NH                                                    GRP10690
      IF (B(J).EQ.0.)  GO TO 190                                         GRP10700
      PN = A(J) / B(J)                                                   GRP10710
      PHI(J) = ATAN(PN)                                                  GRP10720
      IF (B(J)) 170,190,180                                              GRP10730
170   PHI(J) = PHI(J) + 3.14159265                                       GRP10740
```

```
      GO TO 180                                                         GRP10750
  190 PHI(J)  = SIGN(PI/2., A(J))                                       GRP10760
180   PHI(J)  = PHI(J) * 57.295779                                      GRP10770
200   LL = 1                                                            GRP10780
      RETURN                                                            GRP10790
210   LL = 2                                                            GRP10800
      RETURN                                                            GRP10810
      END                                                               GRP10820
```

LIST OF REFERENCES

1. NACA Report 487, An Aerodynamic Analysis of the Autogyro with a Comparison Between Calculated and Experimental Results by John B. Wheatley, 1937.

2. NACA Report 716, A Simplified Method of Determining the Characteristics of a Lifting Rotor in Forward Flight by F. J. Bailey, 1941.

3. United Aircraft Research Labortories Report R-0725-3, A Machine Method for Calculating Helicopter Rotor Performance Including Stall and Drag-Divergence Effects, by Nelson H. Kemp, 1956.

4. Gessow, A. and Myers, G. C., Aerodynamics of the Helicopter, Frederick Ungar Publishing Co., 1967.

5. Sikorsky Aircraft Report 50355, Generalized Rotor Performance Method, by W. H. Gerdee, September 1963.

6. Army Air Mobility Research and Development Laboratory Report TR-74-10A, Rotorcraft Flight Simulation with Aeroelastic Rotor and Improved Aerodyamic Representation, Volume I, Engineer's Manual, by John M. Davis, et al, Chapter 3, June 1974

7. Bramwell, A.R.S., Helicopter Dynamics, John Wiley and Sons, 1976.

INITIAL DISTRIBUTION LIST

		No. Copies
1.	Defense Documentation Center Cameron Station Alexandria, Virginia 22314	2
2.	Library, Code 0142 Naval Postgraduate School Monterey, California 93940	2
3.	Department Chairman, Code 67 Department of Aeronautics Naval Postgraduate School Monterey, California 93940	1
4.	Professor L.V. Schmidt, Code 67SX Department of Aeronautics Naval Postgraduate School Monterey, California 93940	1
5.	Professor M.F. Platzer, Code 67PL Department of Aeronautics Naval Postgraduate School Monterey, California 93940	1
6.	Commanding Officer Attn: Mr. George Unger, AIR-530132B Naval Air System Command Washington, D.C. 20361	2
7.	Lt James W. Loiselle, USN 2512 Granada Circle Spring Valley, California 92077	1

171678
Thesis
L79145 Loiselle
c.1 Generalized helicop-c
ter rotor performance
predictions.

171678
Thesis
L79145 Loiselle
c.1 Generalized helicop-
ter rotor performance
predictions.

thesL79145
Generalized helicopter rotor performance
3 2768 002 12617 9
DUDLEY KNOX LIBRARY